

# TemPower PRO

— *Compact ACB* —



 **TERASAKI ELECTRIC CO., LTD.**  
[www.terasaki.co.jp](http://www.terasaki.co.jp)

Catalogue No. '24-158E





# *Compact & User Friendly*

## **Contents**

1 . Product warranty .....	2
2 . Features .....	4
3 . Ratings .....	8
4 . Appearance .....	11
5 . Available as standard .....	12
6 . Specifications .....	13
1 Accessories for Draw-out Type .....	14
2 Types of Mounting .....	15
3 Spring Charged Operation .....	17
4 Accessories for Spring Charged Operation .....	19
5 Trip Devices .....	20
6 Over-current Releases .....	22
7 Other Accessories .....	49
8 Operation Environments .....	54
9 Busbars connection .....	55
10 Recommendation for Busbars connection .....	55
7 . Outline Dimensions .....	56
8 . Circuit Diagram .....	70
9 . Technical and Application Data .....	76
10. Order Forms .....	78

# 1 Product warranty

Please confirm the following product warranty before purchasing and using the product.

## 1. Warranty period and warranty coverage

If any failure found to be the responsibility of Terasaki Electric occurs during use of the product within the warranty period, the product shall be repaired at no cost via the sales representative or Terasaki Electric sales office. However, if repairs are required on-site at domestic or overseas locations, expenses to send an engineer will be charged.

### [Warranty period]

The warranty period of the product shall be for 12 months after the date of purchase or delivery to the designated place.

However, the maximum free warranty period is 18 months from the date of manufacture, with a maximum distribution period of 6 months after shipment.

The free-of-charge warranty period of the repaired product will not be extended beyond the free-of-charge warranty period before the repair.

### [Warranty coverage]

- 1) The primary failure diagnosis should be performed by users. However, if required by users, Terasaki Electric or Terasaki Electric Sales office may be able to perform the diagnosis.
- 2) The coverage shall be limited to ordinary use within the usage state, usage methods, usage environment, and other conditions which follow the instructions and precautions given in the instruction manual, user's manual, and caution labels on the product.
- 3) Even within the warranty period, repair cost shall be charged for the following cases.
  - ① Failure occurring from inappropriate storage or handling, carelessness or negligence by the user. Failure caused by selection of hardware or software design on the user side.
  - ② Failure caused by modifications, etc. to the product by the user without any approvals from Terasaki Electric.
  - ③ In case Terasaki Electric product is assembled into a user's device, failure that could have been avoided if functions or structures, judged as necessary in the legal safety measures the user's device is subject to or as necessary by industry standards, had been provided.
  - ④ Failure that could have been avoided if the maintenance described in the user's manual has been performed.
  - ⑤ Failure caused by external irresistible forces such as fires or abnormal voltages, and failure caused by natural disasters such as earthquakes, lightning, wind and water damages.
  - ⑥ Failure caused by reasons unpredictable based on scientific technology standards at the time of shipment from Terasaki Electric.
  - ⑦ Any other failure found not to be the responsibility of Terasaki Electric or that admitted not to be so by the user.

\*In addition, the warranty applies only to the product delivered. It does not apply to the any damage that is caused by the failure of the product.

## 2. Exclusion of loss in opportunity and secondary loss from warranty liability

Regardless of the warranty period, Terasaki Electric shall not be liable for compensation to:

- 1) Damages caused by any cause found not to be the responsibility of Terasaki Electric.
- 2) Loss in opportunity, lost profits incurred to the user by failures of Terasaki Electric product.
- 3) Damages whether foreseeable or not, secondary damages, compensation for accidents, and compensation for damages to products other than Terasaki Electric products, caused by exceptional situations.
- 4) Compensation for cost occurring secondarily from replacement work by the user, maintenance of on-site equipment and start-up test run and other operations.

## 3. Product applications

- 1) When using the products listed in this catalogue, the following conditions must be confirmed and obeyed.

The product must be used so that a failure that occurs to the product does not lead to a serious accident. When a damage or failure occurs, the external backup function or fail-safe function must be executed systematically.
- 2) The products listed in this catalogue are designed and manufactured as general-purpose products for application to the general industry field.

When considering the use of our products for special applications such as the following equipment and systems, please contact Terasaki Electric sales office to confirm the specifications.

- ① The use that has a significant influence on the public facilities such as nuclear power plants and other power plants of power companies.
- ② The use for railway companies, government offices, etc. that require to build the special quality assurance system.
- ③ The use for aerospace equipment, medical equipment, railway equipment, combustion and fuel equipment, passenger vehicles, manned transportation equipment, recreational equipment, safety equipment, and air conditioner for servers and the cooling facilities that are expected to have a significant influence on life, body, and property.



## 4. Safety Notices

Before installing, using, or servicing products, read these “Safety Notices” and familiarize yourself with all aspects of products, safety information and precautions.

### ■ Mounting Precautions

#### Caution

- Electrical work must be done by competent persons.
- Do not place the ACB in such an area that is subject to high temperatures, high humidity, dusty air, corrosive gasses, strong vibration and shock, or other unusual conditions. Mounting the ACB in such an area could cause a fire or malfunction.
- Be careful to prevent foreign objects (such as debris, concrete powder, dust, chippings, and iron powder) and oil or rain water from entering the ACB. These materials inside the ACB could cause a fire or malfunction.
- Prior to commencing any work on the ACB, upstream circuit breaker or the like to isolate all sources of power/voltage. Otherwise, electric shock may result.
- Fix the draw-out cradle of the ACB firmly on a flat, level surface using mounting screw. Otherwise, the draw-out operation may cause the breaker body or the draw-out cradle to fall, resulting in damage to the ACB or personal injury.
- For 4-pole CBs, be sure to connect a 3-phase, 4-wire neutral conductor to the N-phase pole (on the right end). Otherwise, an overcurrent may hinder the ACB from tripping, resulting in a fire.

### ■ Transportation Precaution

#### Danger



- Never stand under the ACB that has been lifted or suspended a lifter or lifting attachments. The weight of the ACB may cause serious injury.

### ■ Operation Precaution

#### Danger

- Never touch live terminal parts (main terminals or control terminals). Otherwise, electric shock may result.
- Do not leave the ACB body in the draw-out position. If the ACB body is accidentally dropped, its weight may cause serious injury.

### [Meaning of indication]

 <b>Danger</b>	A danger notices with this symbol indicates a potentially hazardous situation which, if not avoided, may result in death or serious injury.
 <b>Caution</b>	A caution notices with this symbol indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury and/or property damage.

## 5. Ordering information

Products and specifications appearing in this catalogue are subject to change (including discontinued sales) due to product improvements and other reasons, therefore contact us or your local dealer prior to using, considering or ordering the shown products to confirm that the information in this catalogue is the up-to-date.

# 2

## Features

— Designed for greater convenience and higher safety

### Even more compact

- Developed with the same external dimensions for the 630AF to 1600AF of draw-out type, making it even more compact than the previous product.

Now **48% in volume** and **49% in weight** compared to the previous product.  
Can be mounted in a switchboard compartment of 400mm width, height and depth.

Weight : 76kg



Previous product  
1600AF

**TemPower**

Weight : **37kg**



New product  
1600AF

**TemPower PRO**

### Even more convenient

- The direction of rear connection terminals (horizontal, vertical) can be changed by the customer.

Easy to change by simply removing two bolts and rotating by 90°.

\*In case of AX120S and AX120H, rear connection terminals can not be changed.



Horizontal terminals




Vertical terminals

## Even safer

### ● The mechanical reset facility that was as an option with the previous product is now supplied as standard.

The mechanical reset is an interlock function that prevents the ACB from being ON again if it has been tripped due to an over-current release, until the reset button is pressed after eliminating the cause.

The mechanical reset can be enabled simply by setting the mechanical reset setting dial on the front of the ACB to "MANUAL".

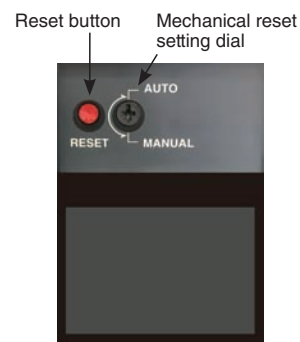

### ● New closing spring charge indicator display

The previous product only displayed the charge status of the closing spring, but TemPower PRO now also shows whether or not the ACB can be closed.

This provides a visual indication that the ACB is not in a ready to close state after the interlock or undervoltage trip device has been activated, a feature that was not available with the previous product.

State	Closing spring charge	Discharged	Charge	Charge
	ACB State	Not ready to close	Ready to close	Not ready to close
Indication (TemPower)		DISCHARGED	CHARGED	CHARGED
Indication (TemPower PRO)		ON <del>OK</del> DISCHARGED	CHARGED ON OK	CHARGED ON <del>OK</del>

### ● The safety functions below are from the previous product

#### ① No extra arc space required for clearance (For draw-out type)

Almost all arc energy is dissipated inside when tripping, so there is no need to include space for arc gases on the upper part.


#### ② Double shunt trip devices

Two continuously-rated shunt trip devices can be mounted, allowing backup trip operation to be built. This makes it suited to critical circuits where reliability is required.

### ● Can be used with reverse connections like the previous product. Power receiving and distribution from either top or bottom terminals.

### ● Quick connection terminals used for control circuit terminals

Eliminates the need to tighten screws with a screwdriver, making connection work much faster.  
(Available lead wire size : 0.6 – 2.5mm<sup>2</sup>,  
Finished OD : 3.3mm ø or less)

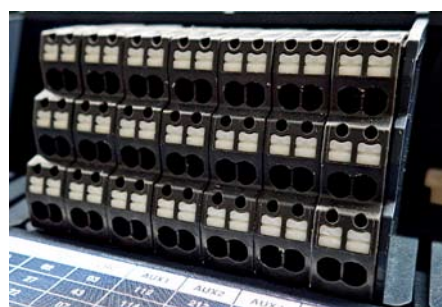



## Even more convenient

- Standard type and Smart type of Over-Current Release (OCR) are available depends on the application.




Standard type



Smart type

### [Standard type]

- ① Color display as standard. A range of information can be displayed with three types of display modes.
- ② Three types of general protection specifications are available, as well as a generator protection specification.
- ③ The long time-delay trip current settings can be configured in detail to suit the applicable load conditions.  
Current settings for the standard type long time-delay trip function are configured differently to previous methods, and uses a combination of two dial settings. This approach allows the applicable load conditions to be configured in more detail.

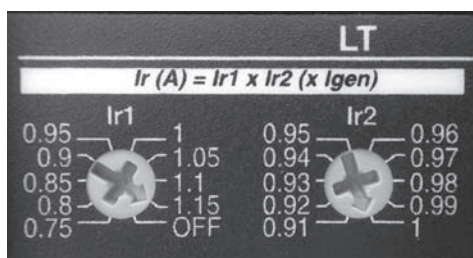

OCR Setting dials for generator protection

AOX-LI, AOX-LSI, AOX-LSIG..... $I_r = I_{r1} \times I_{r2} \times I_n$

		Setting value									
$I_{r1}$		0.4	0.5	0.6	0.7	0.8	0.9	0.95	1	OFF	
$I_{r2}$		0.91	0.92	0.93	0.94	0.95	0.96	0.97	0.98	0.99	1

AOX-LSIR..... $I_r = I_{r1} \times I_{r2} \times I_{gen}$

		Setting value									
$I_{r1}$		0.75	0.8	0.85	0.9	0.95	1	1.05	1.1	1.15	OFF
$I_{r2}$		0.91	0.92	0.93	0.94	0.95	0.96	0.97	0.98	0.99	1

### [Smart type]

- ① Includes a measurement function for circuit information, in addition to protection functions.  
This enables measurement of various items such as current, voltage, power, energy, power factor, frequency, total harmonic distortion, harmonic current, and harmonic voltage.
- ② Measurement accuracy has been significantly improved compared to the previous product, with reading accuracy that complies with the IEC61557-12 international standard.  
This ensures a high level of accuracy, with  $\pm 0.5\%$  for current and voltage measurements, and  $\pm 1\%$  for active power measurements.
- ③ Contact temperature monitoring is available as an optional function.  
The temperature can be set from 105°C to 155°C (in 10°C increments), and an alarm output is triggered when the contact temperature of the main circuit exceeds the set temperature.  
Combining this with communication functions also allows real-time monitoring of contact temperature.
- ④ A Dual settings mode is now available.  
Various combinations of protection setting values for long time-delay trips, short time-delay trips, instantaneous trips, and ground fault trips can be stored in two types of setting value groups, "Setting A" and "Setting B," which can be switched and used as required.

## ● Smart Type OCR has more extensibility

### TemView PRO

#### Remote display

Connecting the **TemView PRO** remote display with the **TemPower PRO** using the special cable and mounting it on the switchboard panel allows the smart type OCR measurement value to be checked using the panel.

\* Adaptor (Type: TVPAA) is necessary for the connection between remote display and smart type OCR. When ordering the remote display, be sure to order an adaptor as well.



### TemCom PRO

#### Communication module


Circuit information measured with smart type OCR can be transmitted remotely by using the **TemCom PRO** communication module, allowing a communication network that can be monitored and managed to be built. Two types of communication protocols are available: MODBUS RTU (type: APX-1R) and MODBUS TCP (type: APX-1T).

##### APX-1R

Protocol	Modbus RTU
Address	1 – 247 (Default setting value : 1)
Baud rate	4800/9600/19200/38400 bps (Default setting value : 19200 bps)
Parity	None/ Even / Odd (Default setting value : Even)
Stop bit	1bit (fixed)

##### APX-1T

Protocol	Modbus TCP
DPHC settings	OFF/ON (Default setting value : ON)
IP address settings	0.0.0.0 – 255.255.255.255 (Default setting value : 172.16.1.1)
Subnet mask settings	0.0.0.0 – 255.255.255.255 (Default setting value : 255.255.255.0)
Electrostatic gateway settings	0.0.0.0 – 255.255.255.255 (Default setting value : 0.0.0.0)

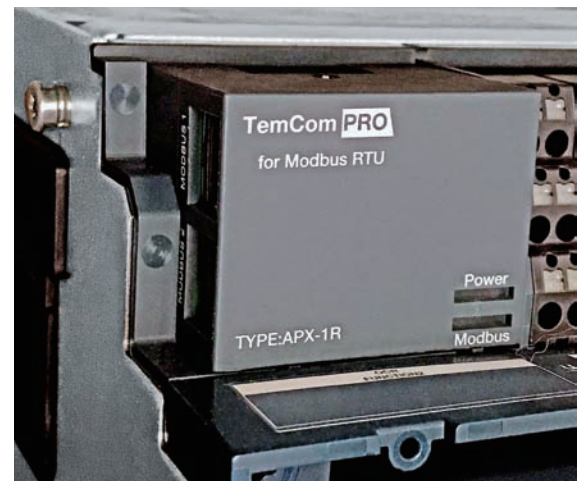

#### Built-in battery

Backup power supply available in the event that control power is lost.



This ensures that the following functions remain available even if control power is not being supplied.

- 1) Clock function
- 2) Accident screen displayed if accident occurs



Built-in battery

# 3 Ratings

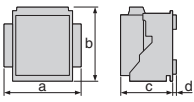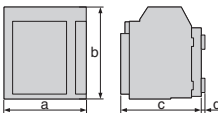Series	
Ampere rating (A)	
<b>Type</b>	
Rated current (max) [ $I_n$ ] (A)	JIS④, IEC⑤, EN⑥, AS/NZS⑦ ①② Marine
Neutral pole amperes frame (A)	
Number of poles ③	
Rated primary current of over-current release [ $I_n$ ](A)	
• LI, LSI, LSIg, LSI+, LSIg+ specifications ⑩	
Rated primary current of over-current release [ $I_{gen}$ ](A)	
• LSIR specifications ⑩	
$I_{gen}$ is rated current of generator.	
AC Rated insulation voltage [ $U_i$ ] (V. 50/60Hz)	
Rated operational voltage [ $U_e$ ] (V. 50/60Hz)	
<b>■ AC Rated breaking cap. [kA sym rms] / Making cap. [kA peak]</b>	
JIS④, IEC, EN, AS	AC 690V ⑧
$I_{cu}$ (kA)	500V ⑧
	440V
	415V
NK	AC 690V
	450V
LR, AB, BV	AC 690V
	450V
JIS④, IEC, EN, AS	AC 690V ⑧
$I_{cs}$ (kA)	500V ⑧
	440V
	415V
NK	AC 690V
	450V
LR, AB, BV	AC 690V
	450V
Reverse Rated connected	
Rated impulse withstand voltage [ $U_{imp}$ ] (kV) (Main circuit)	
Rated short time withstand current	1s
$I_{CW}$ [kA rms.]	3s
Rated latching current (kA)	
Total breaking time (s)	
<b>■ Closing operation time</b>	
Spring charging time (s) max.	
Closing time (s) max.	
<b>■ No. of operating cycles ⑨</b>	
Mechanical life	
Electrical life	440V AC
	690V AC
Weight (kg) for draw-out type	
<b>■ Outline dimensions (mm) (For vertical terminals and horizontal terminals.)</b>	
Fixed type	
	a
	b
	c
	d
Draw-out type	
	a
	b
	c
	d

Standard	Standard	Standard	Standard	Standard
630	800	1000	1250	1600
<b>AX106S</b>	<b>AX108S</b>	<b>AX110S</b>	<b>AX112S</b>	<b>AX116S</b>
630	800	1000	1250	1600
630	800	1000	1250	1600
630	800	1000	1250	1600
3 4	3 4	3 4	3 4	3 4
400	800	1000	1250	1600
630				
$240 \leq I_{gen} \leq 400$	$480 \leq I_{gen} \leq 800$	$600 \leq I_{gen} \leq 1000$	$750 \leq I_{gen} \leq 1250$	$960 \leq I_{gen} \leq 1600$
$400 < I_{gen} \leq 630$				
1000	1000	1000	1000	1000
690	690	690	690	690
42/88.2	42/88.2	42/88.2	42/88.2	42/88.2
42/88.2	42/88.2	42/88.2	42/88.2	42/88.2
50/105	50/105	50/105	50/105	50/105
50/105	50/105	50/105	50/105	50/105
42/91.3	42/91.3	42/91.3	42/91.3	42/91.3
50/112	50/112	50/112	50/112	50/112
42/91.3	42/91.3	42/91.3	42/91.3	42/91.3
50/112	50/112	50/112	50/112	50/112
42/88.2	42/88.2	42/88.2	42/88.2	42/88.2
42/88.2	42/88.2	42/88.2	42/88.2	42/88.2
50/105	50/105	50/105	50/105	50/105
50/105	50/105	50/105	50/105	50/105
42/91.3	42/91.3	42/91.3	42/91.3	42/91.3
50/112	50/112	50/112	50/112	50/112
42/91.3	42/91.3	42/91.3	42/91.3	42/91.3
50/112	50/112	50/112	50/112	50/112
Yes	Yes	Yes	Yes	Yes
12	12	12	12	12
50	50	50	50	50
24	24	24	24	24
36	36	36	36	36
0.08	0.08	0.08	0.08	0.08
8	8	8	8	8
0.08	0.08	0.08	0.08	0.08
15000	15000	15000	15000	15000
8000	8000	8000	8000	8000
8000	8000	8000	8000	8000
37 45	37 45	37 45	37 45	37 45
276 346	276 346	276 346	276 346	276 346
312.5	312.5	312.5	312.5	312.5
197.5	197.5	197.5	197.5	197.5
42.5	42.5	42.5	42.5	42.5
288 358	288 358	288 358	288 358	288 358
322	322	322	322	322
291	291	291	291	291
49	49	49	49	49

① : Values in open air at 40°C (45°C for marine applications)

② : For vertical terminals.

③ : 4poles ACBs without Neutral phases protection can not apply IT earthing system.

④ : Comply with JIS C 8201-2-1 Ann.1 Ann.2.

⑤ : Comply with IEC60947-2.

⑥ : Comply with EN60947-2.

⑦ : Comply with AS/NZS IEC60947-2.

⑧ : Contact TERASAKI for the details about the application for IT system with special specification.

⑨ : Expected service life based on endurance test. The service life of ACB depends on the working and environmental conditions.

⑩ : For OCR specifications, please refer to pages P.22 to P.46.



⑪ : AX120S and AX120H only have Fixed type.



Standard	High fault		High fault		High fault		High fault		High fault		High fault	
2000	630		800		1000		1250		1600		2000	
<b>AX120S</b>	<b>AX106H</b>		<b>AX108H</b>		<b>AX110H</b>		<b>AX112H</b>		<b>AX116H</b>		<b>AX120H</b>	
2000	630		800		1000		1250		1600		2000	
—	630		800		1000		1250		1600		—	
2000	630		800		1000		1250		1600		2000	
3 4	3 4		3 4		3 4		3 4		3 4		3 4	
2000	400		800		1000		1250		1600		2000	
—	630		—		—		—		—		—	
—	$240 \leq I_{\text{gen}} \leq 400$ $400 < I_{\text{gen}} \leq 630$		$480 \leq I_{\text{gen}} \leq 800$		$600 \leq I_{\text{gen}} \leq 1000$		$750 \leq I_{\text{gen}} \leq 1250$		$960 \leq I_{\text{gen}} \leq 1600$		—	
1000	1000		1000		1000		1000		1000		1000	
690	690		690		690		690		690		690	
42/88.2	42/88.2		42/88.2		42/88.2		42/88.2		42/88.2		42/88.2	
42/88.2	42/88.2		42/88.2		42/88.2		42/88.2		42/88.2		42/88.2	
50/105	66/145.2		66/145.2		66/145.2		66/145.2		66/145.2		66/145.2	
50/105	66/145.2		66/145.2		66/145.2		66/145.2		66/145.2		66/145.2	
—	42/91.3		42/91.3		42/91.3		42/91.3		42/91.3		—	
—	66/160		66/160		66/160		66/160		66/160		—	
—	42/91.3		42/91.3		42/91.3		42/91.3		42/91.3		—	
—	66/160		66/160		66/160		66/160		66/160		—	
42/88.2	42/88.2		42/88.2		42/88.2		42/88.2		42/88.2		42/88.2	
42/88.2	42/88.2		42/88.2		42/88.2		42/88.2		42/88.2		42/88.2	
50/105	55/121		55/121		55/121		55/121		55/121		55/121	
50/105	55/121		55/121		55/121		55/121		55/121		55/121	
—	42/91.3		42/91.3		42/91.3		42/91.3		42/91.3		—	
—	55/120		55/120		55/120		55/120		55/120		—	
—	42/91.3		42/91.3		42/91.3		42/91.3		42/91.3		—	
—	55/120		55/120		55/120		55/120		55/120		—	
Yes	Yes		Yes		Yes		Yes		Yes		Yes	
12	12		12		12		12		12		12	
50	55		55		55		55		55		55	
24	30		30		30		30		30		30	
36	36		36		36		36		36		36	
0.08	0.08		0.08		0.08		0.08		0.08		0.08	
8	8		8		8		8		8		8	
0.08	0.08		0.08		0.08		0.08		0.08		0.08	
15000	15000		15000		15000		15000		15000		15000	
4000	8000		8000		8000		8000		8000		4000	
4000	8000		8000		8000		8000		8000		4000	
18 11 22 11	37 45		37 45		37 45		37 45		37 45		18 11 22 11	
276 346	276 346		276 346		276 346		276 346		276 346		276 346	
312.5	312.5		312.5		312.5		312.5		312.5		312.5	
197.5	197.5		197.5		197.5		197.5		197.5		197.5	
81.5	42.5		42.5		42.5		42.5		42.5		81.5	
—	288 358		288 358		288 358		288 358		288 358		—	
—	322		322		322		322		322		—	
—	291		291		291		291		291		—	
—	49		49		49		49		49		—	

# 3 Ratings

## Switch-disconnectors

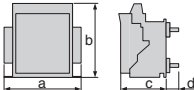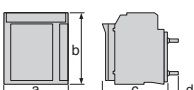Ampere rating (A)	
<b>Type</b>	
Rated current (max) [ $I_e$ ] (A)	JIS③, IEC④, EN⑤, AS/NZS⑥
①②	Marine
Neutral pole amperes frame (A)	
Number of poles	
AC Rated insulation voltage [ $U_i$ ] (V. 50/60Hz)	
Rated operational voltage [ $U_e$ ] (V. 50/60Hz)	
Utilization category JIS C 8201-3 IEC60947-3	
Rated impulse withstand voltage [ $U_{imp}$ ] (kV) (Main circuit)	
Rated short circuit making capacity	AC 690V
[ $I_{cm}$ ] (kA peak)	440V
Rated short time withstand current	AC 690V 1s
[ $I_{CW}$ ] (kA rms.)	440V 1s
Reverse connected	
<b>■ Closing operation time</b>	
Spring charging time (s) max.	
Closing time (s) max.	
<b>■ No. of operating cycles ⑥</b>	
Mechanical life without maintenance	
Electrical life without maintenance	
	440V AC
	690V AC
Weight (kg) for draw-out type	
<b>■ Outline dimensions (mm) (For vertical terminals and horizontal terminals.)</b>	
Fixed type	
	a
	b
	c
	d
Draw-out type	
	a
	b
	c
	d

630	800	1000	1250	1600
<b>AX106D</b>	<b>AX108D</b>	<b>AX110D</b>	<b>AX112D</b>	<b>AX116D</b>
630	800	1000	1250	1600
630	800	1000	1250	1600
630	800	1000	1250	1600
3	4	3	4	3
1000	1000	1000	1000	1000
690	690	690	690	690
440	440	440	440	440
AC-23	AC-23	AC-23	AC-23	AC-23
12	12	12	12	12
88	88	88	88	88
121	121	121	121	121
42	42	42	42	42
55	55	55	55	55
Yes	Yes	Yes	Yes	Yes
8	8	8	8	8
0.08	0.08	0.08	0.08	0.08
15000	15000	15000	15000	15000
8000	8000	8000	8000	8000
8000	8000	8000	8000	8000
37	45	37	45	37
276	346	276	346	276
312.5	312.5	312.5	312.5	312.5
197.5	197.5	197.5	197.5	197.5
42.5	42.5	42.5	42.5	42.5
288	358	288	358	288
322	322	322	322	322
291	291	291	291	291
49	49	49	49	49

① : Values in open air at 40°C (45°C for marine applications)

② : For vertical terminals.

③ : Comply with JIS C 8201-3.


④ : Comply with IEC60947-3.

⑤ : Comply with EN60947-3.

⑥ : Comply with AS/NZS IEC60947-3

⑦ : Expected service life based on endurance test. The service life of ACB depends on the working and environmental conditions.

## Appearance (For draw-out type)

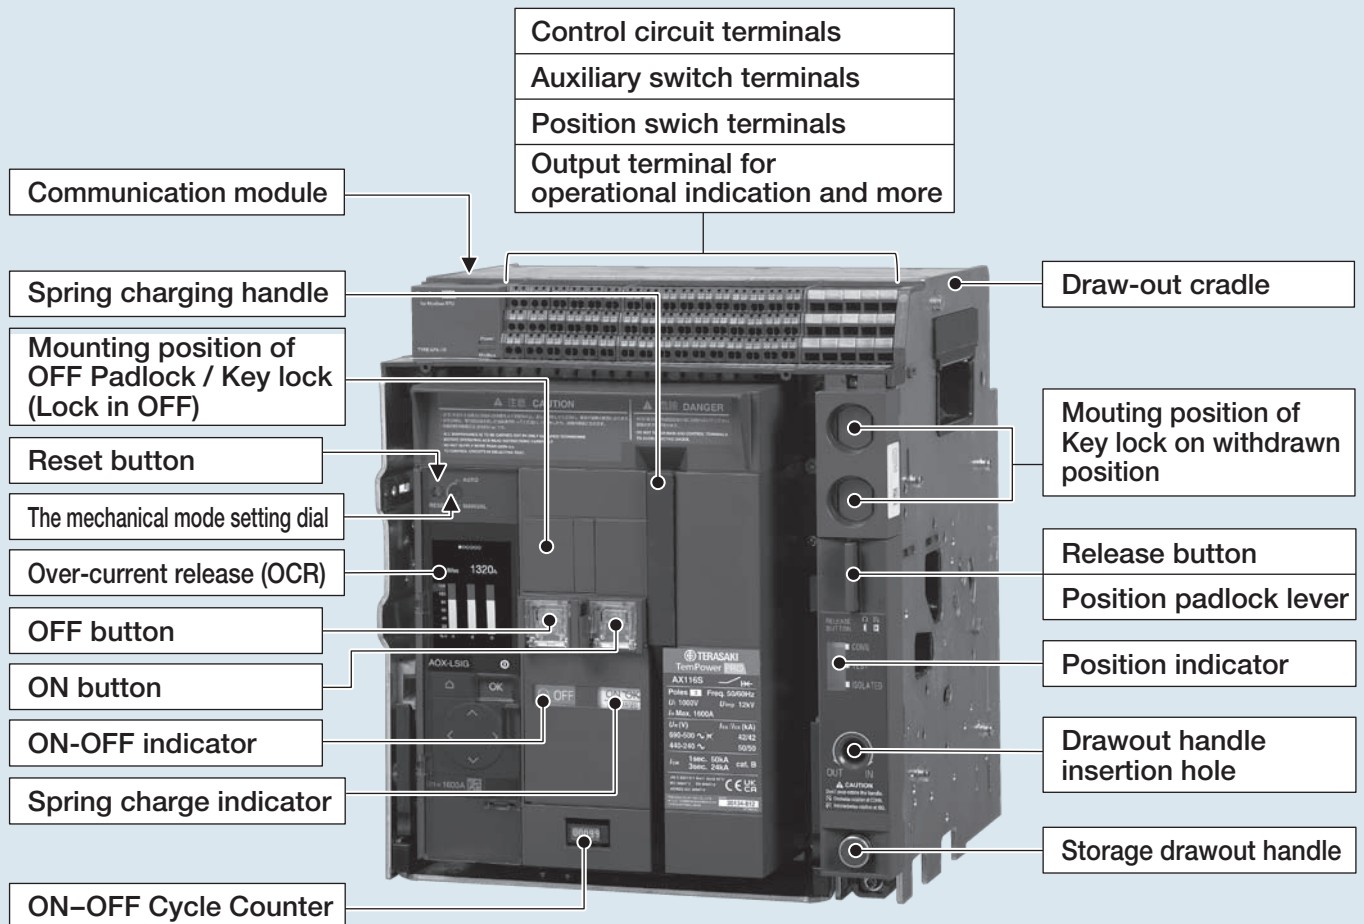



# 5 Available as standard

## ON-OFF button cover

An ON-OFF button cover prevents inadvertent or unauthorized operation of the ON or OFF button.

It can be locked with one padlock (with ø6 hasp)

Note : The padlock is not supplied.



## Spring charge indicator

This switch can be used to indicate that the closing springs have been fully charged. \*This accessory is included in the motor charging type. Manual charging type is not equipped this accessory.

### Ratings of Spring charge indicator

	Groups	Voltage (V)	Current (A)
Utilization category AC-12/DC-12 ①	Standard	AC 250 ②	16.0
		DC 250 ③	5.0

① : Based on IEC60947-5-1.

② : Applies when operation power supply is alternating current. (For details, please refer to P. 18.)

③ : Applies when operation power supply is direct current. (For details, please refer to P. 18.)

## Position padlock lever

Using the position padlock lever prevents the breaker body from inadvertently being drawn out. The release button in the pulled-out position locks the breaker body in the CONNECTED, TEST, or ISOLATED position. Use padlocks with a ø6 hasp. Up to three padlocks (with ø6 hasp) can be installed.



## Auxiliary switches 4c

Auxiliary switches indicates the “ON” and “OFF” status of ACB electrically. The auxiliary switches for draw-out type ACBs operate in the “CONNECTED” position and “TEST” position.

\* This accessory can not be used with Auxiliary switches 7c.

\* The connection of Auxiliary switch 4c is disconnected in the process that the breaker body is withdrawn from “TEST” position to “ISOLATED” position.


### Ratings of auxiliary switch 4c

	Groups	Voltage (V)	Current (A)	Min. applicable load
Utilization category AC-12/DC-12 ①	Standard	AC	100–380	24V 100mA
			381–480	
			481–690	
		DC	24	
			48	
			125	
	For microload	AC	250	15V 2mA
			100–380	
			381–480	
		DC	481–690	
			24	
			48	
			125	
			250	

① : Based on IEC60947-5-1.

② : Chattering due to ON-OFF operation of the ACB lasts for less than 30 ms. (There is some fluctuation depend on the ON-OFF cycles of ACB) Take note when applying to circuits.

③ : Do not connect an auxiliary switch to the Latch release coil (LRC), continuously-rated shunt trip device and continuously-rated shunt trip 2 circuits. Doing so may cause failure.

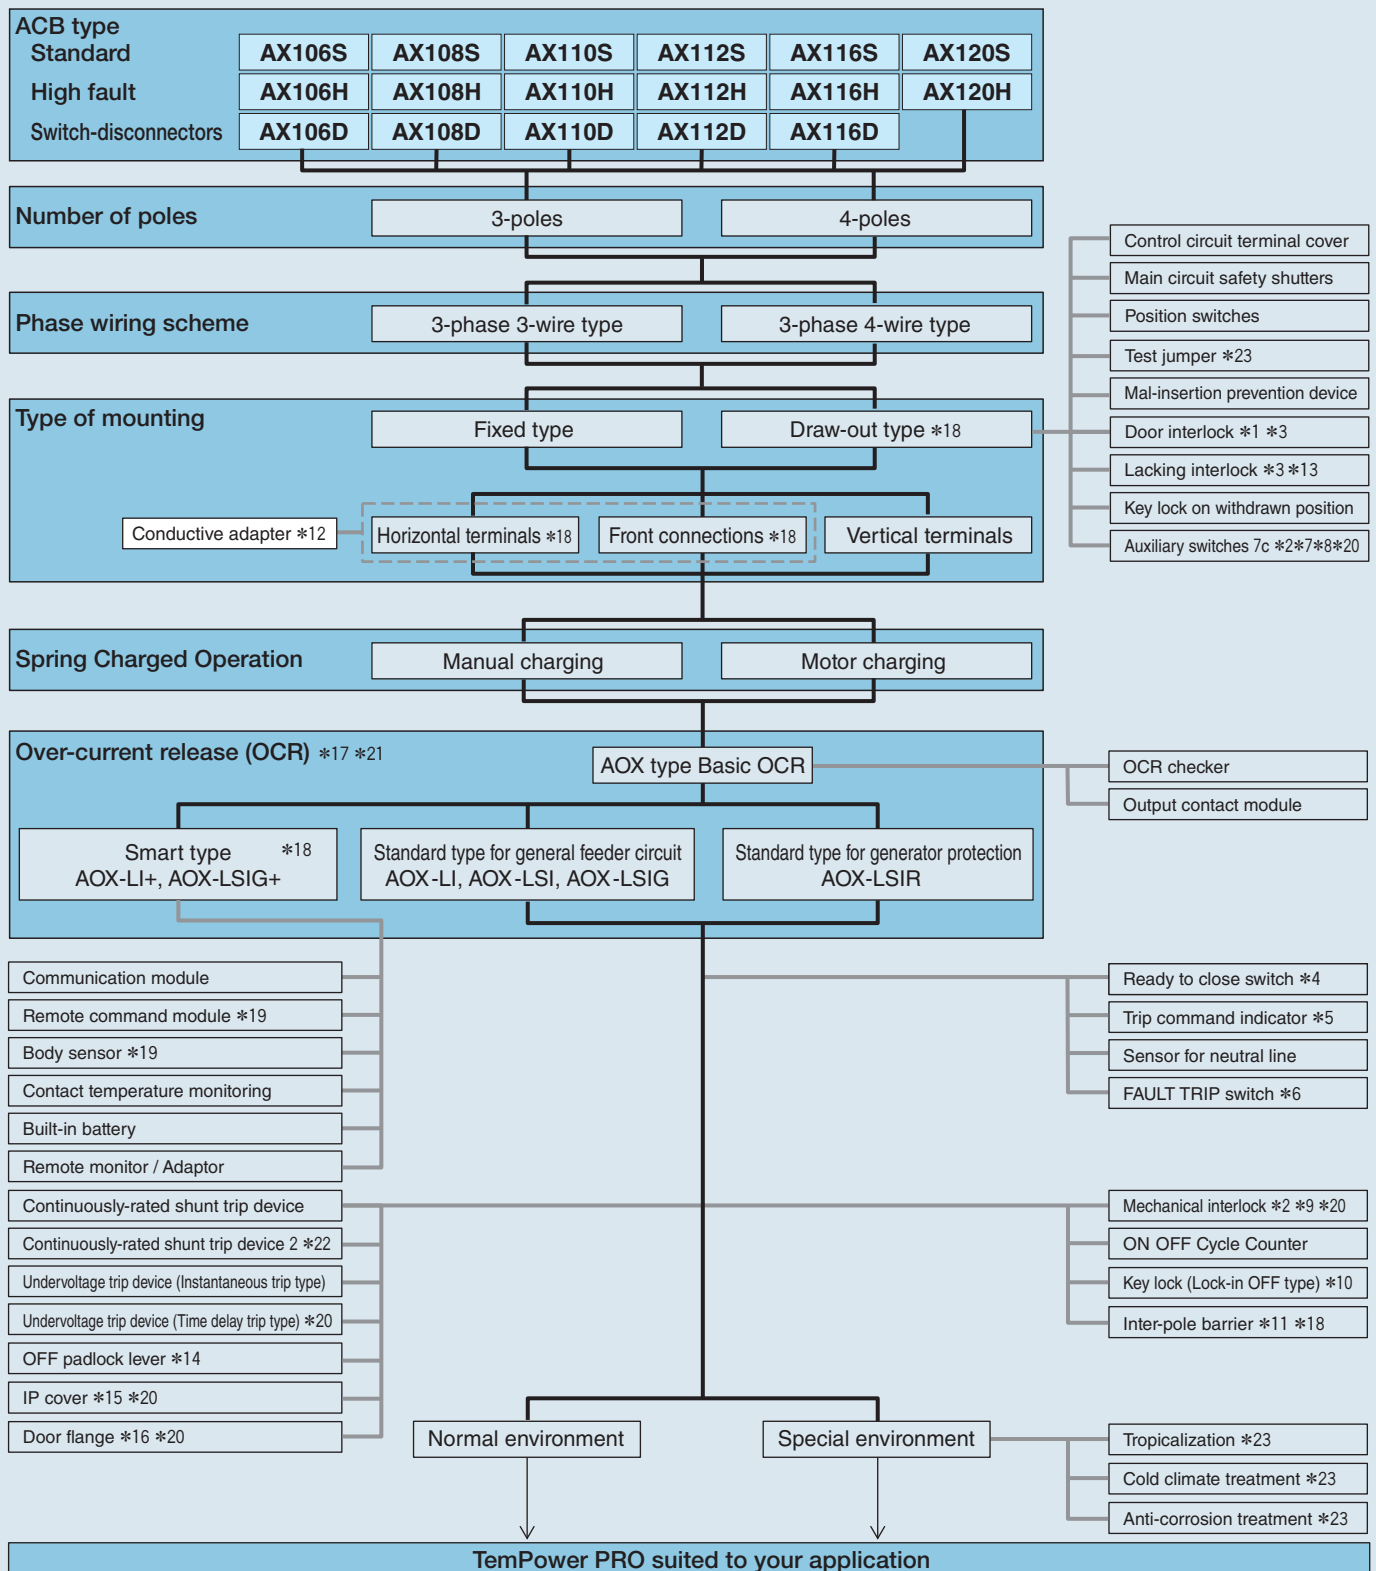


\*1 : Contact TERASAKI to use in combination with a door flange, IP cover, auxiliary switch 7c, undervoltage trip device (Time delay trip type), or mechanical interlock.  
 \*2 : Contact TERASAKI to use in combination with a lacking interlock.  
 \*3 : When using a door interlock, a lacking interlock is available as standard.  
 \*4 : Cannot be fitted with Trip command indicator or FAULT TRIP switch2.  
 \*5 : Cannot be fitted with Ready to close switch or FAULT TRIP switch2.  
 \*6 : Two switches can be mounted (FAULT TRIP switch, FAULT TRIP switch2). FAULT TRIP switch2 cannot be fitted with Ready to close switch or Trip command indicator.  
 \*7 : Cannot be fitted with mechanical interlock or auxiliary switch 4c.  
 \*8 : Tripping mechanism differs from auxiliary switch 4c. For details, please refer to P.49.  
 \*9 : Cannot be fitted with auxiliary switch 7c.  
 \*10 : Cannot be fitted with OFF padlock.  
 \*11 : Cannot be fitted with Draw-out type front connection specifications or conductive adapter.

\*12 : Cannot be fitted with Inter-pole barrier.  
 \*13 : Contact TERASAKI to use in combination with a mechanical interlock or auxiliary switch 7c.  
 \*14 : Cannot be fitted with Key lock (Lock in OFF).  
 \*15 : Cannot be fitted with door flange.  
 \*16 : Cannot be fitted IP cover.  
 \*17 : For over-current release (OCR) specifications, please refer to P.22 to P.46.  
 \*18 : Cannot be used for AX120S and AX120H.  
 \*19 : To use these specifications, always also use a communication module.  
 \*20 : Contact TERASAKI to use in combination with a door interlock.  
 \*21 : Cannot be used for switch disconnectors.  
 \*22 : Can not be fitted with Undervoltage trip devices.  
 \*23 : Coming soon.

# 6 Specifications

## Control circuit terminals

Quick connection terminals have been used. Cable connection work is simple, with a small flathead screwdriver, the only tool that is required.

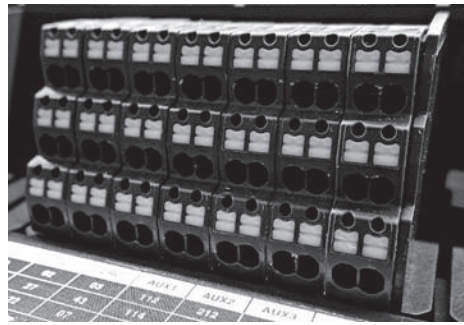

## 1 Accessories for Draw-out Type

### Main circuit safety shutters

The main circuit safety shutters automatically conceal the main circuit contacts on the draw-out cradle when the ACB is drawn out.

- The line side and load side shutters operate independently, and can be separately padlocked in the closed position for safety.
- Each line side and load side can be locked with up to three padlocks (with  $\phi 6$  hasp).

### Mal-insertion prevention device

Interchangeability exists within the TemPower PRO series of ACBs. This is the device to avoid that a different specification of ACB is placed into the Drawout cradle. This device is capable of distinguishing ten different breaker bodies.

### Test jumper Coming soon

Used to conduct an electrical switching test with the ACB outside of the draw-out cradle. The jumper is connected with a connector of standard length 5 m.

### Key lock on withdrawn position

Locking device that prevents ACBs from inadvertently being drawn out. Allows units to be locked in the CONNECTED, TEST or ISOLATED positions. Up to two keys can be installed, and can be selected from five types: Cylinder, Ronis, Proflux, Kirk, or KLS.





### Body sensor

Outputs the ACB's withdrawn position (TEST, CONNECTED) to Over-Current Release (OCR). Using this together with a communication module allows the withdrawn position of the ACB to be checked remotely. \*Cannot be used for modules mounted with standard type over-current releases.

### Door interlock

The door interlock prevents the switchboard door from being opened unless the breaker body is in the ISOLATED position. To use this, install it with the following panel cutout dimensions.

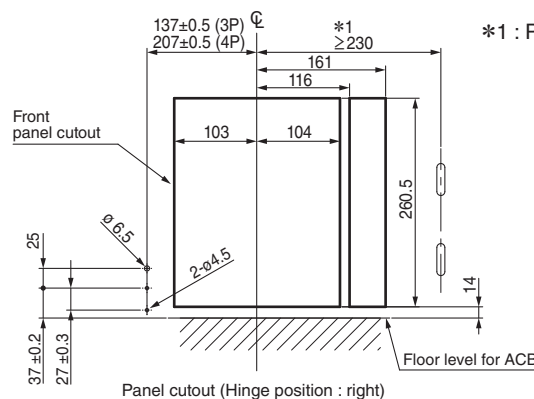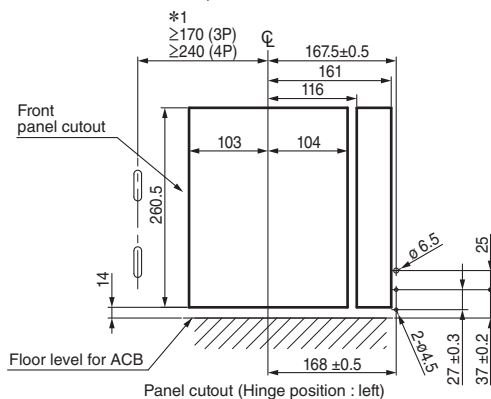

\*1 : Panel hinge position

\*1 : When using a door interlock, a lacking interlock is available as standard.

\*2 : Specify the hinge position of distribution board door (right side or left side) when placing an order.

\*3 : Contact TERASAKI to use in combination with a door flange, IP cover, auxiliary switch 7c, undervoltage trip device (Time delay trip type), or mechanical interlock.




## 2 Types of Mounting

### Draw-out type


Maintenance and inspection are easy. Consists of a breaker body and a draw-out cradle, where the drawout cradle is fixed in the switchboard and only the breaker body can be drawn out or removed. There are four breaker body positions: CONNECTED, TEST, ISOLATED, and WITHDRAWN.

#### 1 CONNECTED position

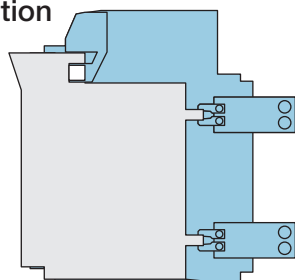

Both the main and control circuits are connected for normal service.


#### 2 TEST position

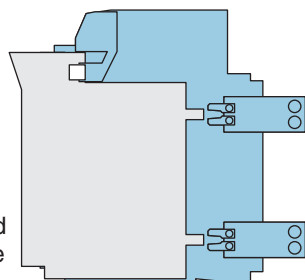

The main circuit is isolated and the control circuits are connected.


This position permits operation tests without the need for opening the switchboard panel door.

#### 3 ISOLATED position

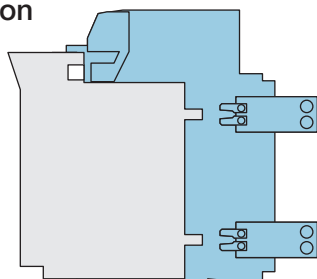

Both the main and control circuits are isolated.

#### 4 WITHDRAWN position

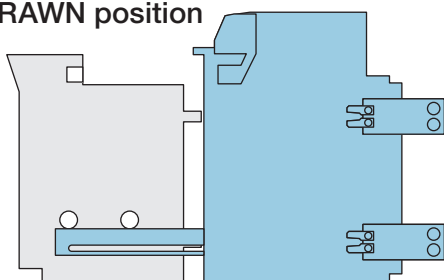

The breaker body is fully withdrawn from the draw-out cradle.

### Fixed type

This type of ACB has no draw-out cradle and is designed to be directly mounted in the switchboard.


### Terminal arrangements

#### ■ Main circuit terminals


The design of boards is simple.

Three types of connection methods are available (vertical terminals, horizontal terminals, and front connections). The vertical terminals and horizontal terminals can be changed from vertical to horizontal and from horizontal to vertical, by simply removing two bolts. Different types of terminal arrangements can be specified for the line and load sides. (AX120S and AX120H only have vertical terminals).


#### Vertical terminals

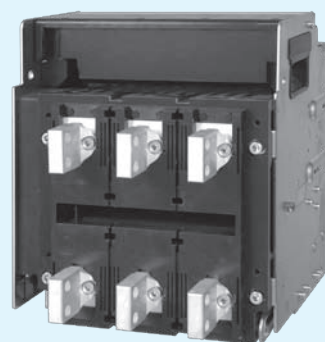

#### Horizontal terminals

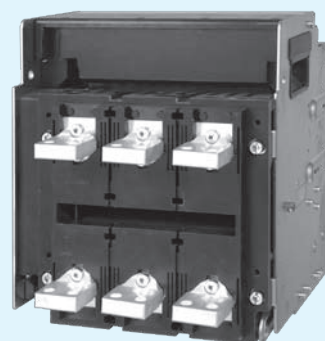

#### Front connections

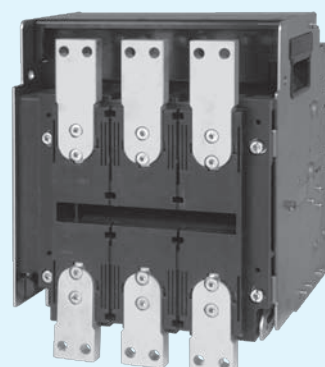

# 6 Specifications

## Position switches

The position switch operates to give an indication of the breaker position: CONNECTED, TEST, ISOLATED. Switches are available in contact arrangements from 1c to 5c.

■ Select the type from the following table when ordering.

### Standard

Type	Number of contacts	Contact arrangement		
		ISOLATED	TEST	CONN
ALX-212PB	5c	2	1	2
ALX-211PB	4c	2	1	1
ALX-210PB	3c	2	1	0
ALX-202PB	4c	2	0	2
ALX-201PB	3c	2	0	1
ALX-200PB	2c	2	0	0
ALX-112PB	4c	1	1	2
ALX-111PB	3c	1	1	1
ALX-110PB	2c	1	1	0
ALX-102PB	3c	1	0	2
ALX-101PB	2c	1	0	1
ALX-100PB	1c	1	0	0
ALX-012PB	3c	0	1	2
ALX-011PB	2c	0	1	1
ALX-010PB	1c	0	1	0
ALX-002PB	2c	0	0	2
ALX-001PB	1c	0	0	1

### For microload


Type	Number of contacts	Contact arrangement		
		ISOLATED	TEST	CONN
ALX-212PA	5c	2	1	2
ALX-211PA	4c	2	1	1
ALX-210PA	3c	2	1	0
ALX-202PA	4c	2	0	2
ALX-201PA	3c	2	0	1
ALX-200PA	2c	2	0	0
ALX-112PA	4c	1	1	2
ALX-111PA	3c	1	1	1
ALX-110PA	2c	1	1	0
ALX-102PA	3c	1	0	2
ALX-101PA	2c	1	0	1
ALX-100PA	1c	1	0	0
ALX-012PA	3c	0	1	2
ALX-011PA	2c	0	1	1
ALX-010PA	1c	0	1	0
ALX-002PA	2c	0	0	2
ALX-001PA	1c	0	0	1

## Ratings of Position switch

	Groups	Voltage (V)		Current (A)	Minimum applicable load
Utilization category AC-12/DC-12 ①	Standard	AC	100–380	8.0	24V 100mA
			381–480	8.0	
			481–690	6.0	
		DC	24	2.5	
			48	2.5	
			125	0.8	
			250	0.3	
	For microload	AC	100–380	5.0	15V 2mA
			381–480	5.0	
			481–690	5.0	
		DC	24	5.0	
			48	5.0	
			125	0.8	
			250	0.3	

① : Based on IEC60947-5-1.

## Position switch operation sequence

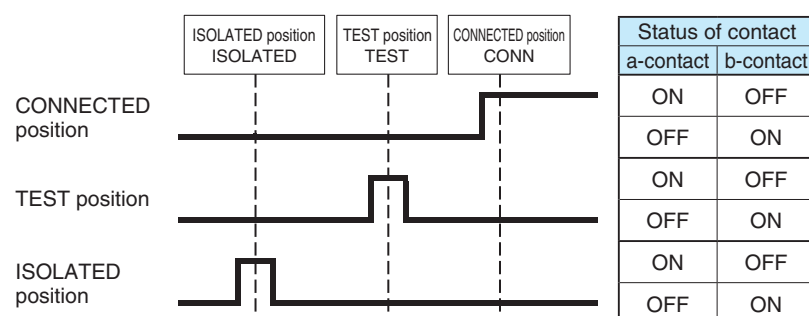

## 3 Spring Charged Operation

### Manual charging type

For this type of ACB, the closing springs are charged by means of the spring charging handle. ON/OFF operation of the ACB is performed by means of ON/OFF buttons on the ACB.

#### ■ Charging the closing springs

Pumping the spring charging handle by hand to charges the closing springs.

#### ■ Closing the ACB

Pressing the ON button on the front of ACB to close the ACB.

#### ■ Opening the ACB

Pressing the OFF button on the front of ACB to open the ACB.

The ACB cannot be closed as long as the OFF button is pressed.

### Motor charging type

For this type of ACB, the closing springs are charged automatically by means of a motor. ON/OFF operation of the ACB can be performed remotely.

#### ■ Charging the closing springs

A motor is used to charge the closing springs automatically.

When the closing springs are released to close the ACB, they are automatically charged again by the motor for the next ON operation.

#### ■ Closing the ACB

Closing the “remote” ON switch activates the Latch Release Coil (LRC).

(For details please refer to P. 18)

#### ■ Opening the ACB

For opening the ACB remotely, specify the continuously-rated shunt trip device.

(For details please refer to P.20)

# 6 Specifications

## ■ Operation power supply

Rated voltage (V)	Applicable voltage range for ON/CHARGE operation (V)	Ratings of operation power supply ①	
		Motor inrush current (peak) (A)	Motor steady-state current (A)
AC 24	20.4 – 26.4	27.9	7.7
AC 48	40.8 – 52.8	22.4	3.5
AC 100 – 130	85 – 143	10.6	1.6
AC 200 – 250	170 – 275	5.6	0.7
AC 380 – 400	323 – 440	3.0	0.4
AC 415 – 450	352.8 – 495	2.5	0.4
DC 24	18 – 26.4	21.3	6.4
DC 48	36 – 52.8	17.6	3.6
DC 100 – 130	75 – 143	8.1	1.4
DC 200 – 250	150 – 275	4.5	0.7

① : May vary slightly depending on control voltage or other conditions.

## ■ Ratings of Latch Release Coil (LRC)

Rated voltage (V)	Applicable operational voltage (V)	Coil Excitation Current ①		Power Consumption (VA) ①		Max. Closing time ①,③ (ms)
		Inrush current (A)	Holding current (mA)	Steady-state	Closing command ②	
AC/DC 24 – 30	AC 20.4 – 33	12	150	5 or less	200 or less	80
	DC 18 – 33					
AC/DC 48 – 60	AC 40.8 – 66	6	80			
	DC 26 – 66					
AC/DC 100 – 130	AC 85 – 143	4	40			
	DC 75 – 143					
AC/DC 200 – 250	AC 170 – 275	2	20			
	DC 150 – 275					
AC 380 – 480	AC 323 – 528	1	10			

① : May vary slightly depending on control voltage or other conditions.

② : RMS during 200ms from the moment of excitation.

③ : There is some variation in the closing time depend on the connection method.  
For the details, please refer to P.70 to P.75.



## 4 Accessories for Spring Charged Operation

### Ready to close switch

Switch that provides an electrical indication that the ACB is in a ready to close status.

This switch is activated when the following conditions are met.

- ON/OFF indicator is showing OFF. (ACB is in OFF status)
- Closing spring charge indicator is showing “CHARGED ON OK”.
- Undervoltage trip device is energised.
- Continuously-rated shunt trip device is not energised.
- Circuit breaker is in the CONNECTED position or the TEST position.
- Reset setting dial is in “AUTO” or Reset setting dial is in “MANUAL” with pushing the Reset button continuously.
- The key lock and key padlock are unlocked.
- The mechanical interlock is unlocked.
- While the OFF button is not pushed.

### Ratings of ready to close switch

	Groups	Voltage (V)	Current (A)	Minimum applicable load
Utilization category AC-12/DC-12 ①	Standard	AC	100–380	15V 2mA
			381–480	
		DC	24	
			48	
			125	
			240	

① : Based on IEC60947-5-1.

② : Chattering time by the operation of ACB is 30ms or less.

# 6 Specifications

## 5 Trip Devices

### Continuously-rated shunt trip device

Continuously-rated shunt trip device can remote controll to operate the ACB to “OFF” electrically. The continuous-rated shunt trip device allows the ACB to be turned OFF when an external protection relay against overcurrent or reverse power is activated.

Because of its continuous rating, it can also be used as an electrical interlock for the ACB.

\* Two shunt trip device can be installed to ensure the tripping operation. In the unlikely event that one of the shunt trip devices fails to operate due to the disconnection of wire or other cause, the other shunt trip device can be used for reliable trip operation. (In this case, Undervoltage trip can not be fitted.)

### Ratings of Continuously-rated shunt trip device

Rated voltage (V)	Operational voltage (V)	Coil Excitation Current ①		Power Consumption (VA) ①		Opening time ①, ③ (ms)
		Inrush current (A)	Holding current (mA)	Steady-state	Trip command ②	
AC/DC 24 – 30	16.8 – 33	12	150	5 or less	200 or less	50
AC/DC 48 – 60	33.6 – 66	6	80			
AC/DC 100 – 130	70 – 143	4	40			
AC/DC 200 – 250	140 – 275	2	20			
AC 380 – 480	266 – 528	1	10			

① : May vary slightly depending on control voltage or other conditions.

② : RMS during 200ms from the moment of excitation.


③ : There is some variation in the opening time depend on the connection method. For the details, please refer to P.70 to P.75.

### Capacitor trip device (Separate)

When used together with a continuously-rated shunt trip device, capacitor trip devices can be used to trip ACBs for up to 30 seconds even if there is a large voltage drop caused by a power failure (AC), short-circuit or other faults.

\* Testing the device is not possible when a test jumper is used.

#### • Control circuits

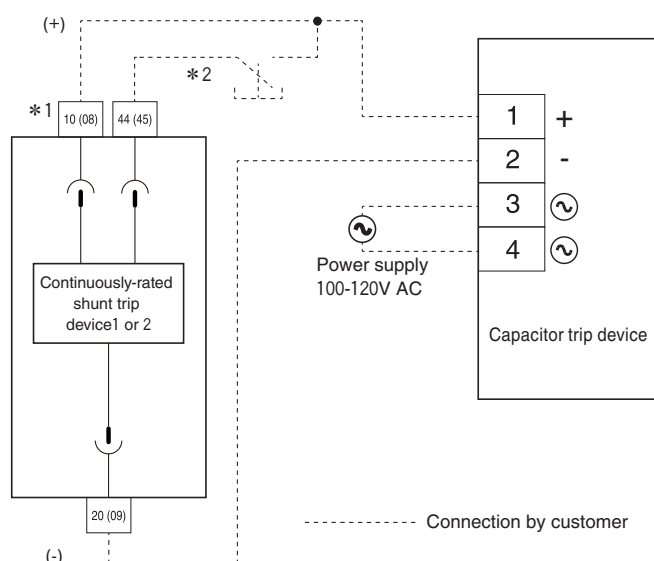

\* 1 : The terminal number in brackets indicates the terminal number for continuously-rated shunt trip device2.


\* 2 : Please refer to P.70 to P.75 for precautions on the cables connecting the switch with terminal 08 and terminal 10.

Types	AQR-1
Rated voltage	100 – 120V AC
Operational voltage	70 – 110% of rated voltage
Rated frequency	50/60Hz
Rated voltage of Shunt Trip used	100 – 130V AC/DC
Power consumption (Trip command) ②	200VA ①
Power consumption (Steady-state) ②	5VA

① : RMS during 200ms from the moment of excitation.

② : There is some variation due to the fluctuations in operational voltage.

#### • Outline Dimensions

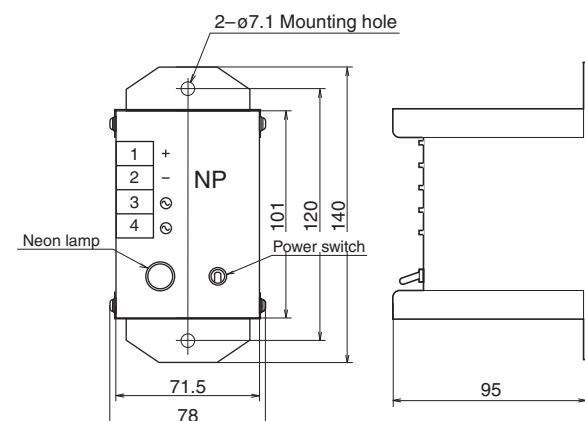

## Undervoltage trip device

The undervoltage trip device (UVT) trips the ACB when the control voltage drops below the opening voltage. When the control voltage is restored to the pick-up voltage, the ACB can be closed. The pick-up voltage is fixed to 85% of the minimum rated voltage.

The undervoltage trip device (UVT) is available in two types. The instantaneous type trips the ACB instantly when the control voltage drops below the opening voltage. The delay type (coming soon) does not trip the ACB instantly, but trips the ACB when the control voltage remains below the opening voltage for a certain period of time.

The delay type has the undervoltage trip device controller (UVT controller) and the relay terminal mounted on the side of the circuit breaker. (For the details, please refer to the outline dimensions.)

### Ratings of Undervoltage trip device (Instantaneous trip type)

Rated voltage (V)	Opening Voltage (V)	Pick-up Voltage (V)	Coil Excitation Current ①		Power Consumption (VA) ①		Operating time (ms)
			Inrush current (A)	Holding current (mA)	Steady-state	Reset	
AC/DC 24 – 30	10.5 – 16.8	20.4	12	150	5 or less	200 or less ②	200 or less
AC/DC 48 – 60	21 – 33.6	40.8	8	80	5 or less		
AC/DC 100 – 130	45.5 – 70	85	4	40	5 or less		
AC/DC 200 – 250	87.5 – 140	170	3	20	5 or less		
AC 380 – 480	168 – 266	323	1	10	6 or less		

① : May vary slightly depending on control voltage or other conditions.

② : RMS during 200ms from the moment of excitation.

### Ratings of Undervoltage trip device (Time delay trip type)

Rated voltage (V)	Opening Voltage (V)	Pick-up Voltage (V)	Coil Excitation Current ①		Power Consumption (VA) ①		Operating time (ms)
			Inrush current (A)	Holding current (mA)	Steady-state	Reset	
AC/DC 48 – 60	21 – 33.6	40.8	8	120	10 or less	200 or less ②	500 or more
AC/DC 100 – 130	45.5 – 70	85	4	100			
AC/DC 200 – 250	87.5 – 140	170	3	35			
AC 380 – 480	168 – 266	323	1	15			

① : May vary slightly depending on control voltage or other conditions.

② : RMS during 200ms from the moment of excitation.


③ : The UVT controller is mounted on the right side when viewing from the front of the ACB. For details about outline dimensions, please refer to P.56 to P.69.

④ : If using this device, set the short time-delay trip time of the over-current release (OCR) to the following values or less. Contact TERASAKI if a short time-delay trip time setting that exceeds the values below is required.

General protection specifications : 400ms

Generator protection and Smart type OCR : 500ms

⑤ : Contact TERASAKI to use in combination with a door interlock.

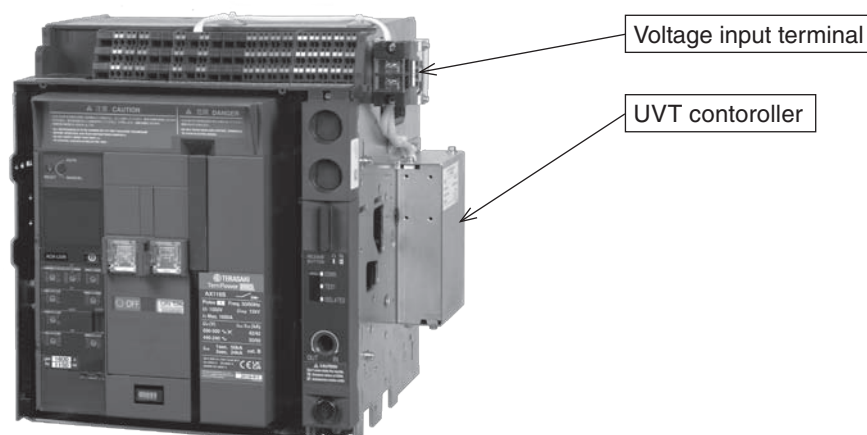

Undervoltage trip device (Time delay trip type)



# 6 Specifications

## 6 Over-current Releases (OCR)

TemPower PRO can be equipped with the high-reliability, high-functionality AOX-type over-current releases (OCRs). OCR has 2 types, Standard type and Smart type. There are some type names as follows depend on the combination of protection characteristics they have.

	Over-current release (OCR) types			
	For general feeder circuit			For generator protection
Standard type	AOX-LI	AOX-LSI	AOX-LSIG	AOX-LSIR
Smart type	—	AOX-LSI+	AOX-LSIG+	—

### Features

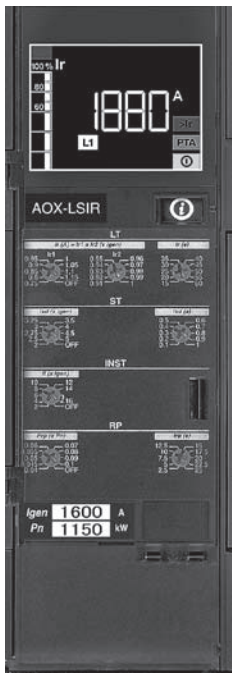	Standard type	Smart type
Appearance		
Set up method for protection function	Set by dial operation	Set by push button operation
Measurement function of circuit information	Non	Yes
Liquid color display	Available	Available
Indication items on display	<ol style="list-style-type: none"> <li>1. Stand-by mode Pick-up current is indicated on the display when the pick-up occurs by Long time-delay trip and Preferential trip alarm function.</li> <li>2. Information display mode Protection setting values for several protections are linked to the dial.</li> <li>3. Trip display mode If the ACB trips when being activated by various protective functions, the display automatically changes to the Trip display mode, and the following details flash in red according to the protective function that was activated. <ul style="list-style-type: none"> <li>• Activated protective function</li> <li>• Tripped phase</li> <li>• Value causing trip</li> </ul> </li> </ol>	<ol style="list-style-type: none"> <li>1. Stand-by mode Display the current status of ACB and indicates on the screen when the trip or alarm has occurred.</li> <li>2. Over-view mode Indicate all protection setting according to the specification and only measurement items those are selected. It is possible to set the scroll indication on the Stand-by mode.</li> <li>3. Menu mode Indicate the menu of several information indicate mode.</li> <li>4. Information indicate mode Indicate the several protection setting, measurement value, display setting and history.</li> <li>5. Event display mode Indicate the event information of TRIP and ALARM.</li> </ol>



## Over Current Release (OCR) functional specifications

OCR types (AOX-)			Standard type				Smart type	
			LI	LSI	LSIG	LSIR ⑫	LSI+	LSIG+
Available ACBs	AX106S～ AX116S	Draw-out type	○	○	○	○	○	○
		Fixed type	○	○	○	○	○ ⑰	○ ⑰
	AX106H～ AX116H	Draw-out type	○	○	○	○	○	○
		Fixed type	○	○	○	○	○ ⑰	○ ⑰
	AX120S, AX120H	Fixed type	○	○	○	—	—	—
Protection functions ①	Long time delay trip (LT) ②④		●	●	●	●	●	●
	Short time delay trip (ST) ②④		—	●	●	●	●	●
	Instantaneous trip (INST) ②④		●	●	●	●	●	●
	Making current release (MCR) ⑤		●	●	●	●	●	●
	Instantaneous override trip (IO) ⑥		●	●	●	●	●	●
	N-phase protection (NP) ②④⑦		●	●	●	—	●	●
	Ground fault trip (GF) ②④		—	—	●	—	—	●
	Reverse power trip (RPT) ④⑧⑭		—	—	—	●	●	●
	Under voltage protection (UV) ③⑨		—	—	—	—	●	●
	Over voltage protection (OV) ③⑨		—	—	—	—	●	●
	Unbalance voltage protection (UNBV) ③⑨		—	—	—	—	●	●
	Unbalance current protection (UNBC) ③⑨		—	—	—	—	●	●
	Under frequency protection (UF) ⑨		—	—	—	—	●	●
	Over frequency protection (OF) ⑨		—	—	—	—	●	●
	Contact temperature monitoring (OH) ⑨		—	—	—	—	○	○
	Dual setting ⑬		—	—	—	—	●	●
Zone interlock ⑮	Short time-delay trip		—	●	●	●	●	●
	Ground fault trip		—	—	●	—	—	●
Alarm function	Preferential trip alarm (PTA)		●	●	●	●	—	—
	Preferential trip alarm 1 (PTA1)		—	—	—	—	●	●
	Preferential trip alarm 2 (PTA2)		—	—	—	—	●	●
	Custom alarm		—	—	—	—	●	●
Switching of starting characteristic ⑪⑯	COLD/HOT (Long time delay trip, PTA)		●	●	●	●	●	●
Monitoring ⑩			—	—	—	—	●	●
Control power (24V DC)			Required	Required	Required	Required	Required	Required
Contact module ⑨			○	○	○	○	○	○
Communication ⑨			—	—	—	—	○	○
Remote command module			—	—	—	—	○	○

● : Available as standard ○ : Optional

— : “no” or “not available”

① : This protective function will be activated if current equal to or greater than 120 A (RMS value) flows through any pole in the main circuit, or current equal to or greater than 80 A flows through the RST phase, when no control power is supplied.

② : This function employs a calculation method based on RMS current. Current settings are also expressed as RMS values.

③ : This function employs a calculation method based on RMS voltage. Voltage settings are also expressed as RMS values.

④ : Either of the following operation modes can be set: Circuit breaker tripping and activation display are performed, or the function is off (circuit breaker tripping and activation display are not performed).

⑤ : Protective function that trips the ACB if there is a current greater than the pick-up current when the ACB is closed. This function is enabled for 30 msec immediately after the ACB is closed, and the pick-up current is 36 kA (peak value).

⑥ : This protection function is activated with a higher level of priority than an instantaneous trip (INST), and trips the ACB at the set value. The pick-up current is 81.3 kA (peak value) for the standard type, and 89.4 kA (peak value) for the smart type.

⑦ : This function protects the neutral wire of the three-phase four-wire system circuit from overcurrent.

⑧ : The RPT function protects 3-phase generators running in parallel against reverse power.

⑨ : This function requires control power supply. It does not work when control power is lost.

⑩ : This function does not work if control power is lost, and there is not more than 80 A or more current available in the RST phase.

⑪ : LSIR is fixed at COLD.

⑫ : Not applicable to 4-pole circuit breakers.

⑬ : This function allows the setting values for the following protection functions to be stored in two types of setting value groups, “Setting A” and “Setting B.”

• Long time-delay trip (LT) • Short time-delay trip (ST)

• Instantaneous trip (INST)

• Ground fault trip (GF...for LSIG+)

\* Cannot be used for zone interlock.

⑭ : For smart types, control power supply is required. They does not work when control power is lost.

⑮ : For standard types, specify whether or not zone interlocks are required when placing an order.

⑯ : For standard types, specify this function when placing an order.

⑰ : Contact temperature monitoring can not be used for the fixed type.

## 6 Specifications


### Zone interlock

The zone interlock function can be enabled for the corresponding function when the Over-Current Release (OCR) is compatible with short time-delay trips or ground fault trips.

If the zone interlock is enabled, a signal is output to upstream ACB if a downstream ACB detects a current greater than the pick-up current ( $I_{sd}$  or  $I_g$ ).

When the upstream ACB detects a current greater than the pick-up current ( $I_{sd}$  or  $I_g$ ), the signal from the downstream ACB is verified and if the upstream ACB receives the signal, it trips with the set  $t_{sd}$  or  $t_g$  time limit. If no signal is received, it trips with the same time limit as an instantaneous trip.

This function is not only used for linking TemPower PROs together, but can also be used for linking TemPower PROs and TemBreak PRO Smart circuit breakers, or TemPower PROs and TemPower2 air circuit breakers.

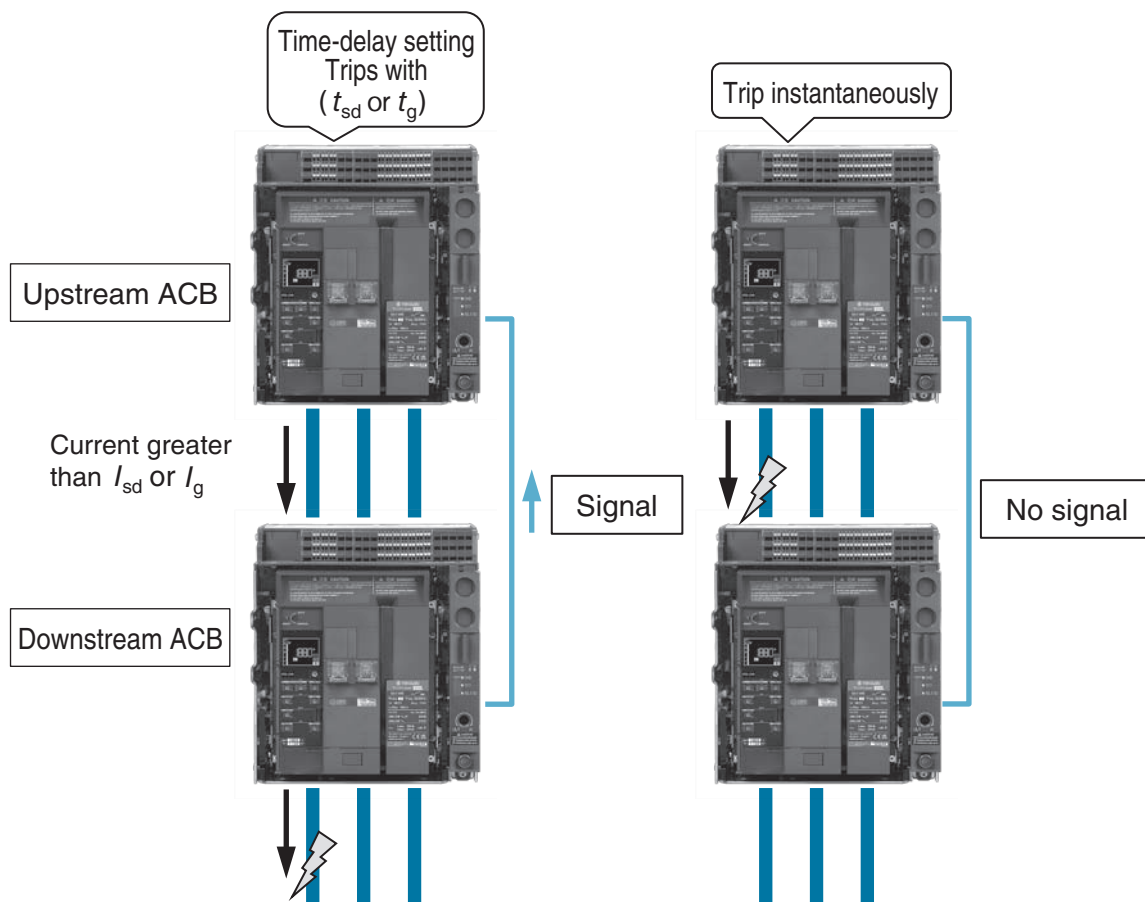

Zone interlock operating schematic

## Setting range of protection functions (Standard type)

### AOX-L I ⑥

Types of ACB	AX106S, AX108S, AX110S, AX112S, AX116S, AX106H, AX108H, AX110H, AX112H, AX116H	AX120S, AX120H
Long time delay pick-up current (A) : ( $I_r$ )	$(I_r1) : 0.40 - \underline{1.00}$ (in units of 0.10), 0.95 or OFF ③ $(I_r2) : 0.91 - \underline{1.00}$ (in units of 0.01) $(I_r) = (I_r1) \times (I_r2) \times (I_n)$ Non tripping when load current $\leq ([I_r] \times 1.05]$ , Tripping when $([I_r] \times 1.05) < \text{load current} \leq ([I_r] \times 1.2)$ Tolerance : 105% – 120%	$(I_r1) : 0.40 - \underline{1.00}$ (in units of 0.10), 0.95 or OFF ③ $(I_r2) : 0.91 - \underline{1.00}$ (in units of 0.01) $(I_r) = (I_r1) \times (I_r2) \times (I_n)$ Non tripping when load current $\leq ([I_r] \times 1.05]$ , Tripping when $([I_r] \times 1.05) < \text{load current} \leq ([I_r] \times 1.2)$ Tolerance : 105% – 120%
Long time delay time settings (s) : ( $t_r$ )	0.5, 1.25, 2.5, 5, 8, <u>10</u> , 15, 20, 25, 30 ② Tolerance : $-20\% \times t_r - 20\text{ms} - +0\% \times t_r + 30\text{ms}$	0.5, 1.25, 2.5, 5, 8, <u>10</u> , 15, 20 ② Tolerance : $-20\% \times t_r - 20\text{ms} - +0\% \times t_r + 30\text{ms}$
Instantaneous trip pick-up current (A) : ( $I_i$ ) ①	$(I_n) \times (1.5, 2, 4, 6, 8, 10, 12, 14, \underline{16})$ or OFF Tolerance : $\pm 15\%$	$(I_n) \times (1.5, 2, 4, 6, 8, 10, \underline{12})$ or OFF Tolerance : $\pm 15\%$
Neutral protection pick-up current (A) : ( $I_N$ ) ⑦	$(I_r) \times (50, \underline{100}, 200)\%$ or OFF ⑤	$(I_r) \times (50, \underline{100}, 200)\%$ or OFF ⑤
Neutral protection time settings (s) : ( $t_N$ )	Linked to the time settings for long time delay trip or instantaneous trip.	Linked to the time settings for long time delay trip or instantaneous trip.
Preferential trip alarm pick-up current (A) : ( $I_P$ )	$(I_r) \times 80\%$ (fixed) ③ Tolerance : $\pm 10\%$	$(I_r) \times 80\%$ (fixed) ③ Tolerance : $\pm 10\%$
Preferential trip alarm time settings (s) : ( $t_P$ )	$(t_r) \times 50\%$ (fixed) ④ Tolerance差 : $-20\% \times t_P - 20\text{ms} - +0\% \times t_P + 30\text{ms}$	$(t_r) \times 50\%$ (fixed) ④ Tolerance : $-20\% \times t_P - 20\text{ms} - +0\% \times t_P + 30\text{ms}$
Switching of starting characteristic	<u>HOT/COLD</u>	<u>HOT/COLD</u>

① : If the instantaneous trip current is set to OFF, this will be activated with the maximum set value  $[(I_n \times 16)]$

② : Time delay at  $(I_r) \times 600\%$

③ : When the  $(I_r1)=\text{OFF}$ , Preferential trip alarm can not work.

④ : Time delay at  $(I_P) \times 600\%$

⑤ : When the neutral protection pick-up current ( $I_N$ ) exceeds the rated current ( $I_n$ ), setting value of ( $I_N$ ) set to rated current.

⑥ : In case of AX106S or AX106H, please select the value of rated current ( $I_n$ ) 400A or 630A.

⑦ : If the 3-phase 3-wire configuration is selected, default setting value is set to "OFF".

⑧ : If not otherwise specified, the product will be delivered with the underlined default setting value.

# 6 Specifications

## Setting range of protection functions (Standard type)

### AOX-LSI ⑥

Types of ACB	AX106S, AX108S, AX110S, AX112S, AX116S, AX106H, AX108H, AX110H, AX112H, AX116H							AX120S, AX120H						
Long time delay pick-up current (A) : ( $I_r$ )	$(I_{r1}) : 0.40 - \underline{1.00}$ (in units of 0.10), 0.95 or OFF ③ $(I_{r2}) : 0.91 - \underline{1.00}$ (in units of 0.01)							$(I_{r1}) : 0.40 - \underline{1.00}$ (in units of 0.10), 0.95 or OFF ③ $(I_{r2}) : 0.91 - \underline{1.00}$ (in units of 0.01)						
	$(I_r)=(I_{r1}) \times (I_{r2}) \times (I_n)$							$(I_r)=(I_{r1}) \times (I_{r2}) \times (I_n)$						
	Non tripping when load current $\leq ([I_r] \times 1.05]$ , Tripping when $([I_r] \times 1.05) < \text{load current} \leq ([I_r] \times 1.2)$ Tolerance : 105% – 120%							Non tripping when load current $\leq ([I_r] \times 1.05]$ , Tripping when $([I_r] \times 1.05) < \text{load current} \leq ([I_r] \times 1.2)$ Tolerance : 105% – 120%						
Long time delay time settings (s) : ( $t_r$ )	0.5, 1.25, 2.5, 5, 8, <u>10</u> , 15, 20, 25, 30 ②							0.5, 1.25, 2.5, 5, 8, <u>10</u> , 15, 20 ②						
	Tolerance : $-20\% \times t_r - 20\text{ms} - +0\% \times t_r + 30\text{ms}$							Tolerance : $-20\% \times t_r - 20\text{ms} - +0\% \times t_r + 30\text{ms}$						
Short time delay pick-up current (A) : ( $I_{sd}$ )	$(I_n) \times (1, 1.5, 2, 2.5, 3, 4, \underline{6}, 8, 10)$ or OFF							$(I_n) \times (1, 1.5, 2, 2.5, 3, 4, \underline{6}, 8)$ or OFF						
	Tolerance : $\pm 10\%$							Tolerance : $\pm 10\%$						
Short time delay time settings (ms) : ( $t_{sd}$ )	Relay time	50	100	200	<u>400</u>	600	(Adjustable) Ramp characteristic $I^2t$ : ON or <u>OFF</u>	Relay time	50	100	200	<u>400</u>	600	(Adjustable) Ramp characteristic $I^2t$ : ON or <u>OFF</u>
	Resettable time	25	75	175	375	575		Resettable time	25	75	175	375	575	
	Total breaking time	100	150	250	450	650		Total breaking time	100	150	250	450	650	
Instantaneous trip pick-up current (A) : ( $I_i$ ) ①	$(I_n) \times (1.5, 2, 4, 6, 8, 10, 12, 14, \underline{16})$ or OFF							$(I_n) \times (1.5, 2, 4, 6, 8, 10, \underline{12})$ or OFF						
	Tolerance : $\pm 15\%$							Tolerance : $\pm 15\%$						
Neutral protection pick-up current (A) : ( $I_N$ ) ⑦	$(I_r) \times (50, \underline{100}, 200)\%$ or OFF ⑤ Non tripping when load current $\leq ([I_N] \times 1.05]$ , Tripping when $([I_N] \times 1.05) < \text{load current} \leq ([I_N] \times 1.2)$							$(I_r) \times (50, \underline{100}, 200)\%$ or OFF ⑤ Non tripping when load current $\leq ([I_N] \times 1.05]$ , Tripping when $([I_N] \times 1.05) < \text{load current} \leq ([I_N] \times 1.2)$						
Neutral protection time settings (s) : ( $t_N$ )	Linked to the time settings for long time delay trip or instantaneous trip.							Linked to the time settings for long time delay trip or instantaneous trip.						
Preferential trip alarm pick-up current (A) : ( $I_p$ )	$(I_r) \times 80\%$ (Fixed) ③ Tolerance : $\pm 10\%$							$(I_r) \times 80\%$ (Fixed) ③ Tolerance : $\pm 10\%$						
Preferential trip alarm time settings (s) : ( $t_p$ )	$(t_r) \times 50\%$ (Fixed) ④ Tolerance : $-20\% \times t_p - 20\text{ms} - +0\% \times t_p + 30\text{ms}$							$(t_r) \times 50\%$ (Fixed) ④ Tolerance : $-20\% \times t_p - 20\text{ms} - +0\% \times t_p + 30\text{ms}$						
Switching of starting characteristic	<u>HOT/COLD</u>							<u>HOT/COLD</u>						

① : If the short time delay pick-up current and instantaneous trip current are set to OFF, instantaneous trip will be activated with the maximum set value  $[(I_n \times 16)]$

② : Time delay at  $(I_r) \times 600\%$

③ : When the  $(I_{r1}) = \text{OFF}$ , Preferential trip alarm can not work.

④ : Time delay at  $(I_p) \times 600\%$

⑤ : When the neutral protection pick-up current ( $I_N$ ) exceeds the rated current ( $I_n$ ), setting value of ( $I_N$ ) set to rated current.

⑥ : In case of AX106S or AX106H, please select the value of rated current ( $I_n$ ) 400A or 630A.

⑦ : If the 3-phase 3-wire configuration is selected, default setting value is set to "OFF".

⑧ : If not otherwise specified, the product will be delivered with the underlined default setting value.



## Setting range of protection functions (Standard type)

### AOX-LSIG ⑥

Types of ACB	AX106S, AX108S, AX110S, AX112S, AX116S, AX106H, AX108H, AX110H, AX112H, AX116H							AX120S, AX120H						
Long time delay pick-up current (A) : ( <i>I<sub>r</sub></i> )	<i>(I<sub>r1</sub>)</i> : 0.40 – <u>1.00</u> (in units of 0.10), 0.95 or OFF ③ <i>(I<sub>r2</sub>)</i> : 0.91 – <u>1.00</u> (in units of 0.01)							<i>(I<sub>r1</sub>)</i> : 0.40 – <u>1.00</u> (in units of 0.10), 0.95 or OFF ③ <i>(I<sub>r2</sub>)</i> : 0.91 – <u>1.00</u> (in units of 0.01)						
	<i>(I<sub>r</sub>)</i> = <i>(I<sub>r1</sub>)</i> × <i>(I<sub>r2</sub>)</i> × ( <i>I<sub>n</sub></i> )							<i>(I<sub>r</sub>)</i> = <i>(I<sub>r1</sub>)</i> × <i>(I<sub>r2</sub>)</i> × ( <i>I<sub>n</sub></i> )						
	Non tripping when load current ≤([ <i>I<sub>r</sub></i> ] × 1.05], Tripping when ([ <i>I<sub>r</sub></i> ] × 1.05) < load current ≤([ <i>I<sub>r</sub></i> ] × 1.2) Tolerance : 105% – 120%							Non tripping when load current ≤([ <i>I<sub>r</sub></i> ] × 1.05], Tripping when ([ <i>I<sub>r</sub></i> ] × 1.05) < load current ≤([ <i>I<sub>r</sub></i> ] × 1.2) Tolerance : 105% – 120%						
Long time delay time settings (s) : ( <i>t<sub>r</sub></i> )	0.5, 1.25, 2.5, 5, 8, <u>10</u> , 15, 20, 25, 30 ②							0.5, 1.25, 2.5, 5, 8, <u>10</u> , 15, 20 ②						
	Tolerance : –20% × <i>t<sub>r</sub></i> –20ms – +0% × <i>t<sub>r</sub></i> +30ms							Tolerance : –20% × <i>t<sub>r</sub></i> –20ms – +0% × <i>t<sub>r</sub></i> +30ms						
Short time delay pick-up current (A) : ( <i>I<sub>sd</sub></i> )	<i>(I<sub>n</sub>)</i> × (1, 1.5, 2, 2.5, 3, 4, <u>6</u> , 8, 10) or OFF							<i>(I<sub>n</sub>)</i> × (1, 1.5, 2, 2.5, 3, 4, <u>6</u> , 8) or OFF						
	Tolerance : ±10%							Tolerance : ±10%						
Short time delay time settings (ms) : ( <i>t<sub>sd</sub></i> )	Relay time	50	100	200	<u>400</u>	600	(Adjustable) Ramp characteristic <i>I<sup>2</sup>t</i> : ON or OFF	Relay time	50	100	200	<u>400</u>	600	(Adjustable) Ramp characteristic <i>I<sup>2</sup>t</i> : ON or OFF
	Resettable time	25	75	175	375	575		Resettable time	25	75	175	375	575	
	Total breaking time	100	150	250	450	650		Total breaking time	100	150	250	450	650	
Instantaneous trip pick-up current (A) : ( <i>I<sub>i</sub></i> ) ①	<i>(I<sub>n</sub>)</i> × (1.5, 2, 4, 6, 8, 10, 12, 14, <u>16</u> ) or OFF							<i>(I<sub>n</sub>)</i> × (1.5, 2, 4, 6, 8, 10, <u>12</u> ) or OFF						
	Tolerance : ±15%							Tolerance : ±15%						
Neutral protection pick-up current (A) : ( <i>I<sub>N</sub></i> ) ⑦	<i>(I<sub>r</sub>)</i> × (50, <u>100</u> , 200)% or OFF ⑤ Non tripping when load current ≤([ <i>I<sub>N</sub></i> ] × 1.05], Tripping when ([ <i>I<sub>N</sub></i> ] × 1.05) < load current ≤([ <i>I<sub>N</sub></i> ] × 1.2)							<i>(I<sub>r</sub>)</i> × (50, <u>100</u> , 200)% or OFF ⑤ Non tripping when load current ≤([ <i>I<sub>N</sub></i> ] × 1.05], Tripping when ([ <i>I<sub>N</sub></i> ] × 1.05) < load current ≤([ <i>I<sub>N</sub></i> ] × 1.2)						
Neutral protection time settings (s) : ( <i>t<sub>N</sub></i> )	Linked to the time settings for long time delay trip or instantaneous trip.							Linked to the time settings for long time delay trip or instantaneous trip.						
Ground fault trip pick-up current (A) : ( <i>I<sub>g</sub></i> )	<i>(I<sub>n</sub>)</i> × 0.1 – 0.8 (in unit of 0.1), 1.0 or OFF Default value : 0.2 Tolerance : ±10%							<i>(I<sub>n</sub>)</i> × 0.1 – 0.8 (in unit of 0.1), 1.0 or OFF Default value : 0.2 Tolerance : ±10%						
Ground fault trip time settings (ms) : ( <i>t<sub>g</sub></i> )	Relay time	100	<u>300</u>	500	1000	2000	(Adjustable) Ramp characteristic <i>I<sup>2</sup>t</i> : ON or OFF	Relay time	100	<u>300</u>	500	1000	2000	(Adjustable) Ramp characteristic <i>I<sup>2</sup>t</i> : ON or OFF
	Resettable time	75	275	475	975	1975		Resettable time	75	275	475	975	1975	
	Total breaking time	150	350	550	1050	2050		Total breaking time	150	350	550	1050	2050	
Preferential trip alarm pick-up current (A) : ( <i>I<sub>p</sub></i> )	<i>(I<sub>r</sub>)</i> × 80% (Fixed) ③ Tolerance : ±10%							<i>(I<sub>r</sub>)</i> × 80% (Fixed) ③ Tolerance : ±10%						
Preferential trip alarm time settings (s) : ( <i>t<sub>p</sub></i> )	<i>(t<sub>r</sub>)</i> × 50% (Fixed) ④ Tolerance : –20% × <i>t<sub>p</sub></i> –20ms – +0% × <i>t<sub>p</sub></i> +30ms							<i>(t<sub>r</sub>)</i> × 50% (Fixed) ④ Tolerance : –20% × <i>t<sub>p</sub></i> –20ms – +0% × <i>t<sub>p</sub></i> +30ms						
Switching of starting characteristic	HOT/COLD							HOT/COLD						

① : If the short time delay pick-up current and instantaneous trip current are set to OFF, instantaneous trip will be activated with the maximum set value  $[(I_n \times 16)]$

② : Time delay at  $(I_r) \times 600\%$

③ : When the  $(I_{r1}) = \text{OFF}$ , Preferential trip alarm can not work.

④ : Time delay at  $(I_p) \times 600\%$

⑤ : When the neutral protection pick-up current ( $I_N$ ) exceeds the rated current ( $I_n$ ), setting value of ( $I_N$ ) set to rated current.

⑥ : In case of AX106S or AX106H, please select the value of rated current ( $I_n$ ) 400A or 630A.

⑦ : If the 3-phase 3-wire configuration is selected, default setting value is set to "OFF".

⑧ : If not otherwise specified, the product will be delivered with the underlined default setting value.

# 6 Specifications

## Setting range of protection functions (Standard type)

### AOX-LSIR ⑤⑥

Long time-delay pick-up current (A) : ( $I_r$ ) ①	$(I_{r1}) : 0.75 - \underline{1.15}$ (in units of 0.05) or OFF $(I_{r2}) : 0.91 - \underline{1.00}$ (in units of 0.01) ----- $(I_r) = (I_{r1}) \times (I_{r2}) \times (I_{gen})$ Tolerance : $\pm 5\%$											
Long time-delay time settings (s) : ( $t_r$ )	15 – 60 (in units of 5s) ⑦    Standard setting : 20 Tolerance : $-15\% \times t_r - 0\text{ms} - +15\% \times t_r + 150\text{ms}$											
Short time-delay pick-up current (A) : ( $I_{sd}$ )	$(I_{gen}) \times (2, 2.5, \underline{2.75}, 3, 3.25, 3.5, 4, 4.5, 5)$ or OFF Tolerance : $\pm 10\%$											
Short time-delay time settings (ms) : ( $t_{sd}$ )	Relay time	100	<u>200</u>	300	400	500	600	700	800	900	1000	Ramp characteristic $I^2t$ : OFF (fixed)
	Resettable time	75	175	275	375	475	575	675	775	875	975	
	Total breaking time	150	250	350	450	550	650	750	850	950	1050	
Instantaneous trip pick-up current (A) : ( $I_i$ ) ②	$(I_{gen}) \times 2 - \underline{16}$ (in units of 2) or OFF Tolerance : $\pm 15\%$											
Preferential trip alarm pick-up current (A) : ( $I_p$ ) ③	$(I_{gen}) \times 60\% - 105\%$ (in units of 1%)    Default setting values : $(I_{gen}) \times 95\%$ Tolerance : $\pm 10\%$											
Preferential trip alarm time settings (s) : ( $t_p$ ) ③	$(t_r) \times 5\% - 80\%$ (in units of 1s), Default setting : 50% ⑧ Tolerance : $-15\% \times t_p - 0\text{ms} - +15\% \times t_p + 100\text{ms}$											
Reverse power trip pick-up power (kW) : ( $P_{rp}$ )	$(P_n) \times (\underline{4}, 4.5, 5, 5.5, 6, 7, 8, 9, 10) \%$ or OFF Tolerance : $-20\% - +0\%$											
Reverse power trip time settings (s) : ( $t_{rp}$ )	2.5, <u>5</u> , 7.5, 10, 12.5, 15, 17.5, 20, 22.5, 25 (adjustable) ⑨ Tolerance : $-15\% \times t_{rp} - 0\text{ms} - +15\% \times t_{rp} + 100\text{ms}$											
Reverse power trip normal power feed direction setting	<u>Forward direction</u> / Reverse direction ④											
Phase / wire system	<u>3-phase 3-wire type</u> / 3-phase 4-wire type											
Switching of starting characteristic	COLD (fixed)											

① : When  $I_{r1} = \text{OFF}$ ,  $I_r = I_{gen}$

② : If the set current values for both short-time delay tripping and instantaneous tripping are set to OFF, instantaneous tripping will be enabled and activated with the maximum set value ( $\times 16$ ).

③ : Specify this function when placing an order. Unless otherwise specified, the product is delivered with the default setting value.

④ : “Forward direction” means the direction from the upper terminal to the lower terminal and “Reverse direction” means the direction from the lower terminal to the upper terminal.

⑤ : Specify the rated current ( $I_{gen}$ ) for the generator when placing an order. The rated current ( $I_{gen}$ ) can be specified between 60% and 100% of the rated current ( $I_n$ ) in units of 1A.

⑥ : Specify the rated power ( $P_n$ ) for the generator when placing an order. The rated power ( $P_n$ ) can be specified between 50kW and 9,995kW in units of 5kW.

⑦ : Time limit at  $(I_r) \times 120\%$

⑧ : Time limit at  $(I_p) \times 120\%$

⑨ : Time limit at  $(P_{rp}) \times 100\%$

⑩ : If not otherwise specified, the product will be delivered with the underlined values and “Default setting value” in the table.

## Setting range of protection functions (Smart type)

AOX-LSI+

⑨⑩

		Default settings ⑮
Long time-delay pick-up current (A) : ( $I_r$ ) ①	( $I_n$ ) × 0.4 – 1.0 (in units of 0.01) or OFF ② Tolerance of Thi(L characteristics) : Non tripping when load current ≤ ( $I_r$ ) × 1.05), Tripping when ( $I_r$ ) × 1.05 < load current ≤ ( $I_r$ ) × 1.2 Tolerance of other characteristics : ±5%	( $I_n$ ) × 1.00 —
Long time-delay time settings (s) : ( $t_r$ ) ①④	0.5 – 30 (in units of 0.5s) Tolerance : –20% × $t_r$ –20ms – +0% × $t_r$ +30ms	10.0s
Switching of Long time-delay trip characteristics	Thi (L characteristics), $I^{0.02}t$ (SI), $I^2t$ (VI), $I^2t$ (EI), $I^3t$ , $I^4t$ (HVF)	Thi
Short time delay pick-up current (A) : ( $I_{sd}$ ) ①	( $I_n$ ) × 1.0 – 10 (in units of 0.5) or OFF ③ Tolerance : ±10%	( $I_n$ ) × 6
Short time delay time settings (ms) : ( $t_{sd}$ ) ①	Relay time 50 100 150 200 250 300 350 400 450 500 550 600 Resettable time 25 75 125 175 225 275 325 375 425 475 525 575 Total breaking time 100 150 200 250 300 350 400 450 500 550 600 650 Ramp characteristic $I^2t$ : ON or OFF	400ms 375ms 450ms OFF
Zone interlock (Short time-delay trip)	ON or OFF	OFF
Instantaneous trip pick-up current (A) : ( $I_i$ ) ①	( $I_n$ ) × 1.5 – 16 (in units of 0.5) or OFF ③ Tolerance : ±15%	OFF
Neutral protection pick-up current (A) : ( $I_N$ )	( $I_r$ ) × 0.5 – 2.0 (in units of 0.5) or OFF ⑦	OFF (3pole, 3phase 3wire) ( $I_r$ ) × 1.0 (Except for the above)
Neutral protection time settings (s) : ( $t_N$ )	Link to the time-delay settings for Long time delay trip and Short time delay trip.	—
Preferential trip alarm1 pick-up current (A) : ( $I_{P1}$ )	( $I_r$ ) × 60% – 95% (in units of 5%) Tolerance : ±10%	( $I_r$ ) × 80%
Preferential trip alarm1 time settings (s) : ( $t_{P1}$ ) ⑤	( $t_r$ ) × 5% – 80% (in units of 5%) Tolerance : –20% × $t_{P1}$ –20ms – 0% × $t_{P1}$ ; 30ms	( $t_r$ ) × 50%
Preferential trip alarm2 pick-up current (A) : ( $I_{P2}$ )	( $I_r$ ) × 60% – 95% (in units of 5%) or OFF Tolerance : ±10%	( $I_r$ ) × 80%
Preferential trip alarm2 time settings (s) : ( $t_{P2}$ ) ⑤	( $t_r$ ) × 5% – 80% (in units of 5%) Tolerance : –20% × $t_{P2}$ –20ms – 0% × $t_{P2}$ ; 30ms	( $t_r$ ) × 50%
Voltage settings for Under voltage protection (V) : ( $U_{UV}$ ) ⑫⑬	100 – 1000 (in units of 5) Tolerance : ±1%	100V
	Working mode : TRIP/ALARM/OFF	OFF
Time settings for Under voltage protection (s) : ( $t_{UV}$ ) ⑫⑬	0.1 – 300 (in units of 0.1) Tolerance : ±2% × ( $t_{UV}$ ) or ±40ms, whichever is larger	10.0s
Voltage settings for Over voltage protection (V) : ( $U_{OV}$ ) ⑫⑬	100 – 1000 (in units of 5) Tolerance : ±1%	725V
	Working mode : TRIP/ALARM/OFF	OFF
Time settings for Over voltage protection (s) : ( $t_{OV}$ ) ⑫⑬	0.1 – 300 (in units of 0.1) Tolerance : ±2% × ( $t_{OV}$ ) or ±40ms, whichever is larger	10.0s
Frequency settings for Under frequency protection (Hz) : ( $F_{UF}$ ) ⑫	45 – $F_n$ (in units of 0.1) ⑰ Tolerance : ±0.1Hz	45Hz
	Working mode : TRIP/ALARM/OFF	OFF
Time settings for Under frequency protection (s) : ( $t_{UF}$ ) ⑫	0.1 – 300 (in units of 0.1) Tolerance : ±2% × ( $t_{UF}$ ) or ±40ms, whichever is larger	10.0s
Frequency settings for Over frequency protection (Hz) : ( $F_{OF}$ ) ⑫	$F_n$ – 65 (in units of 0.1) ⑰ Tolerance : ±0.1Hz	65Hz
	Working mode : TRIP/ALARM/OFF	OFF
Time settings for Over frequency protection (s) : ( $t_{OF}$ ) ⑫	0.1 – 300 (in units of 0.1) Tolerance : ±2% × ( $t_{OF}$ ) or ±40ms, whichever is larger	10.0s
Power settings for Reverse power protection (kW) : ( $P_{RP}$ ) ⑥⑫	( $P_n$ ) × 4% – 15% (in units of 0.5%) Tolerance : –20% ~ +0%	4%
	Working mode : TRIP/ALARM/OFF	OFF
Time settings for Reverse power protection (s) : ( $t_{RP}$ ) ⑪⑫	0.5 – 25 (in units of 0.5) Tolerance : –15% × ( $t_{RP}$ ) –0ms – +15% × ( $t_{RP}$ ) +100ms	5s
Current settings for Unbalance current protection (%) : ( $I_{unbc}$ ) ⑫	2 – 90 (in units of 1) Tolerance : ±5%	50%
	Working mode : TRIP/ALARM/OFF	OFF
Time settings for Unbalance current protection (s) : ( $t_{unbc}$ ) ⑫	0.5 – 60 (in units of 0.1) Tolerance : ±2% × ( $t_{unbc}$ ) or ±40ms, whichever is larger	10s
Voltage settings for Unbalance voltage protection (%) : ( $U_{unbv}$ ) ⑫	2 – 90 (in units of 1) Tolerance : ±2%	30%
	Working mode : TRIP/ALARM/OFF	OFF
Time settings for Unbalance voltage protection (s) : ( $t_{unbv}$ ) ⑫	0.5 – 60 (in units of 0.1) Tolerance : ±2% × ( $t_{unbv}$ ) or ±40ms, whichever is larger	10s
Temperature settings for Contact temperature monitoring (°C) : ( $T_{oh}$ ) ⑧	105 – 155 (in units of 10) Tolerance : ±10% ⑭	155°C
	Working mode : ALARM/OFF	OFF
Time settings for Contact temperature monitoring (s) : ( $t_{oh}$ ) ⑧	50ms or less	—
Switching of starting characteristics	COLD/HOT	COLD

① : The setting current and time settings can be set to 2 type values as "Setting A" and "Setting B".

② : If " $I_r$ " is set to "OFF", the Preferential trip alarm1 and Preferential trip alarm2 functions will also be non tripping.

③ : Short time delay trip and instantaneous trip can not both be set to "OFF".

④ : Thi (L characteristic) : Time settings at ( $I_r$ ) × 600% Other characteristics : Time settings at ( $I_r$ ) × 300%

⑤ : If the Long time delay trip characteristic is Thi (L characteristic) : Time setting at ( $I_r$ ) × 600%

If the Long time delay characteristic is except for Thi (L characteristic) : Time setting at ( $I_r$ ) × 300.

⑥ : The rated power ( $P_n$ ) can be specified between 50kW and 9,995kW in unit of 5kW.

⑦ : If the ( $I_r$ ) × (0.5 to 2.0) value exceeds the rated current value  $I_n$ , the setting current value will be set to the rated current value.

⑧ : This function is optional and can not be install for Fixed type.

⑨ : When placing an order of AX106S and AX106H, specify the rated current " $I_n$ " from 400A or 630A.

⑩ : If the products are used in the condition of 3-phase 3-wire, please set the "OFF" setting.

⑪ : Time setting at ( $P_{RP}$ ) × 100%.

⑫ : Working mode can be set to Trip (Trip the ACB at each setting value), Alarm (Output the alarm at each setting value), or OFF (disable the function).

⑬ : If the products are used in the 3-phase 3-wire, voltage settings can be selected phase voltage or line voltage.

⑭ : Accuracy at the ambient temperature between 20 – 50°C .

⑮ : If not otherwise specified, the product will be delivered with "Default settings" in the table.

⑯ : AOX-LSI+ can not be applied to AX120S and AX120H.

⑰ : " $F_n$ " means rated frequency (50Hz or 60Hz).

# 6 Specifications

## Setting range of protection functions (Smart type)

### AOX-LSIG+ ⑨⑬

		Default settings ⑮
Long time-delay pick-up current (A) : ( $I_L$ ) ①	$(I_n) \times 0.4 - 1.0$ (in units of 0.01) or OFF ② Tolerance of $Thi$ (L characteristics) : Non tripping when load current $\leq (I_L) \times 1.05$ , Tripping when $(I_L) \times 1.05 < \text{load current} \leq (I_L) \times 1.2$ Tolerance of other characteristics : $\pm 5\%$	$(I_n) \times 1.00$ —
Long time-delay time settings (s) : ( $t_L$ ) ①④	0.5 – 30 (in units of 0.5s) Tolerance : $-20\% \times t_L - 20\text{ms} - +0\% \times t_L + 30\text{ms}$	10.0s
Switching of Long time-delay trip characteristics	$Thi$ (L characteristics), $I^{0.02}t$ (SI), $I^2t$ (VI), $I^2t$ (EI), $I^2t$ , $I^2t$ (HVF)	$Thi$
Short time delay pick-up current (A) : ( $I_{sd}$ ) ①	$(I_n) \times 1.0 - 10$ (in units of 0.5) or OFF ③ Tolerance : $\pm 10\%$	$(I_n) \times 6$
Short time delay time settings (ms) : ( $t_{sd}$ ) ①	Relay time 50 100 150 200 250 300 350 400 450 500 550 600 Resettable time 25 75 125 175 225 275 325 375 425 475 525 575 Total breaking time 100 150 200 250 300 350 400 450 500 550 600 650 Ramp characteristic $I^2t$ : ON or OFF	400ms 375ms 450ms OFF
Zone interlock (Short time-delay trip)	ON or OFF	OFF
Instantaneous trip pick-up current (A) : ( $I_I$ ) ①	$(I_n) \times 1.5 - 16$ (in units of 0.5) or OFF ③ Tolerance : $\pm 15\%$	OFF
Neutral protection pick-up current (A) : ( $I_N$ )	$(I_L) \times 0.5 - 2.0$ (in units of 0.5) or OFF ⑦	OFF (3pole, 3phase 3wire) $(I_L) \times 1.0$ (Except for the above)
Neutral protection time settings (s) : ( $t_N$ )	Link to the time-delay settings for Long time delay trip and Short time delay trip.	—
Ground fault trip pick-up current (A) : ( $I_g$ ) ①	$(I_n) \times 0.1 - 1.0$ (in units of 0.05) or OFF Tolerance : $\pm 10\%$	$(I_n) \times 0.2$
Ground fault trip time settings (ms) : ( $t_g$ ) ①	Relay time : 50 – 2000ms (in units of 50ms) Resettable time : $t_g - 25\text{ms}$ Total breaking time : $t_g + 50\text{ms}$ Ramp characteristic $I^2t$ : ON or OFF	300ms OFF
Zone interlock (Ground fault trip)	ON or OFF	OFF
Preferential trip alarm1 pick-up current (A) : ( $I_{P1}$ )	$(I_L) \times 60\% - 95\%$ (in units of 5%) Tolerance : $\pm 10\%$	$(I_L) \times 80\%$
Preferential trip alarm1 time settings (s) : ( $t_{P1}$ ) ⑤	$(t_L) \times 5\% - 80\%$ (in units of 5%) Tolerance : $-20\% \times t_{P1} - 20\text{ms} - 0\% \times t_{P1} + 30\text{ms}$	$(t_L) \times 50\%$
Preferential trip alarm2 pick-up current (A) : ( $I_{P2}$ )	$(I_L) \times 60\% - 95\%$ (in units of 5%) or OFF Tolerance : $\pm 10\%$	$(I_L) \times 80\%$
Preferential trip alarm2 time settings (s) : ( $t_{P2}$ ) ⑤	$(t_L) \times 5\% - 80\%$ (in units of 5%) Tolerance : $-20\% \times t_{P2} - 20\text{ms} - 0\% \times t_{P2} + 30\text{ms}$	$(t_L) \times 50\%$
Voltage settings for Under voltage protection (V) : ( $U_{uv}$ ) ⑫⑬	100 – 1000 (in units of 5) Tolerance : $\pm 1\%$ Working mode : TRIP/ALARM/OFF	100V OFF
Time settings for Under voltage protection (s) : ( $t_{uv}$ ) ⑫⑬	0.1 – 300 (in units of 0.1) Tolerance : $\pm 2\% \times (t_{uv})$ or $\pm 40\text{ms}$ , whichever is larger	10.0s
Voltage settings for Over voltage protection (V) : ( $U_{ov}$ ) ⑫⑬	100 – 1000 (in units of 5) Tolerance : $\pm 1\%$ Working mode : TRIP/ALARM/OFF	725V OFF
Time settings for Over voltage protection (s) : ( $t_{ov}$ ) ⑫⑬	0.1 – 300 (in units of 0.1) Tolerance : $\pm 2\% \times (t_{ov})$ or $\pm 40\text{ms}$ , whichever is larger	10.0s
Frequency settings for Under frequency protection (Hz) : ( $F_{uf}$ ) ⑫	45 – $F_n$ (in units of 0.1) ⑰ Tolerance : $\pm 0.1\text{Hz}$ Working mode : TRIP/ALARM/OFF	45Hz OFF
Time settings for Under frequency protection (s) : ( $t_{uf}$ ) ⑫	0.1 – 300 (in units of 0.1) Tolerance : $\pm 2\% \times (t_{uf})$ or $\pm 40\text{ms}$ , whichever is larger	10.0s
Frequency settings for Over frequency protection (Hz) : ( $F_{of}$ ) ⑫	$F_n - 65$ (in units of 0.1) ⑰ Tolerance : $\pm 0.1\text{Hz}$ Working mode : TRIP/ALARM/OFF	65Hz OFF
Time settings for Over frequency protection (s) : ( $t_{of}$ ) ⑫	0.1 – 300 (in units of 0.1) Tolerance : $\pm 2\% \times (t_{of})$ or $\pm 40\text{ms}$ , whichever is larger	10.0s
Power settings for Reverse power protection (kW) : ( $P_{rp}$ ) ⑥⑫	$(P_n) \times 4\% - 15\%$ (in units of 0.5%) Tolerance : $-20\% - +0\%$ Working mode : TRIP/ALARM/OFF	4% OFF
Time settings for Reverse power protection (s) : ( $t_{rp}$ ) ⑪⑫	0.5 – 25 (in units of 0.5) Tolerance : $-15\% \times (t_{rp}) - 0\text{ms} - +15\% \times (t_{rp}) + 100\text{ms}$	5s
Current settings for Unbalance current protection (%) : ( $I_{unbc}$ ) ⑫	2 – 90 (in units of 1) Tolerance : $\pm 5\%$ Working mode : TRIP/ALARM/OFF	50% OFF
Time settings for Unbalance current protection (s) : ( $t_{unbc}$ ) ⑫	0.5 – 60 (in units of 0.1) Tolerance : $\pm 2\% \times (t_{unbc})$ or $\pm 40\text{ms}$ , whichever is larger	10s
Voltage settings for Unbalance voltage protection (%) : ( $U_{unbv}$ ) ⑫	2 – 90 (in units of 1) Tolerance : $\pm 2\%$ Working mode : TRIP/ALARM/OFF	30% OFF
Time settings for Unbalance voltage protection (s) : ( $t_{unbv}$ ) ⑫	0.5 – 60 (in units of 0.1) Tolerance : $\pm 2\% \times (t_{unbv})$ or $\pm 40\text{ms}$ , whichever is larger	10s
Temperature settings for Contact temperature monitoring (°C) : ( $T_{oh}$ ) ⑧	105 – 155 (in units of 10) Tolerance : $\pm 10\%$ ⑭ Working mode : ALARM/OFF	155°C OFF
Time settings for Contact temperature monitoring (s) : ( $t_{oh}$ ) ⑧	50ms or less	—
Switching of starting characteristics	COLD/HOT	COLD

① : The setting current and time settings can be set to 2 type values as "Setting A" and "Setting B".

② : If " $I_L$ " is set to "OFF", the Preferential trip alarm1 and Preferential trip alarm2 functions will also be non tripping.

③ : Short time delay trip and instantaneous trip can not both be set to "OFF".

④ :  $Thi$  (L characteristic) : Time settings at  $(I_L) \times 600\%$  Other characteristics : Time settings at  $(I_L) \times 300\%$

⑤ : If the Long time delay trip characteristic is  $Thi$  (L characteristic) : Time setting at  $(I_P) \times 600\%$

If the Long time delay trip characteristic is except for  $Thi$  (L characteristic) : Time setting at  $(I_P) \times 300\%$ .

⑥ : The rated power ( $P_n$ ) can be specified between 50kW and 9.995kW in unit of 5kW.

⑦ : If the  $(I_L) \times (0.5 \text{ to } 2.0)$  value exceeds the rated current value  $I_n$ , the setting current value will be set to the rated current value.

⑧ : This function is optional and can not be install for Fixed type.

⑨ : When placing an order of AX106S and AX106H, specify the rated current " $I_n$ " from 400A or 630A.

⑩ : If the products are used in the condition of 3-phase 3-wire, please set the "OFF" setting.

⑪ : Time setting at  $(I_P) \times 100\%$ .

⑫ : Working mode can be set to Trip (Trip the ACB at each setting value), Alarm (Output the alarm at each setting value), or OFF (disable the function).

⑬ : If the products are used in the 3-phase 3-wire, voltage settings can be selected phase voltage or line voltage.

⑭ : Accuracy at the ambient temperature between 20 – 50°C.

⑮ : If not otherwise specified, the product will be delivered with "Default settings" in the table.

⑯ : AOX-LSI+ can not be applied to AX120S and AX120H.

⑰ : " $F_n$ " means rated frequency (50Hz or 60Hz).



## Measurement items (Smart type)

Main Measurement items and those accuracies are as follows.

Measurement items		Measurement accuracy ①
Voltage	Line voltage (instantaneous)	Class 0.5
	Line voltage (maximum)	
	Line voltage (minimum)	
	Line voltage (average)	
	Phase voltage (instantaneous) ②	Class 0.5
	Phase voltage (maximum) ②	
	Phase voltage (minimum) ②	
	Phase voltage (average) ②	
Voltage unbalance	Line voltage unbalance	Class 1
	Line voltage unbalance (maximum)	
	Line voltage unbalance (minimum)	
	Phase voltage unbalance ②	
	Phase voltage unbalance (maximum) ②	
	Phase voltage unbalance (minimum) ②	
Phase current	Phase current (instantaneous)	Class 0.5
	Phase current (maximum)	
	Phase current (minimum)	
	Phase current (average)	
	Demand value of phase current	
	Demand value of phase current (maximum)	
Current unbalance	Current unbalance (instantaneous)	Class 1
	Current unbalance (maximum)	
	Current unbalance (minimum)	
Power factor	Power factor (instantaneous)	Class 0.5
	Power factor (maximum)	
Frequency	Frequency (instantaneous)	Class 0.02
	Frequency (maximum)	
	Frequency (minimum)	

① Class is the measurement accuracy specified in IEC61557-12.

② It is possible to measure if the circuit is 3pole 4wire.


Measurement items		Measurement accuracy ①
Power	Active power (instantaneous)	Class 1
	Active power (maximum)	
	Active power (minimum)	
	Demand value of active power	
	Demand value of active power (maximum)	Class 2
	Total active power	
	Reactive power (instantaneous)	
	Reactive power (maximum)	
	Reactive power (minimum)	
	Demand value of reactive power	
	Demand value of reactive power (maximum)	Class 1
	Total reactive power	
	Apparent power (instantaneous)	
	Apparent power (maximum)	
	Apparent power (minimum)	
	Demand value of apparent power	
	Demand value of apparent power (maximum)	
	Total apparent power	
Energy	Active energy	Class 1
	Reactive energy	Class 2
	Apparent energy	Class 1
Total harmonic distortion	Line voltage (instantaneous)	Class 1
	Line voltage (maximum)	
	Line voltage (minimum)	
	Phase voltage (instantaneous) ②	
	Phase voltage (maximum) ②	
	Phase voltage (minimum) ②	
	Phase current (instantaneous)	
	Phase current (maximum)	
	Phase current (minimum)	

# 6 Specifications

## Protection characteristic for standard type (AOX-LI, AOX-LSI, AOX-LSIG)


### Long time delay trip characteristics

[AX106S, AX108S, AX110S, AX112S, AX116S, AX106H, AX108H, AX110H, AX112H, AX116H]

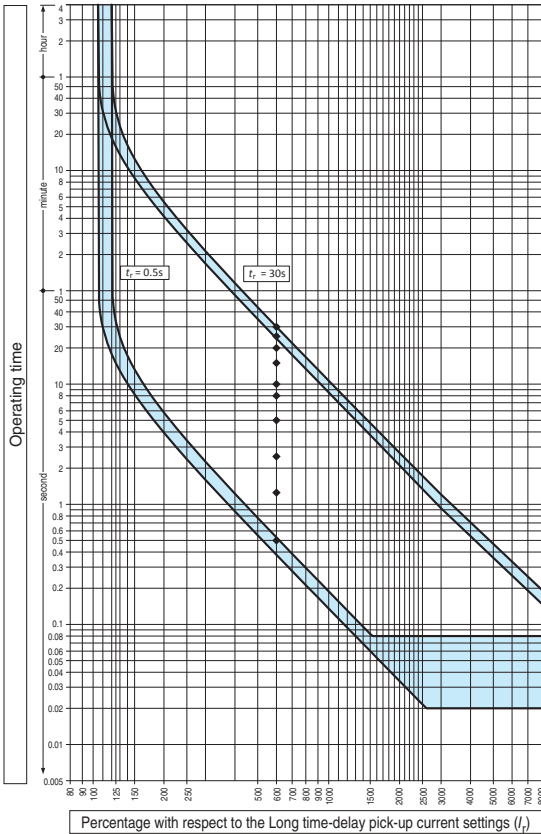


### Short time delay trip characteristics


[AX106S, AX108S, AX110S, AX112S, AX116S, AX106H, AX108H, AX110H, AX112H, AX116H]

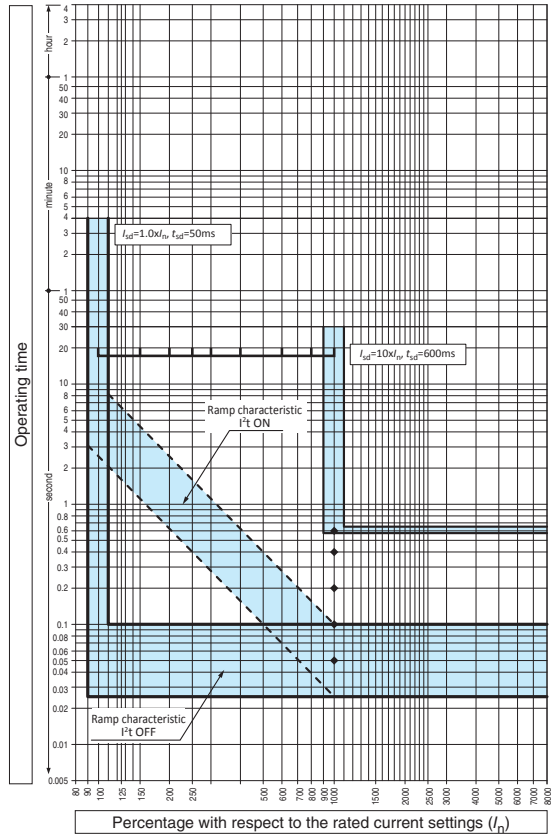

[AX120S, AX120H]

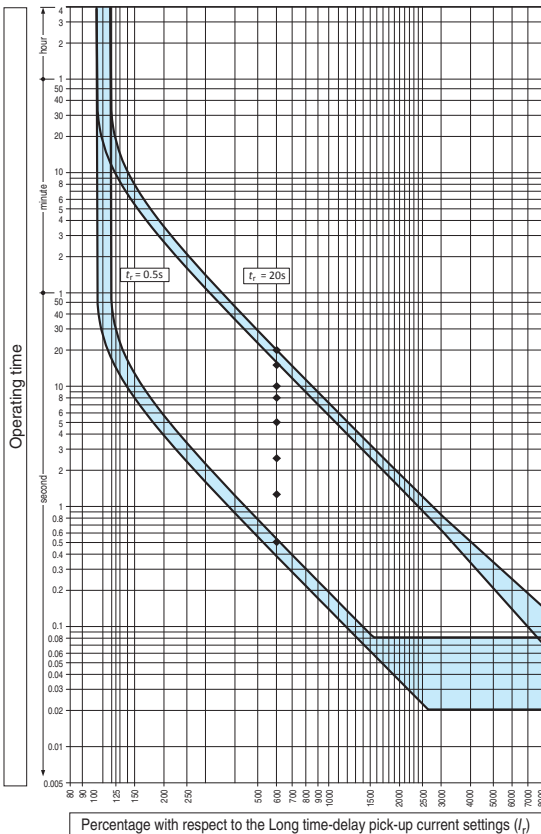

[AX120S, AX120H]

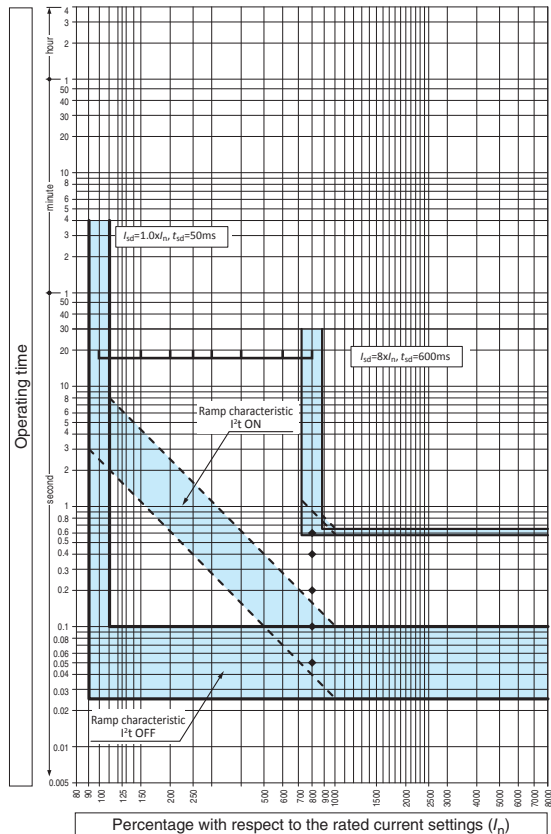


\* Protection characteristic that is only included with AOX-LSI and AOS-LISG.


## Protection characteristic for standard type (AOX-LI, AOX-LSI, AOX-LSIG)

### Instantaneous tripping characteristics

[AX106S, AX108S, AX110S, AX112S, AX116S, AX106H, AX108H, AX110H, AX112H, AX116H]

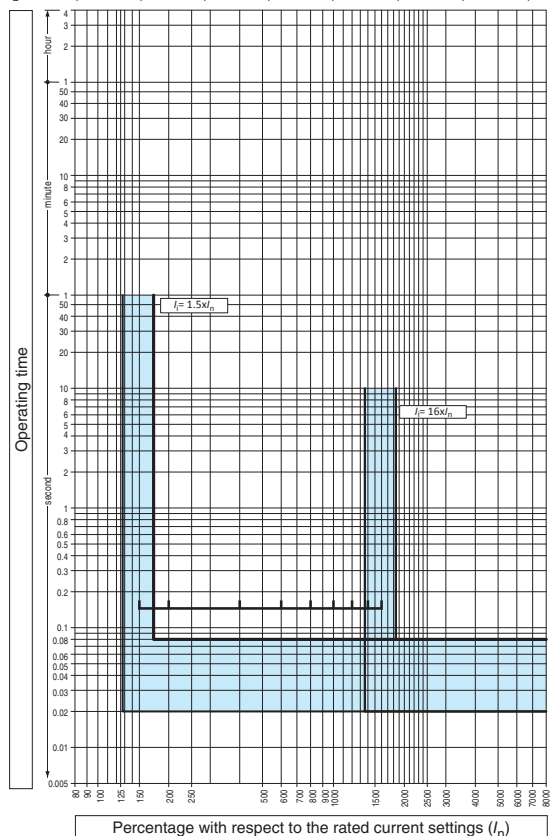


[AX120S, AX120H]

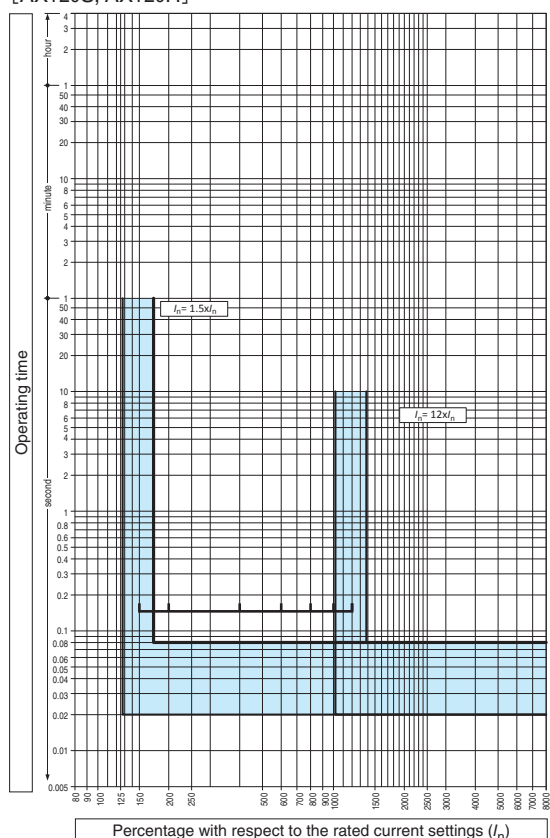

### Preferential trip alarm characteristics

[All types]

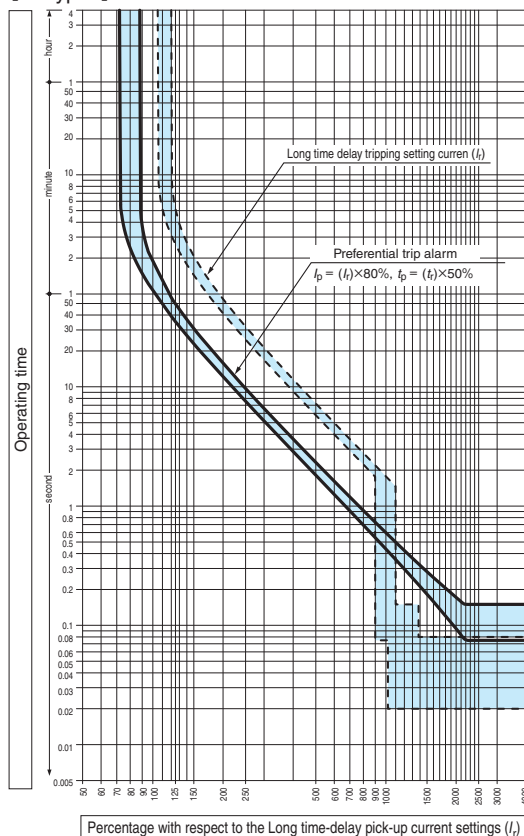

\* 1 : Long time, Short time and Instantaneous trip characteristics shown with the dashed line are characteristics under the following conditions.


$$I_t = I_n, t_t = 5(s), I_p = 12 \times I_n, I_{sd} = 10 \times I_n, t_{sd} = 100(ms), I^2t = OFF$$

# 6 Specifications

## Protection characteristic for standard type (AOX-LI, AOX-LSI, AOX-LSIG)


### N-phase protection function

[All types]

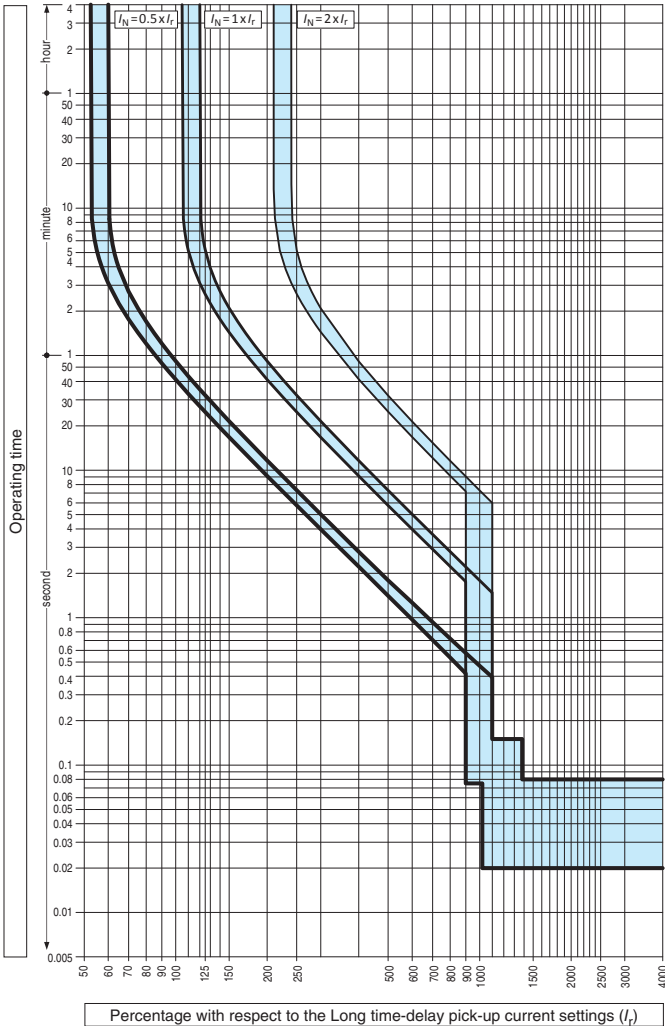

### Ground fault trip characteristics

[All types]

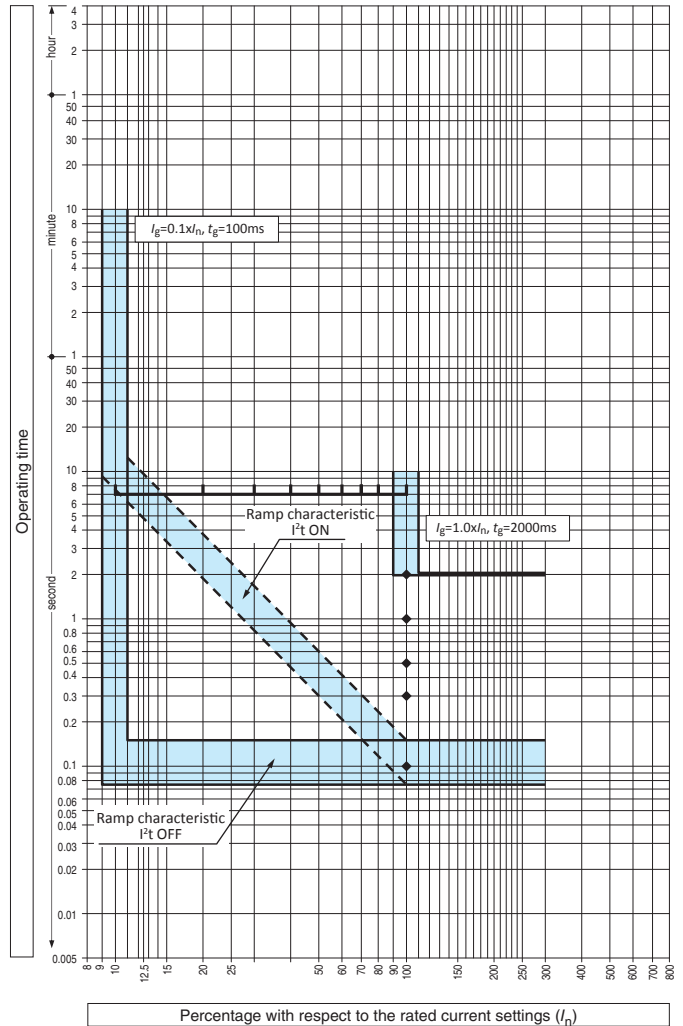


\* Protection characteristic that is only included with AOX-LSIG.


## Protection characteristic for standard type (AOX-LSIR)

[AX106S, AX108S, AX110S, AX112S, AX116S, AX106H, AX108H, AX110H, AX112H, AX116H]

### Long time delay trip characteristics

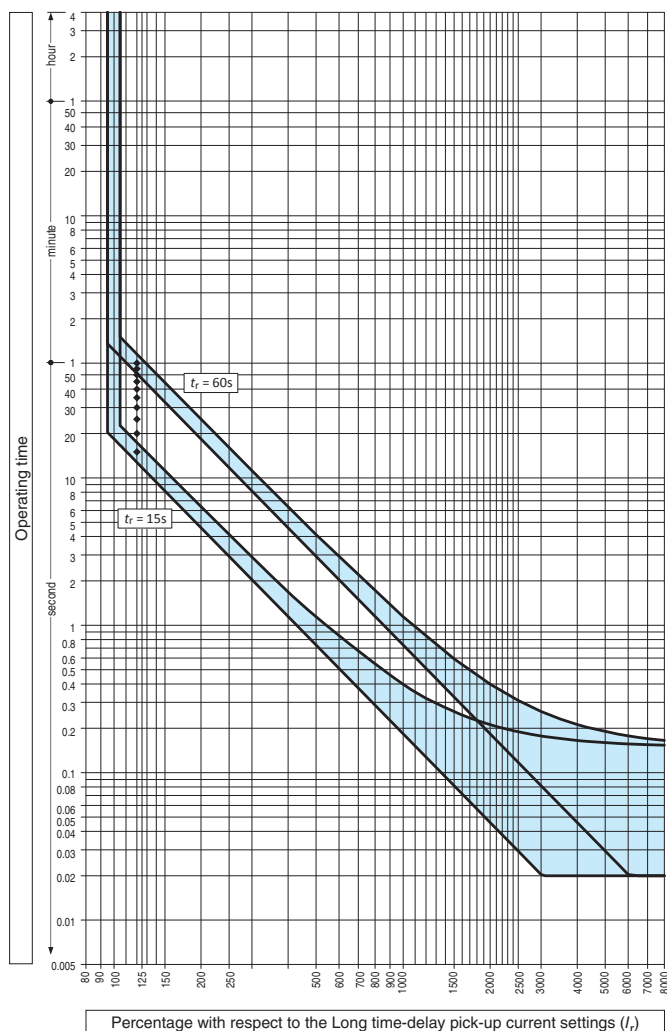

### Short time delay trip characteristics

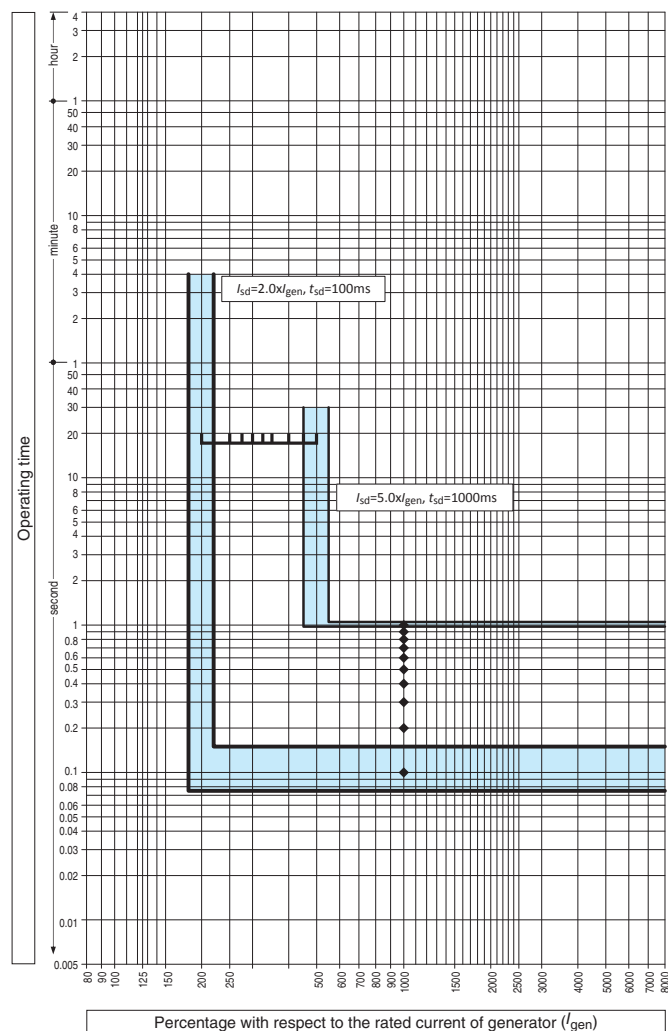




# 6 Specifications


## Protection characteristic for standard type (AOX-LSIR)

[AX106S, AX108S, AX110S, AX112S, AX116S, AX106H, AX108H, AX110H, AX112H, AX116H]

### Instantaneous tripping characteristics

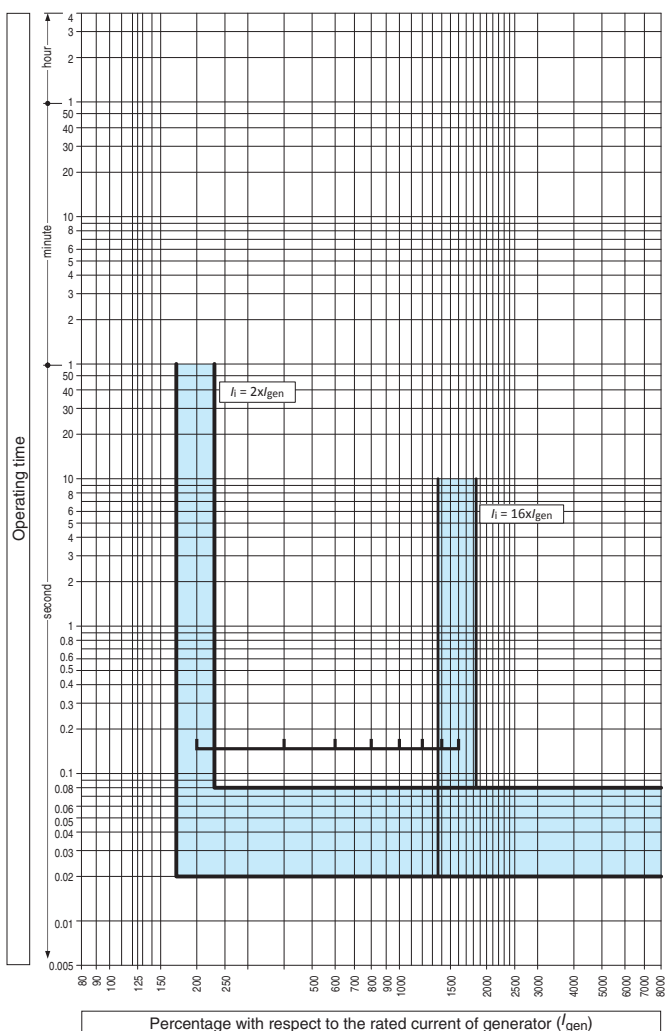


### Preferential trip alarm characteristics

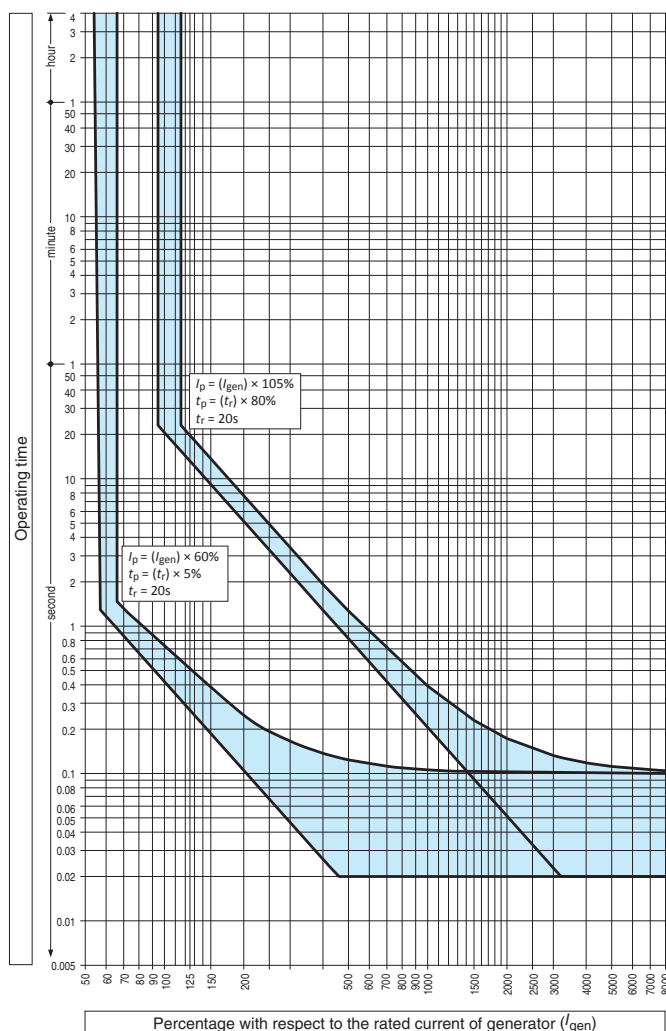

## Protection characteristic for standard type (AOX-LSIR)

[AX106S, AX108S, AX110S, AX112S, AX116S, AX106H, AX108H, AX110H, AX112H, AX116H]

### Reverse power tripping characteristics

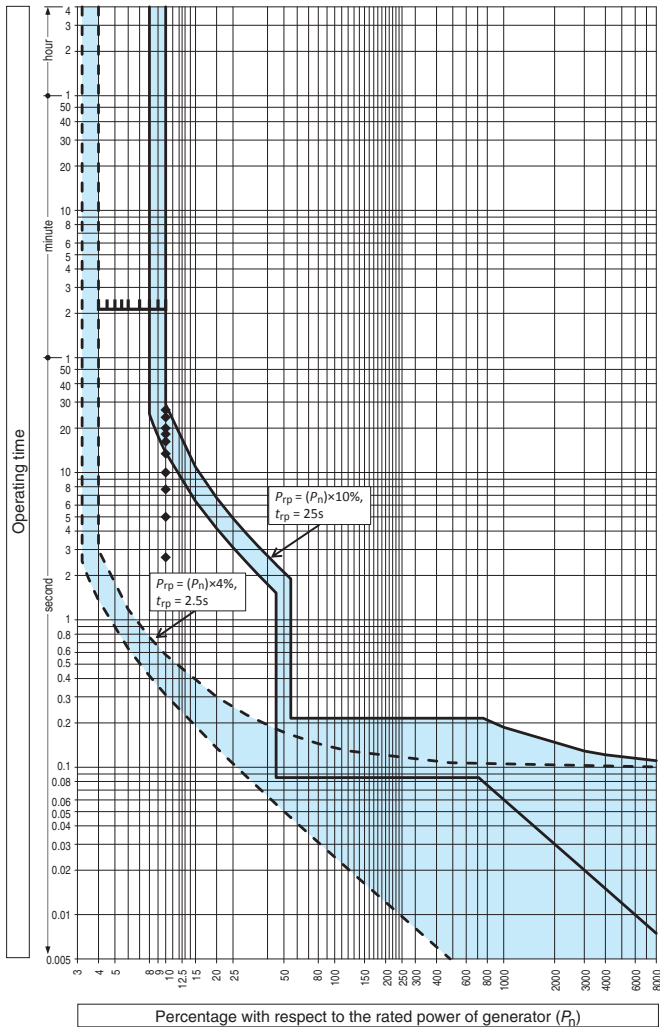


# 6 Specifications


## Protection characteristics for smart type (AOX-LSI+, AOX-LSIG+)

[AX106S, AX108S, AX110S, AX112S, AX116S, AX106H, AX108H, AX110H, AX112H, AX116H]

### Long time delay trip characteristics (Thi)

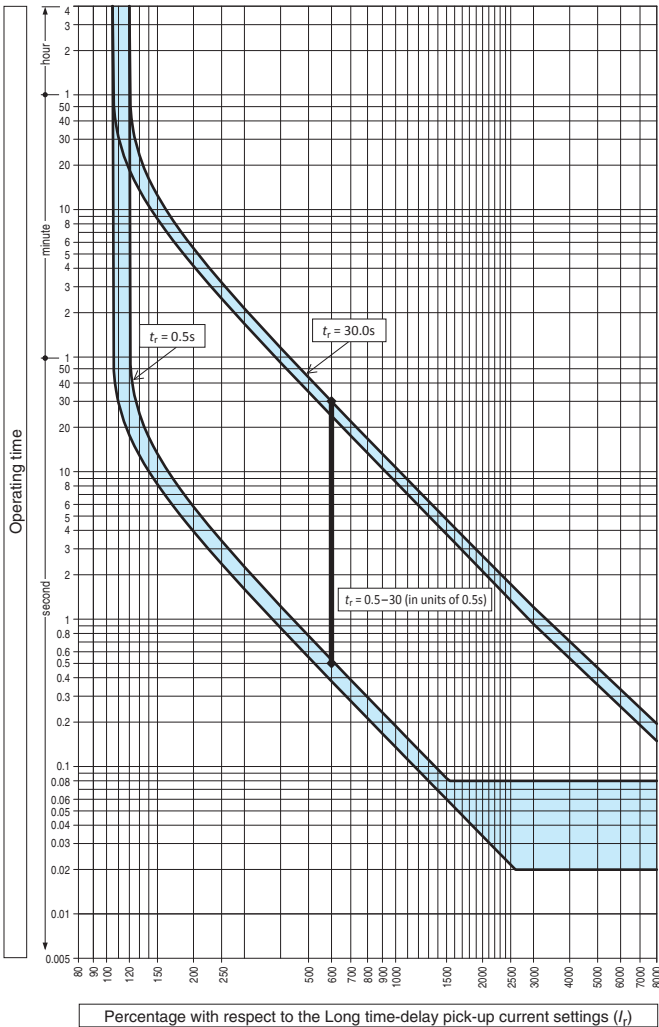

### Long time delay trip characteristics ( $I^{0.02}t$ )

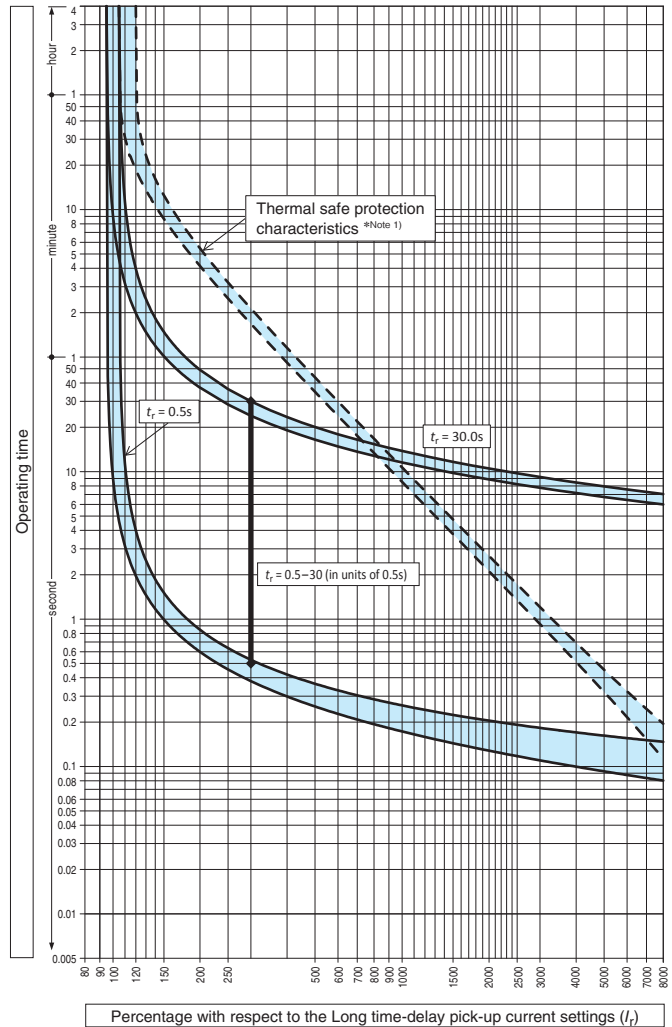

\* Note 1) : Thermal safe protection characteristics refer to the overheating protection characteristics of the ACB.


These characteristic are identical to the characteristic curve for long time delay trip characteristics (Thi) with  $I_r = I_n$ ,  $t_r = 30.0$  s.

In the area where the operating time of thermal safe protection characteristic is faster than the operating time of Long time delay trip characteristic, the thermal safe protection characteristic takes priority and the ACB is tripped.


## Protection characteristics for smart type (AOX-LSI+, AOX-LSIG+)

[AX106S, AX108S, AX110S, AX112S, AX116S, AX106H, AX108H, AX110H, AX112H, AX116H]

### Long time delay trip characteristics ( $I_t$ )

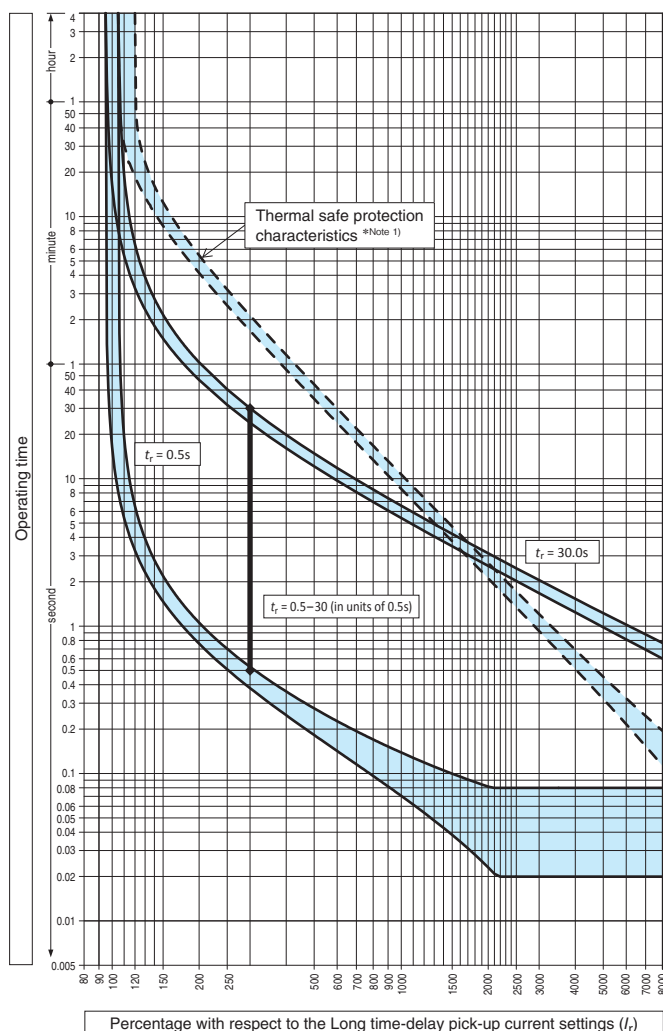

### Long time delay trip characteristics ( $I^2t$ )

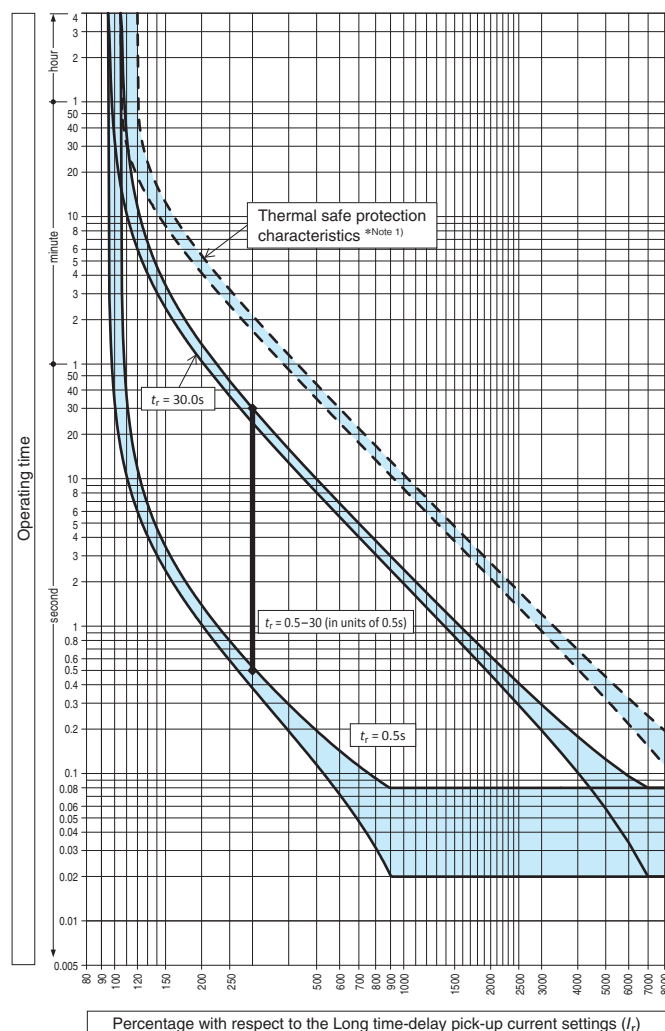

\* Note 1) : Thermal safe protection characteristics refer to the overheating protection characteristics of the ACB.

These characteristic are identical to the characteristic curve for long time delay trip characteristics ( $I_{th}$ ) with  $I_r = I_n$ ,  $t_r = 30.0$  s.


In the area where the operating time of thermal safe protection characteristic is faster than the operating time of Long time delay trip characteristic, the thermal safe protection characteristic takes priority and the ACB is tripped.

# 6 Specifications


## Protection characteristics for smart type (AOX-LSI+, AOX-LSIG+)

[AX106S, AX108S, AX110S, AX112S, AX116S, AX106H, AX108H, AX110H, AX112H, AX116H]

### Long time-delay trip characteristics ( $I^3t$ )

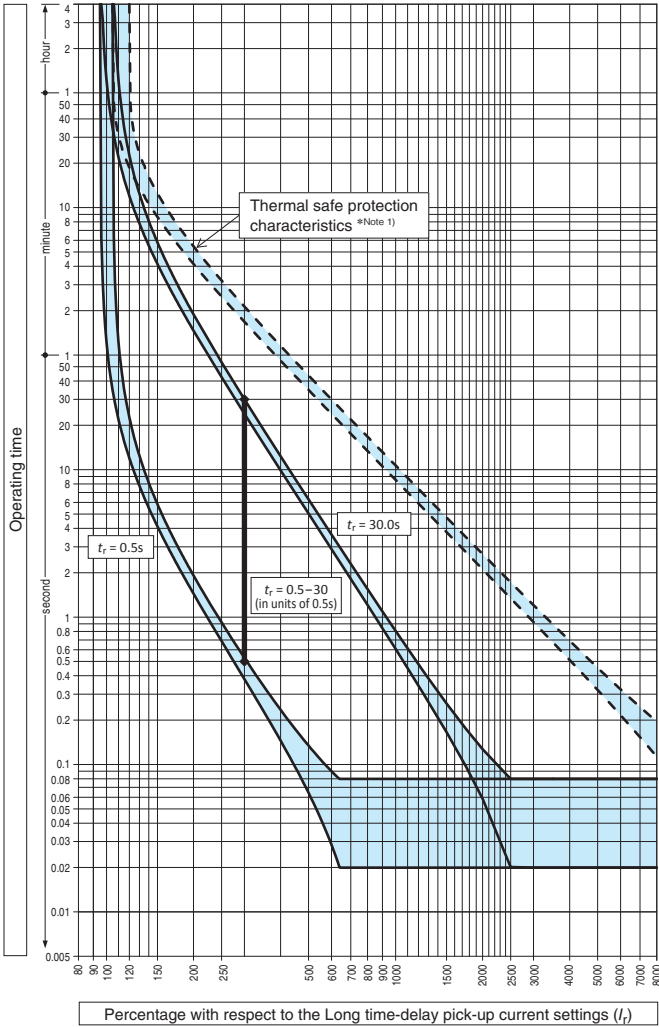

### Long time-delay trip characteristics ( $I^4t$ )

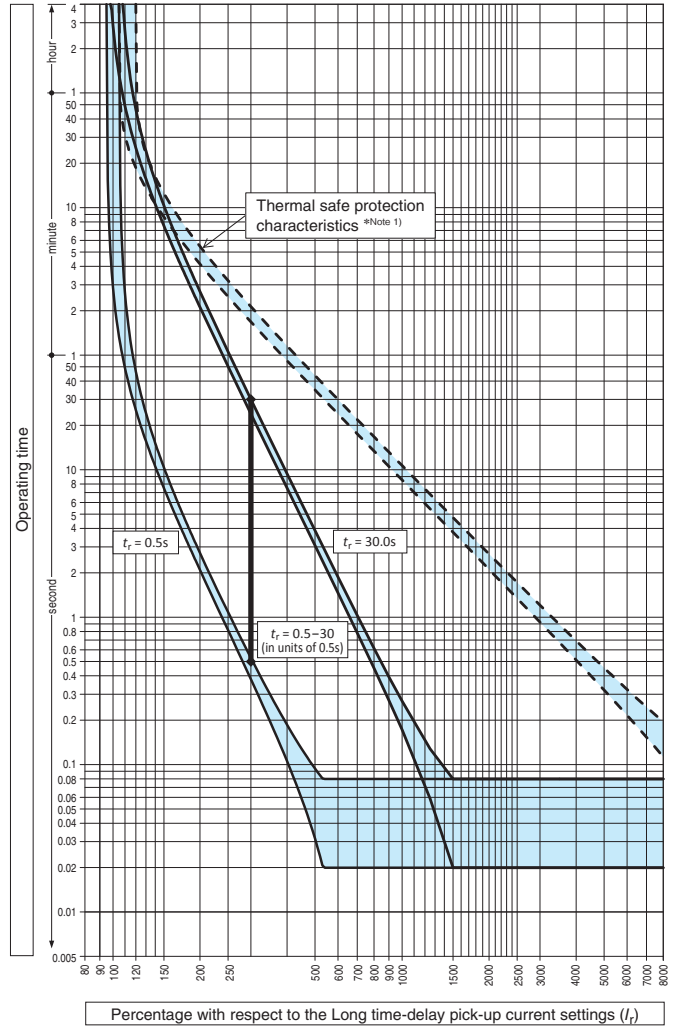

\* Note 1) : Thermal safe protection characteristics refer to the overheating protection characteristics of the ACB.

These characteristic are identical to the characteristic curve for long time delay trip characteristics ( $I^3t$ ) with  $I_r = I_n$ ,  $t_r = 30.0$  s.


In the area where the operating time of thermal safe protection characteristic is faster than the operating time of Long time delay trip characteristic, the thermal safe protection characteristic takes priority and the ACB is tripped.




## Protection characteristics for smart type (AOX-LSI+, AOX-LSIG+)

[AX106S, AX108S, AX110S, AX112S, AX116S, AX106H, AX108H, AX110H, AX112H, AX116H]

### Short time-delay trip characteristics

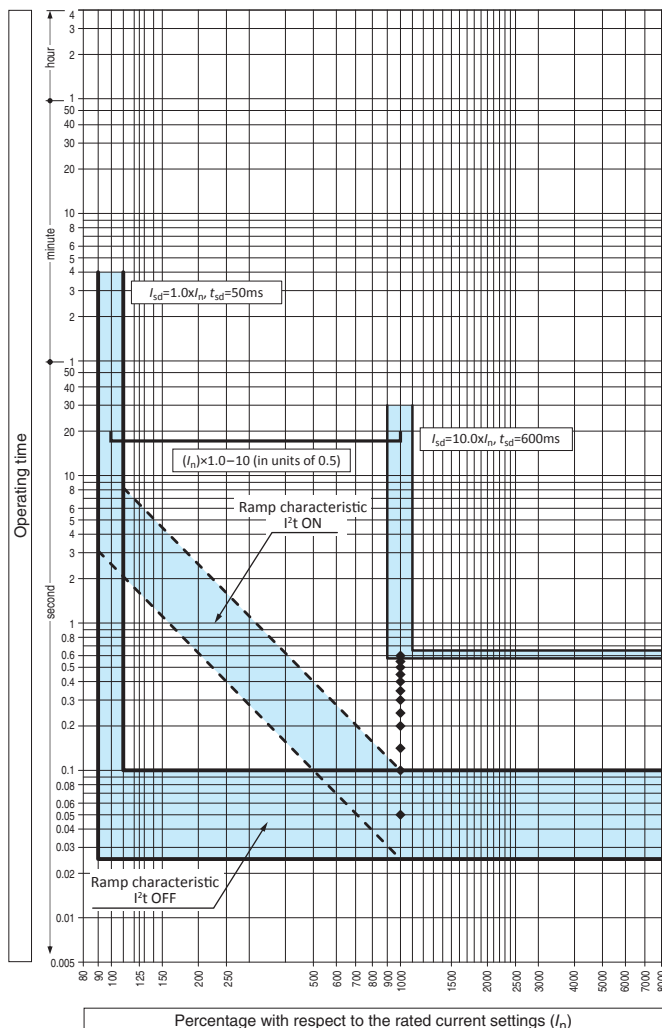

### Instantaneous tripping characteristics

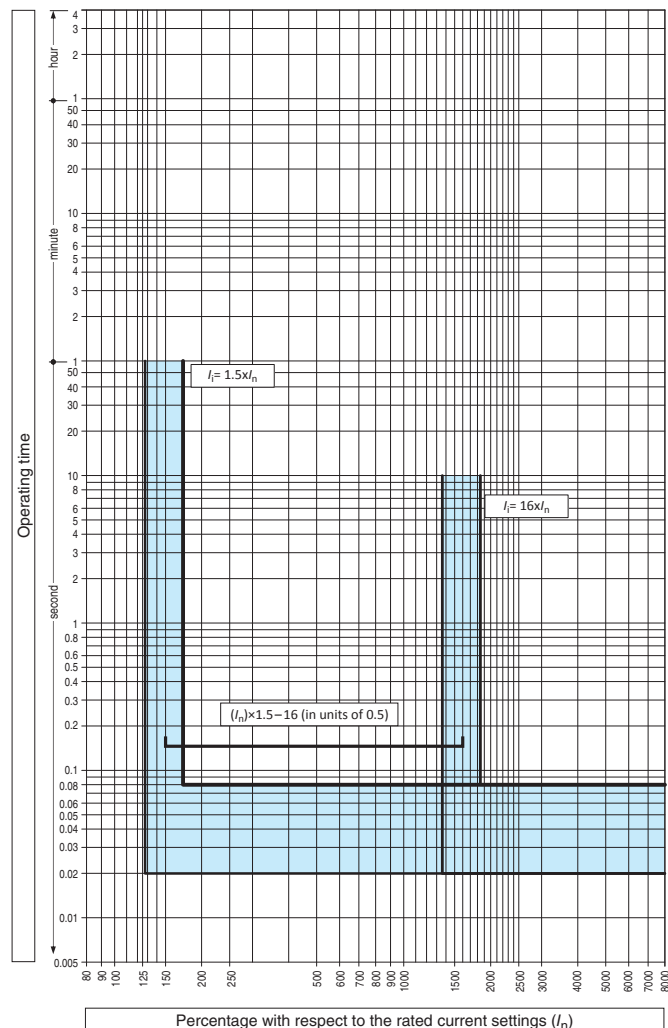


# 6 Specifications

## Protection characteristics for smart type (AOX-LSI+, AOX-LSIG+)


[AX106S, AX108S, AX110S, AX112S, AX116S, AX106H, AX108H, AX110H, AX112H, AX116H]

### Preferential trip alarm characteristics

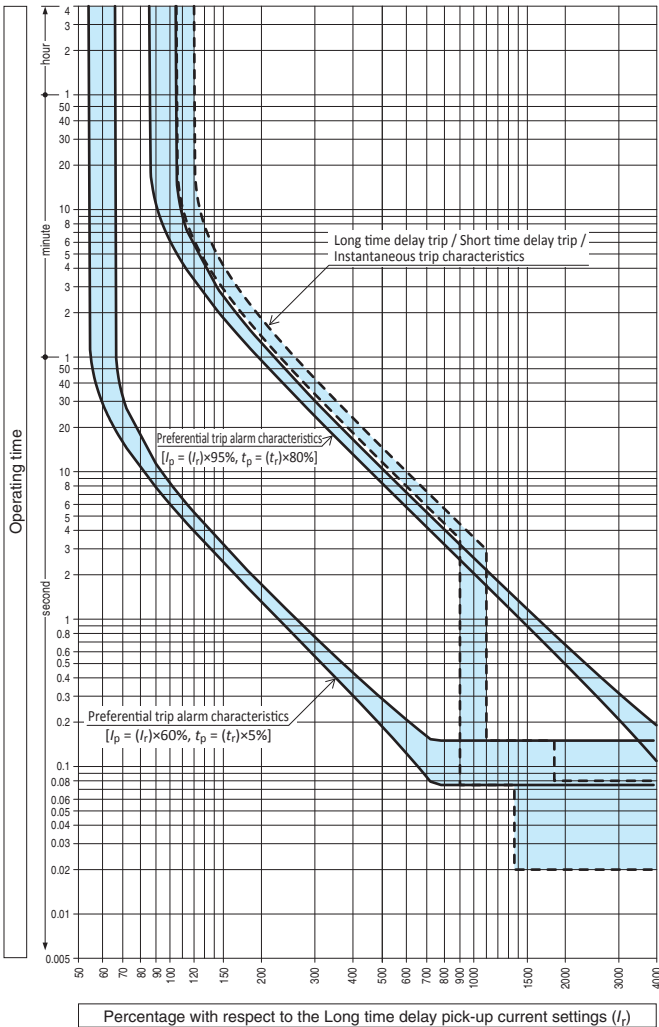

- \* 1 : Characteristics of preferential trip alarm 1 and preferential trip alarm 2 when the long time-delay trip setting is  $T_{hi}$  (standard setting).
- \* 2 : Long time, Short time and Instantaneous trip characteristics shown with the dashed line are characteristics under the following conditions.

$$I_r = I_n, t_r = 10.0s, I_{sd} = 10.0 \times I_n, t_{sd} = 100ms, I_f = 16 \times I_n, I^2t = OFF$$

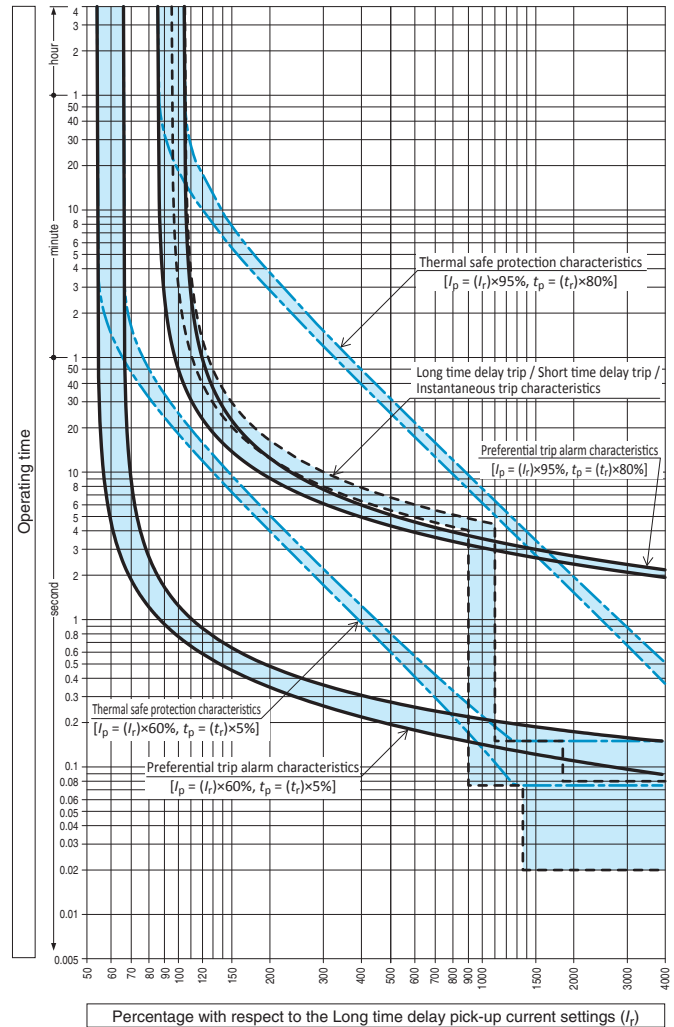

- \* 1 : Characteristics of preferential trip alarm 1 and preferential trip alarm 2 when the long time-delay trip setting is  $I^{0.02}t$ .
- \* 2 : Long time, Short time and Instantaneous trip characteristics shown with the dashed line are characteristics under the following conditions.

$$I_r = I_n, t_r = 10.0s, I_{sd} = 10.0 \times I_n, t_{sd} = 100ms, I_f = 16 \times I_n, I^2t = OFF$$


- \* 3 : The thermal safe protection characteristic is the overheating protection characteristic of the air circuit breaker. This characteristic is the preferential trip alarm characteristic corresponding to the thermal safe protection characteristic of the long time-delay trip characteristic ( $I^{0.02}t$ ) (Please refer to P. 38).

In areas where the thermal safe protection characteristic operating time is faster than the preferential trip alarm characteristic operating time, the preferential trip alarm is activated with priority on the thermal safe protection characteristic.


## Protection characteristics for smart type (AOX-LSI+, AOX-LSIG+)

[AX106S, AX108S, AX110S, AX112S, AX116S, AX106H, AX108H, AX110H, AX112H, AX116H]

### Preferential trip alarm characteristics

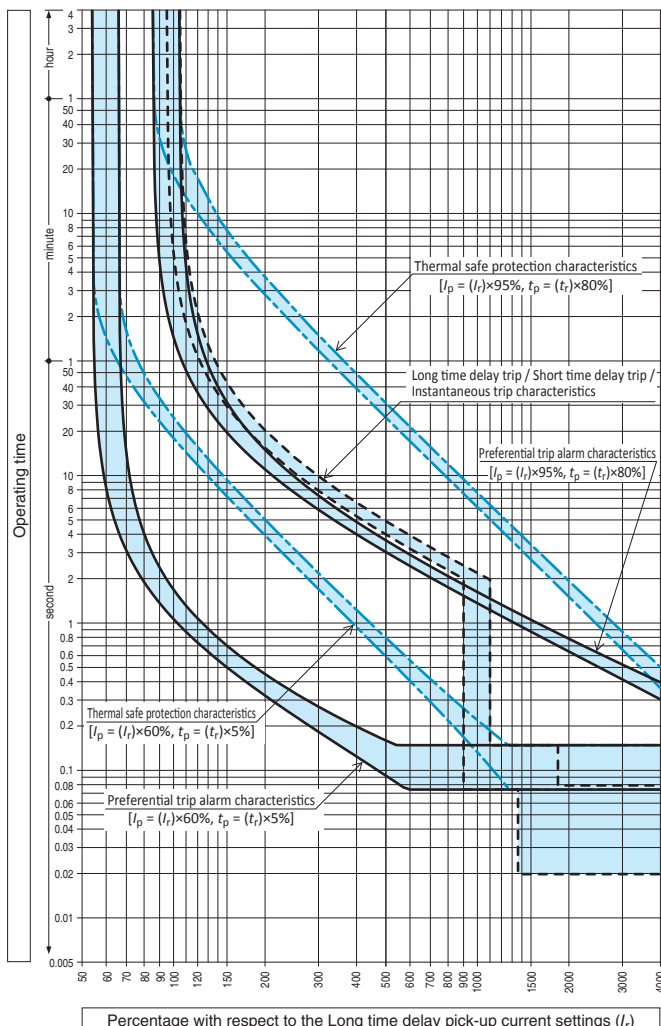

- \* 1 : Characteristics of preferential trip alarm 1 and preferential trip alarm 2 when the long time-delay trip setting is  $I_t$ .
- \* 2 : Long time, Short time and Instantaneous trip characteristics shown with the dashed line are characteristics under the following conditions.  
 $I_r = I_n$ ,  $t_r = 10.0s$ ,  $I_{sd} = 10.0$ ,  $t_{sd} = 100ms$ ,  $I_i = 16 \times I_n$ ,  $I^2t = OFF$
- \* 3 : The thermal safe protection characteristic is the overheating protection characteristic of the air circuit breaker.  
 This characteristic is the preferential trip alarm characteristic corresponding to the thermal safe protection characteristic of the long time-delay trip characteristic ( $I_t$ ) (Please refer to P. 39).  
 In areas where the thermal safe protection characteristic operating time is faster than the preferential trip alarm characteristic operating time, the preferential trip alarm is activated with priority on the thermal safe protection characteristic.

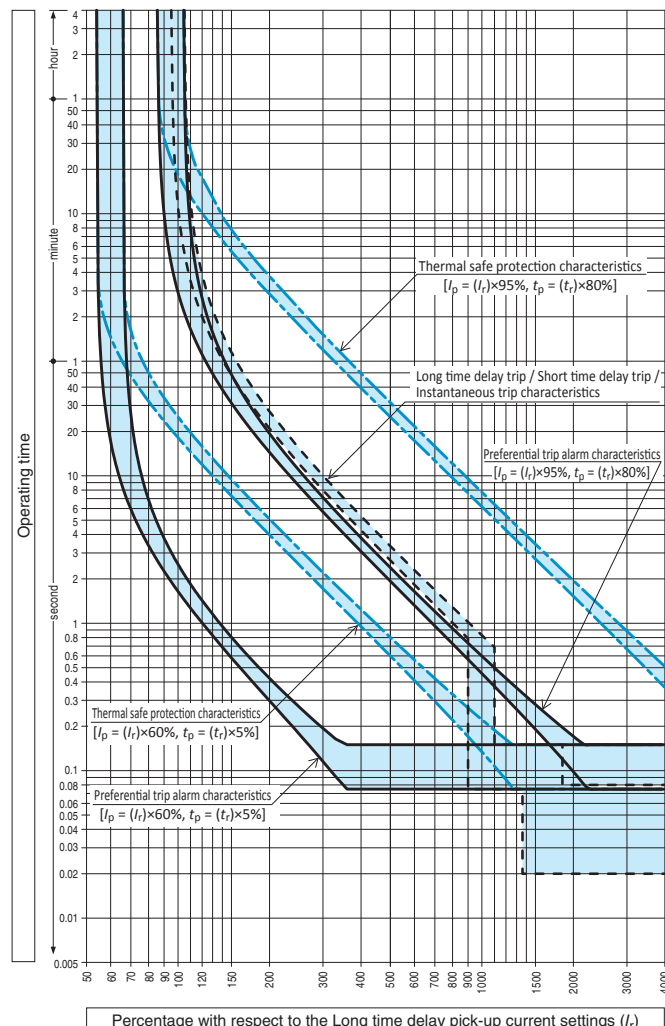


- \* 1 : Characteristics of preferential trip alarm 1 and preferential trip alarm 2 when the long time-delay trip setting is  $I_t^2$ .
- \* 2 : Long time, Short time and Instantaneous trip characteristics shown with the dashed line are characteristics under the following conditions.  
 $I_r = I_n$ ,  $t_r = 10.0s$ ,  $I_{sd} = 10.0$ ,  $t_{sd} = 100ms$ ,  $I_i = 16 \times I_n$ ,  $I^2t = OFF$
- \* 3 : The thermal safe protection characteristics are the overheating protection characteristics of the air circuit breaker.  
 These characteristics are the preferential trip alarm characteristics corresponding to the thermal safe protection characteristics of the long time-delay trip characteristics ( $I_t^2$ ) (Please refer to P. 39).  
 In areas where the thermal safe protection characteristic operating time is faster than the preferential trip alarm characteristic operating time, the preferential trip alarm is activated with priority on the thermal safe protection characteristic.

# 6 Specifications

## Protection characteristics for smart type (AOX-LSI+, AOX-LSIG+)

[AX106S, AX108S, AX110S, AX112S, AX116S, AX106H, AX108H, AX110H, AX112H, AX116H]

### Preferential trip alarm characteristics

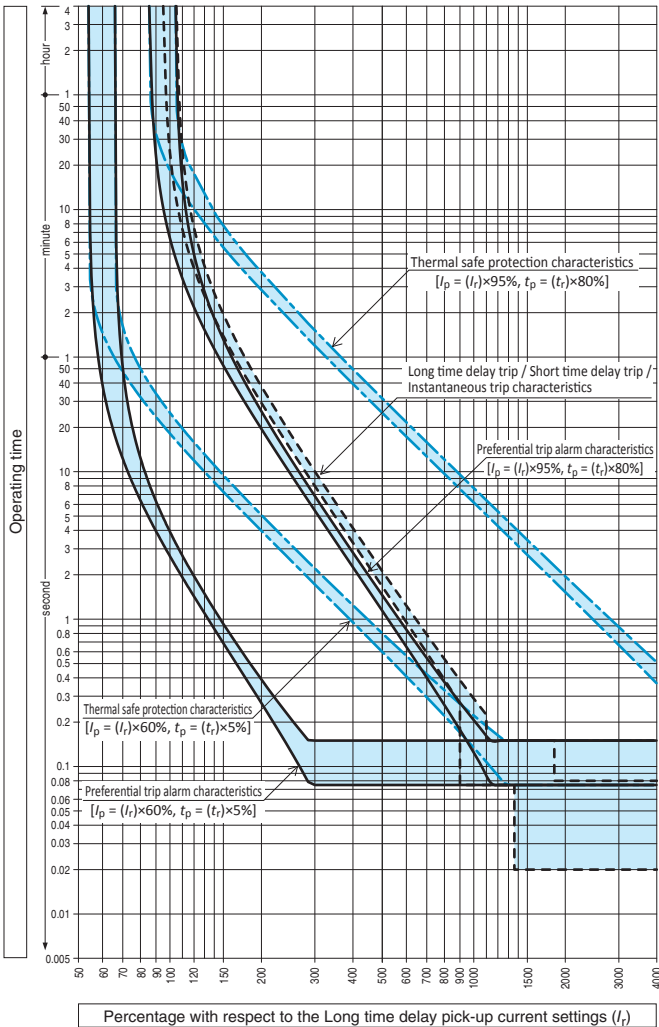


\* 1 : Characteristics of preferential trip alarm 1 and preferential trip alarm 2 when the long time-delay trip setting is  $I^3t$ .

\* 2 : Long time, Short time and Instantaneous trip characteristics shown with the dashed line are characteristics under the following conditions.

$$I_r = I_n, t_r = 10.0s, I_{sd} = 10.0, t_{sd} = 100ms, I_r = 16 \times I_n, I^2t = OFF$$

\* 3 : The thermal safe protection characteristics are the overheating protection characteristics of the air circuit breaker. These characteristics are the preferential trip alarm characteristics corresponding to the thermal safe protection characteristics of the long time-delay trip characteristics ( $I^3t$ ) (Please refer to P. 40).

In areas where the thermal safe protection characteristic operating time is faster than the preferential trip alarm characteristic operating time, the preferential trip alarm is activated with priority on the thermal safe protection characteristic.

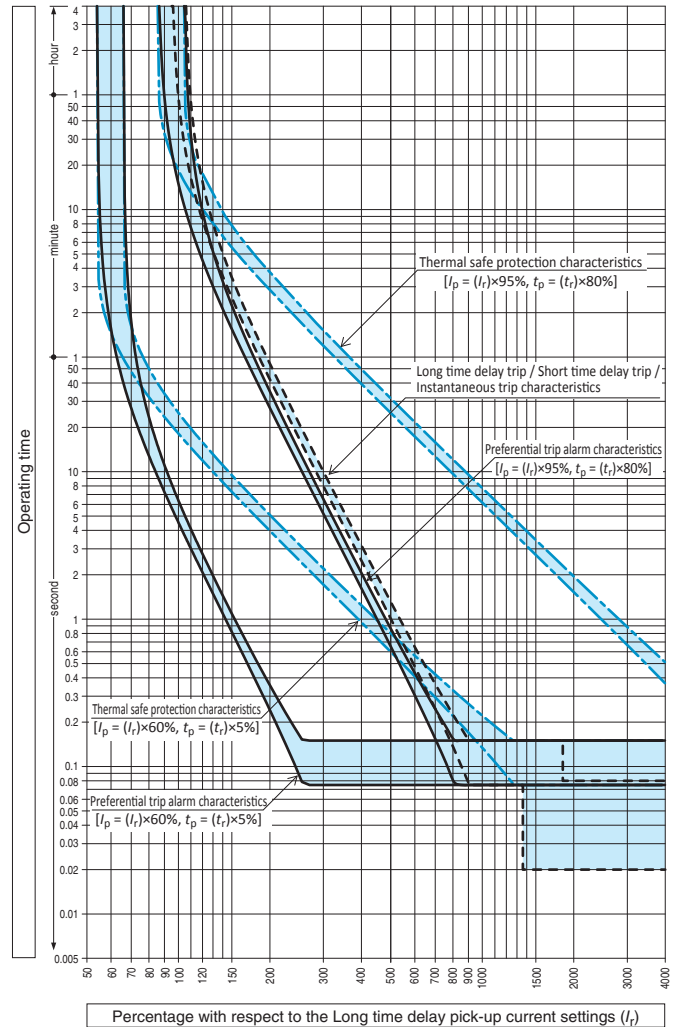

\* 1 : Characteristics of preferential trip alarm 1 and preferential trip alarm 2 when the long time-delay trip setting is  $I^3t$ .

\* 2 : Long time, Short time and Instantaneous trip characteristics shown with the dashed line are characteristics under the following conditions.

$$I_r = I_n, t_r = 10.0s, I_{sd} = 10.0, t_{sd} = 100ms, I_r = 16 \times I_n, I^2t = OFF$$


\* 3 : The thermal safe protection characteristics are the overheating protection characteristics of the air circuit breaker. These characteristics are the preferential trip alarm characteristics corresponding to the thermal safe protection characteristics of the long time-delay trip characteristics ( $I^3t$ ) (Please refer to P. 40).

In areas where the thermal safe protection characteristic operating time is faster than the preferential trip alarm characteristic operating time, the preferential trip alarm is activated with priority on the thermal safe protection characteristic.


## Protection characteristics for smart type (AOX-LSIG+)

[AX106S, AX108S, AX110S, AX112S, AX116S, AX106H, AX108H, AX110H, AX112H, AX116H]

### Neutral protection characteristics

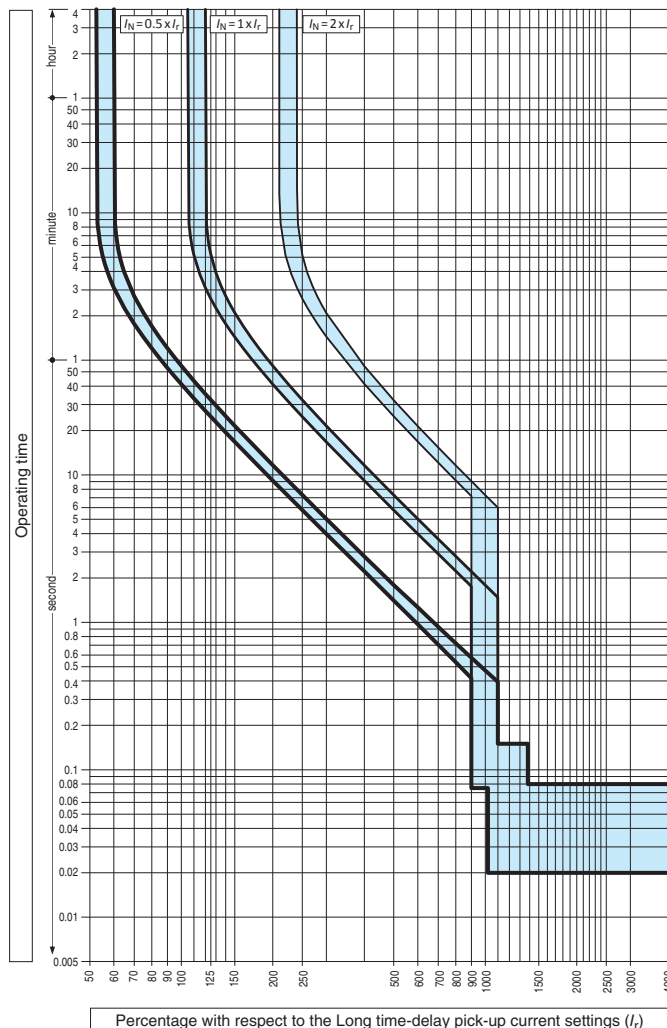

### Ground fault trip characteristics

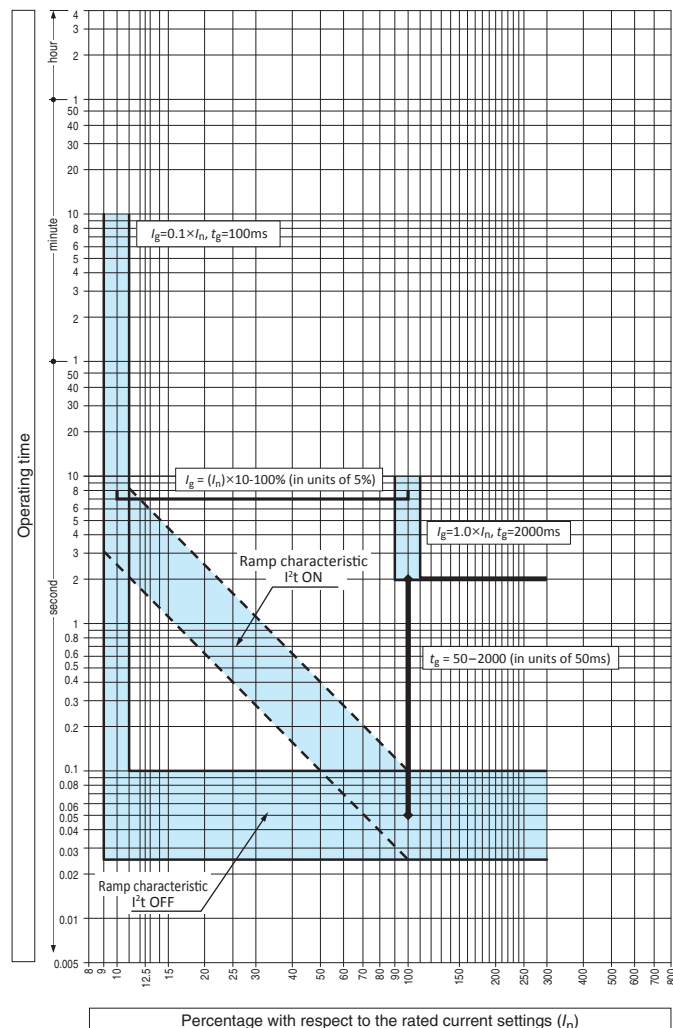




# 6 Specifications

## Protection characteristics for smart type (AOX-LSIG+)

[AX106S, AX108S, AX110S, AX112S, AX116S, AX106H, AX108H, AX110H, AX112H, AX116H]

### Reverse power protection charcteristics

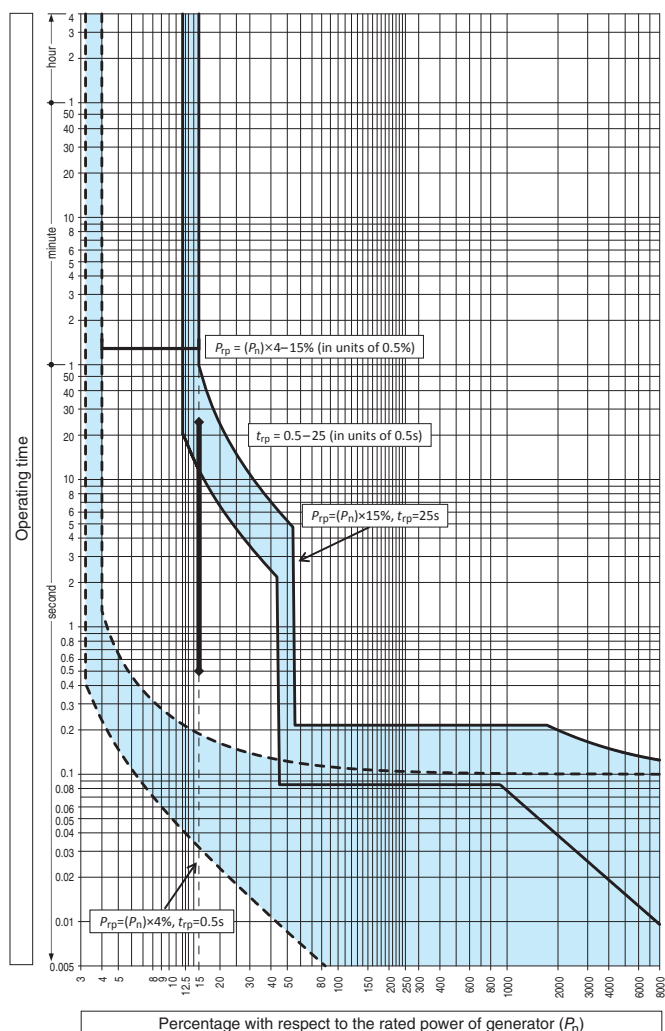

## Contact module

Contact module that provides a contact output to trip the ACB when the Over-Current Release (OCR) protection function is activated or an alarm, malfunction or switching are triggered.

### ● Standard type

Contact outputs are provided with the following output terminal layouts. When several trip or alarm function as follows works, the condition of trip or alarm is indicated on the display of OCR.

Output terminal number	Contact Output Type	Operational mode ①	Note
05 — 15	Long time delay trip	Self-hold	—
05 — 25	Short time delay trip, Instantaneous trip, Making current release, Instantaneous override trip	Self-hold	—
05 — 16	Ground fault trip	Self-hold	AOX-LSIG only
	Reverse power trip	Self-hold	AOX-LSIR only
05 — 06	Preferential trip alarm	Auto-reset	—
05 — 26	• Either trip operation occurs, excluding reverse power trip protection	Self-hold	—
	• Pick up operation occurs with long time-delay trip protection	Auto-reset	
	• Malfunction of hardware		

① Self-hold : The contact is closed and held on the closed position when the ACB is tripped by each protection function of above.  
If the Self-hold is unlocked, contact output condition can be unlocked from “close” to “open”, and the indication on the display is reset.

- \* Self-hold can be unlocked in two ways as follows,
  - Long press of “i” button in Over current release.
  - Apply 24V DC to the Digital input terminal.

Auto-reset : The contacts are closed when the working signal is input, the contacts are opened automatically when the working signal is reset.

### ● Smart type

For smart types, one contact output corresponding to the following protection operation and alarm operation can be assigned to each of the five types of output terminal numbers of above.

When the each operation works, the conditions of operation are indicated on the display of OCR.

Operation	Contact Output Types	Operational mode ①	Operation	Contact Output Types	Operational mode ①
Trip operation	Trip test	Self-hold	Alarm output	Disconnection of N-phase	Selectable from Self-hold/Auto-reset/Pulse
	Unbalance voltage protection (UNBV)	Self-hold		Malfunction of hardware	Selectable from Self-hold/Auto-reset/Pulse
	Unbalance current protection (UNBC)	Self-hold		Abnormal temperature in OCR	Selectable from Self-hold/Auto-reset/Pulse
	Over voltage protection (OV)	Self-hold		Long time-delay trip pick up	Selectable from Self-hold/Auto-reset/Pulse
	Under voltage protection (UV)	Self-hold		Pretrip alarm 1	Selectable from Self-hold/Auto-reset/Pulse
	Ground fault protection (GF)	Self-hold		Pretrip alarm 2	Selectable from Self-hold/Auto-reset/Pulse
	Making current release (MCR)	Self-hold		Voltage drop of built-in battery	Selectable from Self-hold/Auto-reset/Pulse
	Instantaneous override trip (IO)	Self-hold		Alarm group ②	Selectable from Self-hold/Auto-reset/Pulse
	Instantaneous trip (INST)	Self-hold		Custom alarm 1 to 12 ③	Selectable from Self-hold/Auto-reset/Pulse
	Short time-delay trip (ST)	Self-hold		Contact temperature monitoring (OH)	Selectable from Self-hold/Auto-reset/Pulse
	Long time-delay trip (LT)	Self-hold		Unbalance voltage protection (UNBV)	Selectable from Self-hold/Auto-reset/Pulse
Operation of ACB	Protection function group B	Selectable from Self-hold/Auto-reset/Pulse		Unbalance current protection (UNBC)	Selectable from Self-hold/Auto-reset/Pulse
	ON operation of ACB	Selectable from Self-hold/Auto-reset/Pulse		Reverse power trip function (RP)	Selectable from Self-hold/Auto-reset/Pulse
	OFF operation of ACB	Selectable from Self-hold/Auto-reset/Pulse		Over frequency protection (OF)	Selectable from Self-hold/Auto-reset/Pulse
Temporary motion restrain	Temporary stop of protection function ⑤	Selectable from Self-hold/Auto-reset/Pulse		Under frequency protection (UF)	Selectable from Self-hold/Auto-reset/Pulse
				Over voltage protection (OV)	Selectable from Self-hold/Auto-reset/Pulse
				Under voltage protection (UV)	Selectable from Self-hold/Auto-reset/Pulse

① : Self-hold :

a) In case of “Trip operation”

The contact is closed and held on the closed position when the ACB is tripped by each protection function of above.

If the Self-hold is unlocked, contact output condition can be unlocked from “close” to “open”, and the indication on the display is reset.

\* Self-hold can be unlocked in two ways as follows.

- Long press of “ON” button in Over current release.
- Apply 24V DC to the Digital input terminal. (Setting of digital input should be adjusted to “Remote reset”)

b) In case of “Operation of ACB”, “Temporary motion restrain” and “Alarm out put”

The contact is closed and held on the closed position when the “Operation of ACB” or “Temporary motion restrain” or “Alarm out put” works.

If the Self-hold is unlocked, contact output condition can be unlock from “close” to “open”, and the indication on the display is reset.

\* Self-hold can be unlock to apply 24V DC to the Digital input terminal.

(Setting of digital input should be adjusted to “Remote reset”)

Auto-reset : The contacts are closed when the working signal is input, the contacts are opened automatically when the working signal is reset.

Pulse :Pulse signal outputs when the “Operation of ACB” or “Temporary motion restrain” or “Alarm out put” is detected, and the contact output is automatically reset after the setting time (0.1s – 5s) of pulse signal has passed.

② : If either of the functions selected from the items above are activated, the alarm group provides a contact output.

Default settings are the four types: Short time-delay trip, Instantaneous trip, Making current release, and Instantaneous override trip.

③ : All 12 types of alarms can be set as functions that output an alarm for each measurement item.

④ : For pulse settings, a pulse time can be set between 0.1 seconds and 5 seconds in 0.1-second increments.

⑤ : Temporary stop for Contact temperature monitoring (OH), Unbalance voltage protection (UNBV), Unbalance current protection (UNBC), Over voltage protection (OV), Under voltage protection (UV), Reverse power trip (RP), Over frequency protection (OF), and Under frequency protection (UF).

⑥ : A delay up to 150 ms occurs from when OCR is activated until a contact signal is output.

⑦ : Operation of contact modules requires control power (24V DC) to be supplied.

## Ratings of the contact

Voltage (V)	Resistive load (A)	Min. applicable load
250 AC	10	5V 10mA
30 DC	10	

# 6 Specifications

## FAULT TRIP switch

Switch that provides an electrical indication when the Over-Current Release (OCR) has activated. Max. 2 switches can be installed.

\* When 2 are installed, they cannot be used in combination with the Ready to close switch and Trip command indicator.

\* The FAULT TRIP display switch does not function when the mechanical reset setting dial is “AUTO.”

## Trip command indicator

Switch that provides an electrical indication that a trip command is being applied to the ACB.

Activated with an over-current release, continuously-rated shunt trip device, under voltage trip device, or if the OFF button is pressed.

\* If the Over-Current Release (OCR) activates when the Mechanical reset setting dial is “AUTO,” the total operating time of the Trip command indicator is up to 40ms.

## Ratings of FAULT TRIP switch / Trip command indicator

	Groups	Voltage (V)	Current (A)	Min. applicable load
Utilization category AC-12/DC-12 ①	Standard	AC 100–380	5.0	15V 2mA
		381–480	5.0	
	DC	24	5.0	
		48	2.5	
		125	0.4	
		240	0.2	

① : Based on IEC60947-5-1.

## ON – OFF Cycle Counter

The ON – OFF cycle counter is a 5-digit readout that shows the number of ON – OFF cycles of the ACB. Counter readings serve as a guide for maintenance or inspection.



## 7 Other Accessories

### Auxiliary switches 7c

Draw-out type switch that provides an electrical indication of the “ON” or “OFF” state of an ACB.

Auxiliary switch 7c is mounted to the side of the draw-out cradle, and comprises five quick connection terminals and two screw connection terminals.

Different from Auxiliary switch 4c, the operating position is only in the connected position.


### Ratings of auxiliary switch 7c

	Groups	Voltage (V)	Current (A)	Min. applicable load
Utilization category AC-12/DC-12 ①	Standard	AC 100–380	5.0	15V 2mA
		381–480	5.0	
	DC	24	5.0	
		48	2.5	
		125	0.4	
		250	0.2	


① : Based on IEC60947-5-1.

② : Chattering due to ON–OFF operation of the ACB lasts for less than 30 ms (There is some fluctuation depend on the ON–OFF cycles of ACB). Take note when applying to circuits.

③ : Do not connect an auxiliary switch to the continuously-rated shunt trip device and continuously-rated shunt trip 2 circuits. Doing so may cause failure.

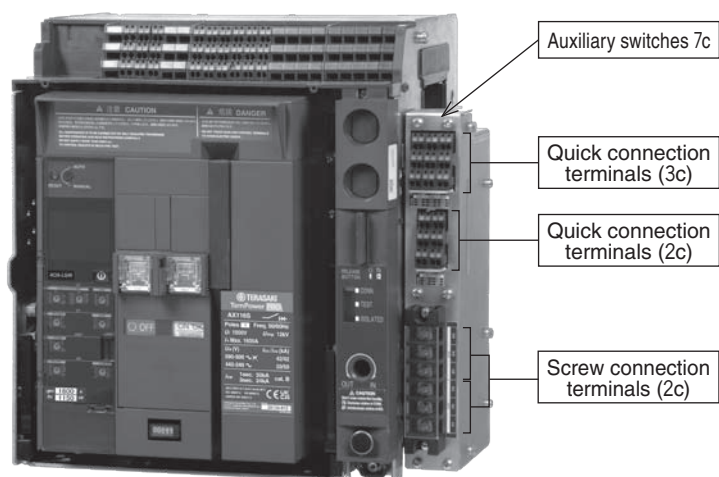

### Wiring diagram and terminal number for Auxiliary switch 7c

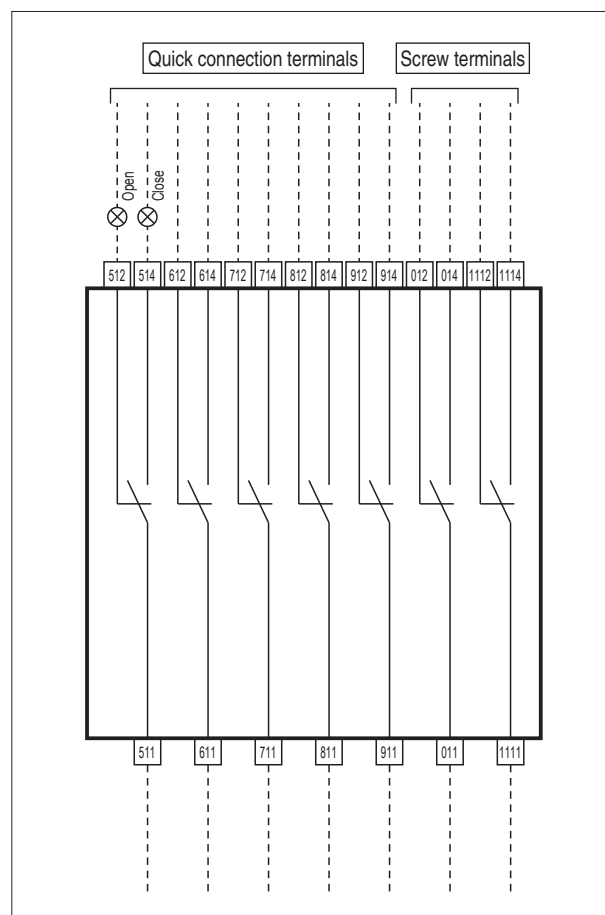

## 6

## Key lock

Device that locks the ACB in the closed position and prevents operation without the key.  
This is a lock in OFF type that disables the ACB to be placed in the open position.

- \* Five types of keys are available:

Cylinder, Ronis, Profalux, Kirk,  
or KLS.

(selecting a key other than  
Cylinder, ensure the key is  
available)



## OFF padlock

Used to lock the ACB in the open position.  
Up to three padlocks with a  $\varnothing 6$  hasp can be used.  
Padlocking is possible only when the ON–OFF  
indicator shows OFF.

- \* OFF padlock can not be fitted with Key lock (Lock in OFF).




## Inter-pole barrier

An inter-pole barrier prevents a possible short-circuit due to foreign objects entering between the main circuit terminals, thus enhancing operational reliability of the ACB.

This barrier can be applied to fixed type (front terminals, vertical terminals, horizontal terminals), and draw-out type with the vertical terminals and horizontal terminals.

- \* 1 : Interpole-barrier can not be fitted with Conductive adapter.

- \*2 : Cannot be used for AX120S and AX120H.

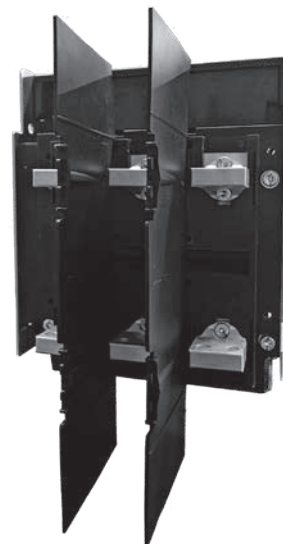



### Lacking interlock

Device that prevents the draw-out handle from being inserted when the switchboard door is open.

To use this device, install it with the following panel cutout dimensions.

- \* 1 : If using in combination with a door flange or IP cover, install the panel cutout specified for each device.

- \* 2 : Contact TERASAKI to use in combination with auxiliary switch 7c or a mechanical interlock.

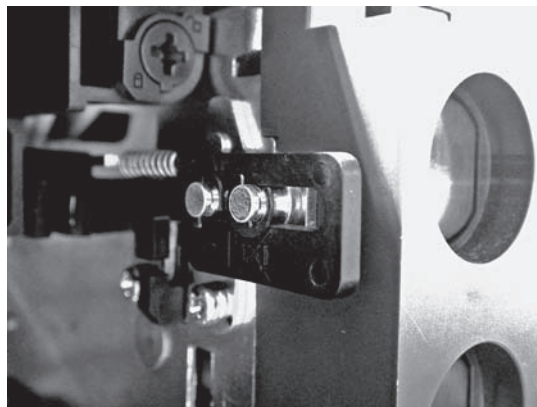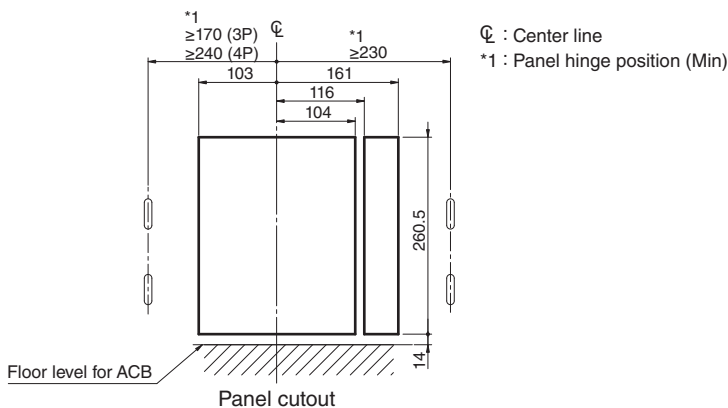



## Control circuit terminal cover

A control circuit terminal cover protects the terminal blocks for auxiliary switches, position switches, and control circuits from being accidentally touched, thus enhancing safety.

Note : 1) Can not be used for the fixed type.

Note : 2) Can not be used with Auxiliary 7c.


## Door flange

Use this as a decorative panel to cover the panel cutout in the front of the switchboard.

Two protection specifications that comply with IEC60529 standards are available: IP20 and IP31.

Note : 1) Door flange can not be fitted IP cover.

Note : 2) Contact TERASAKI to use in combination with a door interlock.

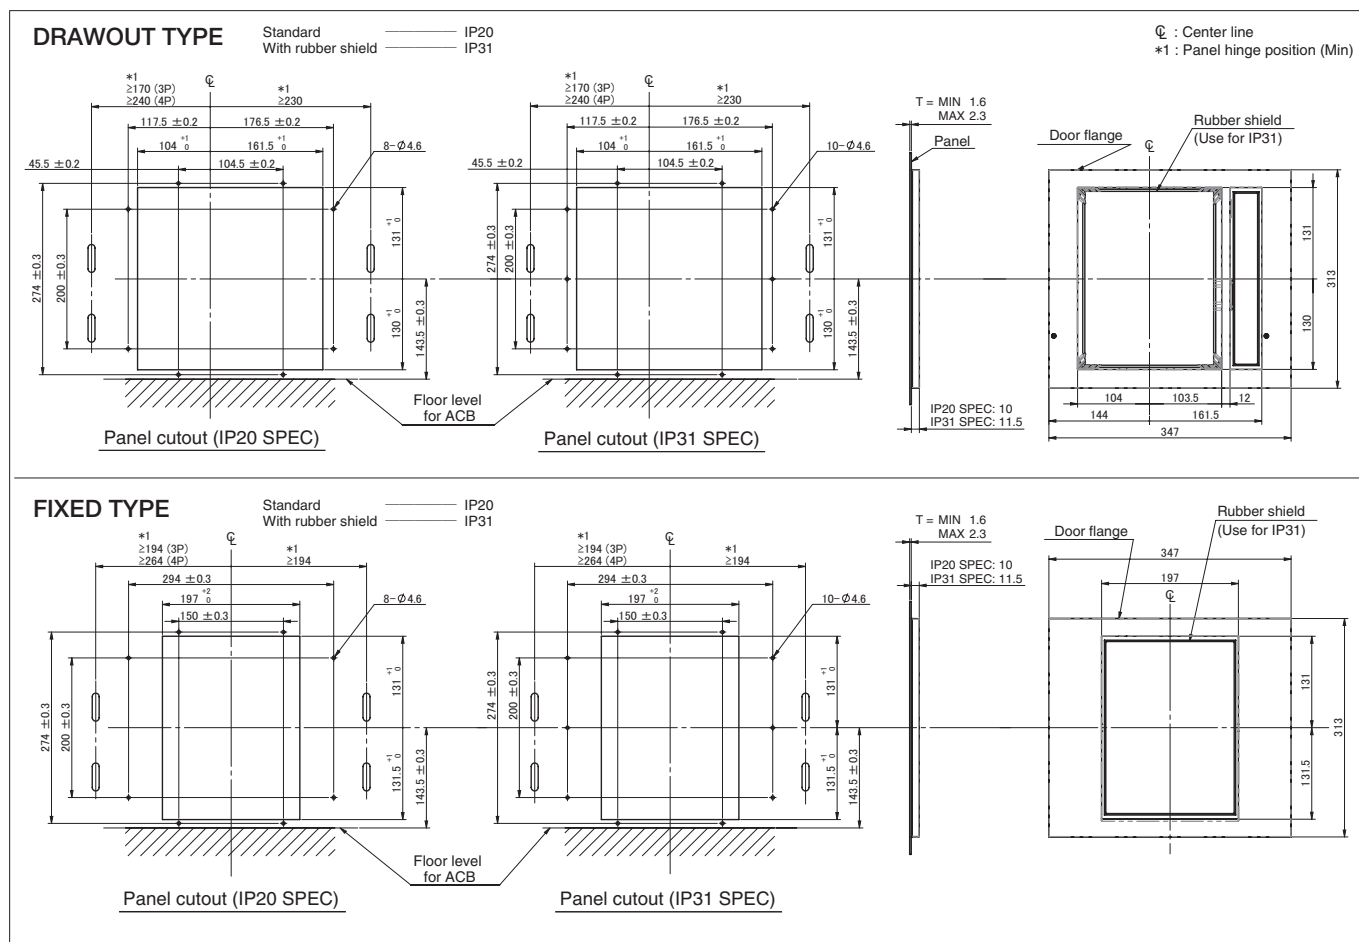

# 6 Specifications


## IP cover

This is a left-opening front protection cover that provides IP55 protection compliant with EC60529 standards. The IP cover can be installed, even if the ACB is in the ISOLATED position.


Note: 1) Contact TERASAKI to use in combination with a door interlock.

Note: 2) Cannot be fitted with door flange.

### DRAWOUT TYPE

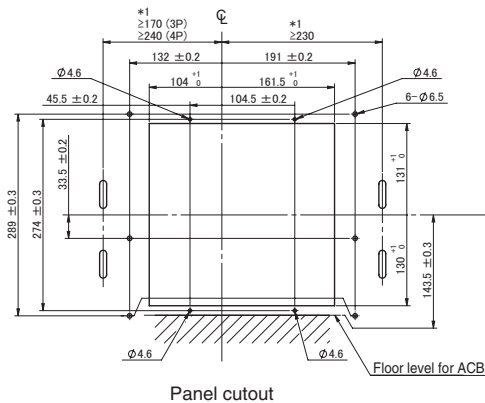


### FIXED TYPE

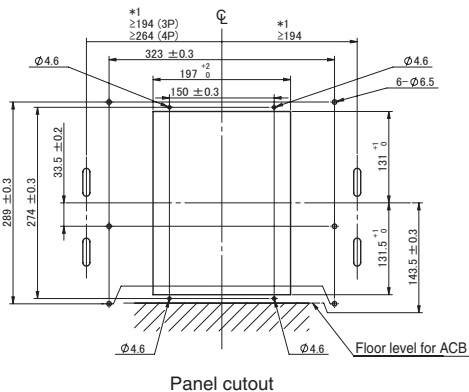

### OUTLINE DIMENSION

(Common to DRAW OUT type and FIXED type)

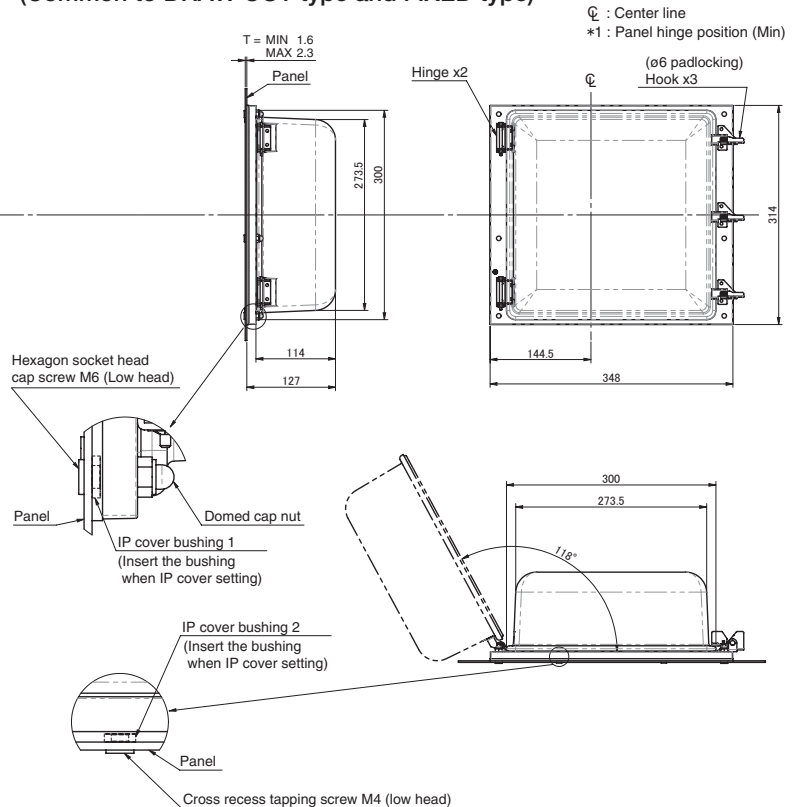

## Sensor for neutral line

This is an externally connected sensor that provides N-phase protection using a 3-pole ACB for 3-phase 4-wire power distribution.

## Mechanical interlock (side-by-side type)

Device for interlocking two ACBs in either horizontal or vertical arrangements.

Helps to prevent parallel operation of the system when one of the ACBs is closed.

In conjunction with an electrical interlock, it will enhance safety and reliability of power distribution systems.

The following specifications can be selected as the pitch between the left and right ACBs.

- 3-pole breaker : 600mm / 700mm / 800mm
- 4-pole breaker : 600mm / 700mm / 800mm / 900mm

Note: 1) Contact TERASAKI to use in combination with a door interlock or lacking interlock.

Note: 2) Cannot be fitted with auxiliary switch 7c.

## Remote command module


Module that connects a smart type over-current release, continuously-rated shunt trip device and latch release coil, to issue trip commands or closing commands to an ACB via communication module.

## Conductive adapter


Connection conversion adapter for horizontal terminals and front terminals. Two types are available: horizontal extension adapter and vertical extension adapter. They can be used for both draw-out type and fixed type ACBs.

Conductive adapter	Type	Applicable terminal arrangements
Horizontal extension adapter	AZX-1TH	Horizontal terminals. Front connections.
Vertical extension adapter	AZX-1TF	Front connections


① : When using a conductive adapter with a fixed type ACB, always use an arc shield in the case of connection example 2.

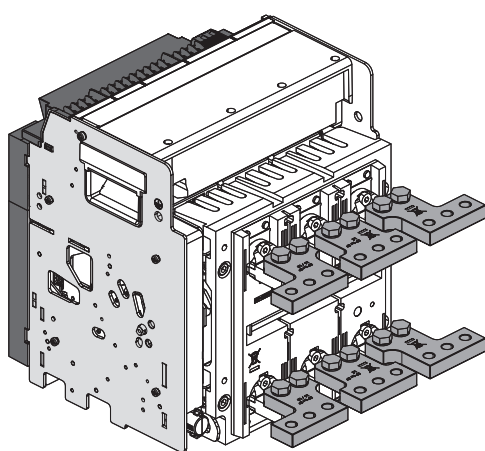


[AZX-1TH Draw-out type, horizontal terminals]

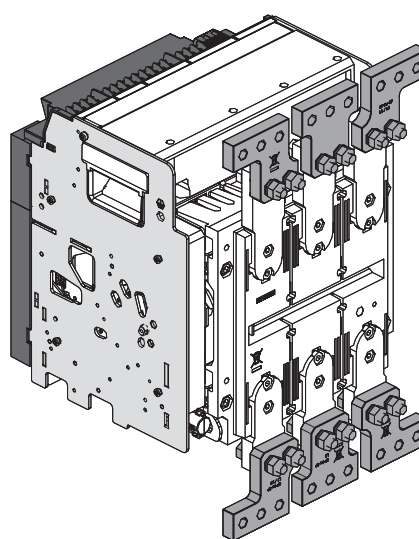

[AZX-1TH Draw-out type, front terminals]

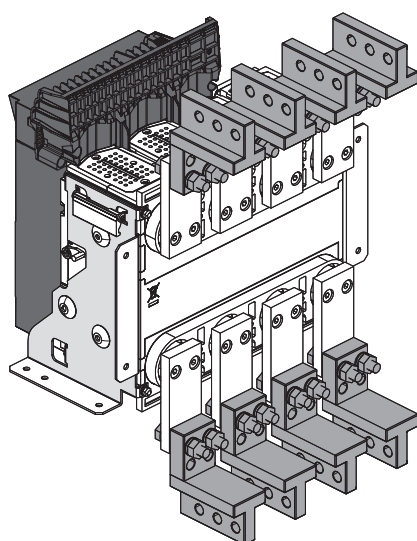


[AZX-1F Fixed-type, connection example1]

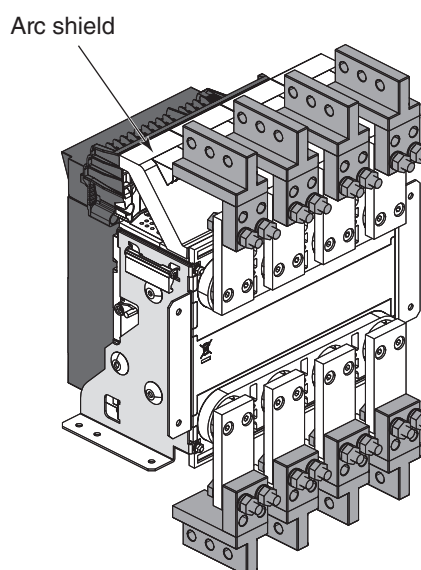

[AZX-1F Fixed-type, connection example2]

# 6 Specifications

## OCR checker (TTP00)

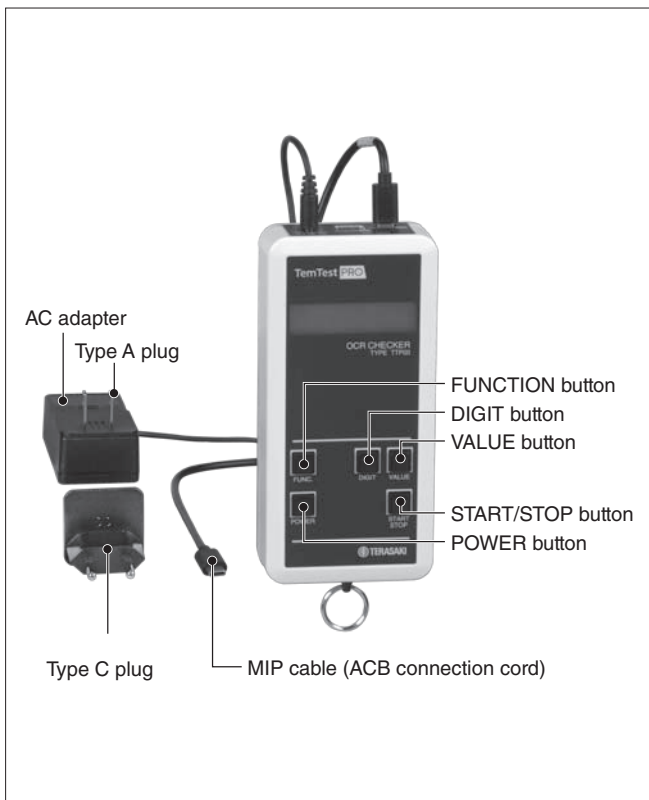

The TTP00 type OCR checker allows the long time-delay trip, short time-delay trip, instantaneous trip, ground fault trip, reverse power trip, and Preferential trip alarm function of over-current releases to be checked in the field.

### Ratings / Specifications

Type	TTP00
Power Source	Single-phase 100 to 240V AC, 50/60Hz or A alkaline batteries 1.5V × 4 or nickel-metal hydride rechargeable batteries 1.2V × 4
Power Consumption	3VA
Application	<ul style="list-style-type: none"> <li>● Long time-delay trip function check (Setting current and time-delay values)</li> <li>● Short time-delay trip function check (Setting current and time-delay values)</li> <li>● Instantaneous trip function check (Setting current value)</li> <li>● Preferential trip alarm function check (Setting current and time-delay values)</li> <li>● Ground fault trip function check (Setting current and time-delay values)</li> <li>● Reverse power trip function check (Setting current and time-delay values)</li> <li>● Setting of Zone interlock (Short time-delay, Ground fault)</li> <li>● Setting of time</li> </ul>
Measurement of set current values ①	<ul style="list-style-type: none"> <li>● Display 6-digit digital display</li> <li>● Range 1A – 199,999A</li> </ul>
Measurement of tripping time values	<ul style="list-style-type: none"> <li>● Display Digital display (0.01s unit for 9.99s or less, 0.1s unit for 10.0s or more)</li> <li>● Range 0.01 – 999.9s</li> </ul>
Outline Dimensions	80mm(W) × 165mm(H) × 35mm(D)
Weight	0.4kg (including accessories)
Accessories	MIP cable 2m × 1pc AC adapter (with power cord 1.9m) × 1unit AC adapter plug Type A (for domestic use) × 1pc Type C (for Europe) × 1pc

① : Measurement method based on digital signal output.

## 8 Operation Environments

### Standard environment

The standard environment for ACBs is as follows:

<b>Storage temperature</b>	Max. permissible storage temperature +60°C, Min. permissible storage temperature –20°C. The average temperature for 24 hours must not exceed 35°C.
<b>Operating temperature</b>	Max. permissible operating temperature +40°C, Min. permissible operating temperature –5°C. The average temperature for 24 hours must not exceed 35°C.
<b>Relative humidity</b>	Below 85%
<b>Vibration / Shock</b>	Not subjected to abnormal vibrations or shocks.
<b>Attitude</b>	Below 2000m
<b>Atmosphere</b>	Excessive water vapor, oil vapor, smoke, dust, or corrosive gases must not exist. Sudden change in temperature, condensation, or icing must not occur.
<b>Mounting condition</b>	According to the instruction of mounting on the catalogue and manuals.
<b>Guideline for renewal</b>	Expected service life is 15 years under the standard environment.

### Special environment

Coming soon

#### Tropicalization (Fungus and moisture treatment)

Specify this treatment when the ACB is used under high temperature and high-humidity conditions.

<b>Ambient temperature</b>	Max. permissible ambient temperature +60°C
<b>Relative humidity</b>	Max. permissible humidity 95% rel (No condensation)

#### Cold climate treatment

Specify this treatment when the ACB is used in cold areas.


<b>Storage temperature</b>	Max. permissible storage temperature +60°C, Min. permissible storage temperature –40°C (No condensation)
<b>Operating temperature</b>	Max. permissible operating temperature +40°C, Min. permissible operating temperature –25°C

#### Anti-corrosion treatment

Specify this treatment when the ACB is used in a corrosive atmosphere


## 9 Busbars connection

When two busbars are connected to a terminal stud of ACB, sandwich the terminal stud between the two busbars to utilize both surfaces of the terminal. A spring and plain washer must be used in conjunction with the busbar bolt and nut as below.

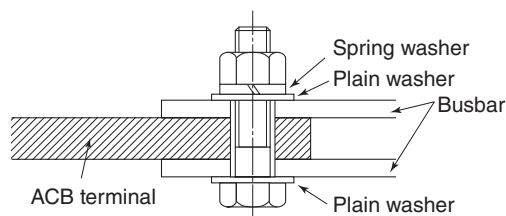

## 10 Recommendation for Busbars connection

The busbars to the ACB should be firmly supported near the ACB terminal. Fault currents flow through the busbars developing a large electromagnetic force between the busbars. The support must be strong enough to withstand such forces and ensure the enough insulating distance. The ACB should not be relied on as single support.

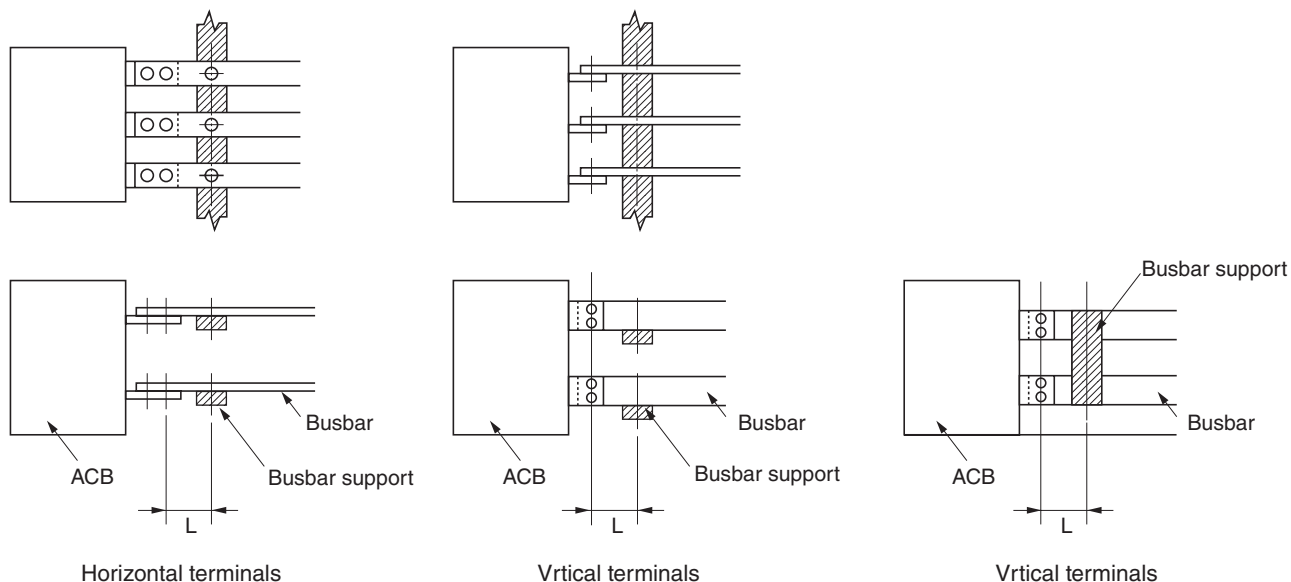

The maximum distance “L” of the connection point of ACB to first busbar support should be 300mm.


- Types AX106S, AX108S, AX110S, AX112S, AX116S, AX106H, AX108H, AX110H, AX112H, AX116H, AX106D, AX108D, AX110D, AX112D, AX116D } DRAW-OUT TYPE Vertical terminals

☐ : Center line

\*1 : Conductor overlap. (Max)



\*2 : Panel hinge position (Min)

\*3 : For 4-pole breakers, the position of the N-pole terminal is on the right side when viewing the front of the ACB.

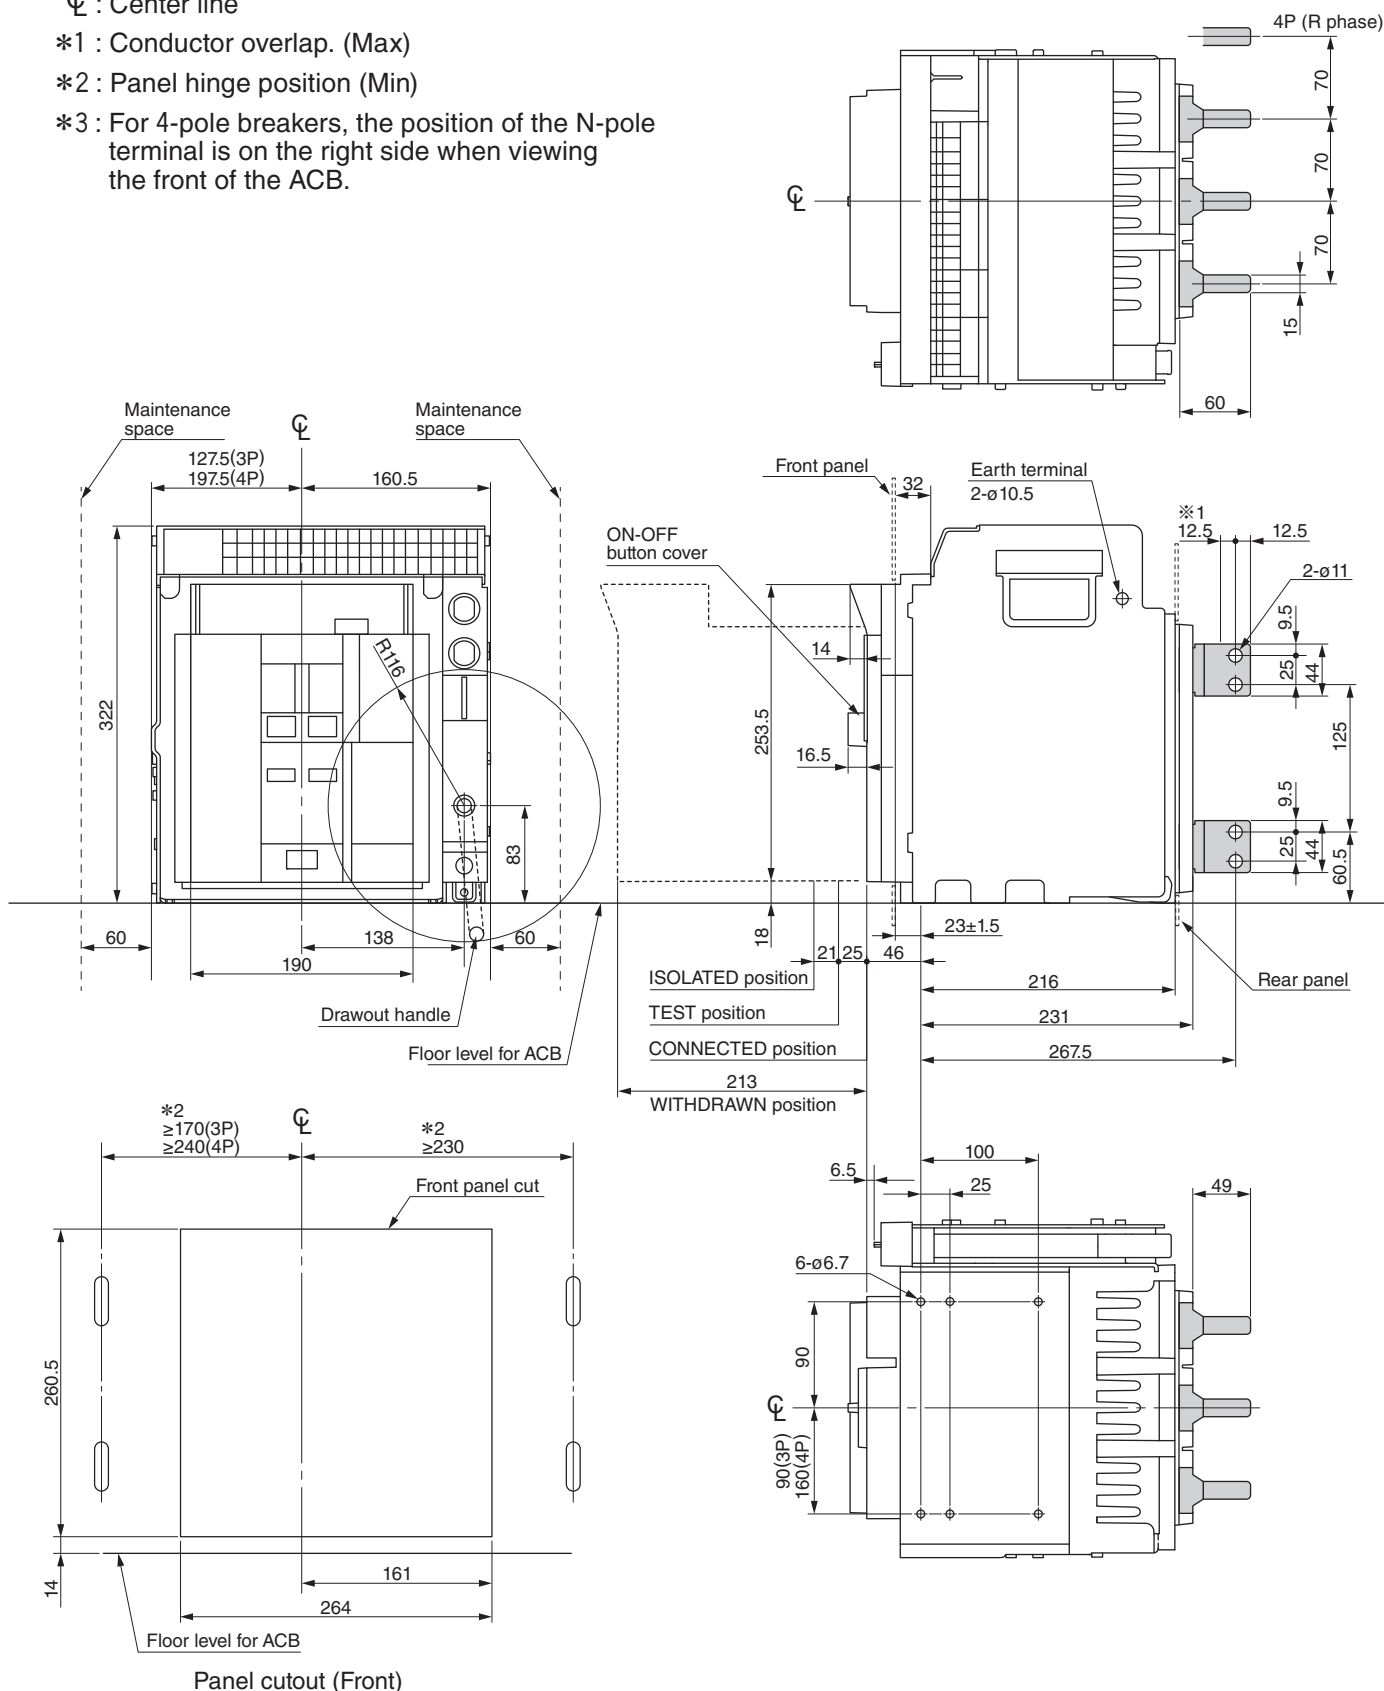




## [Auxiliary switches 7c]

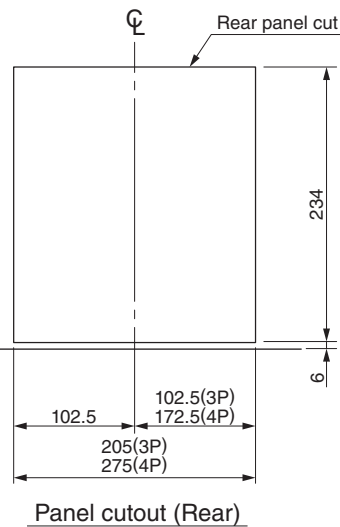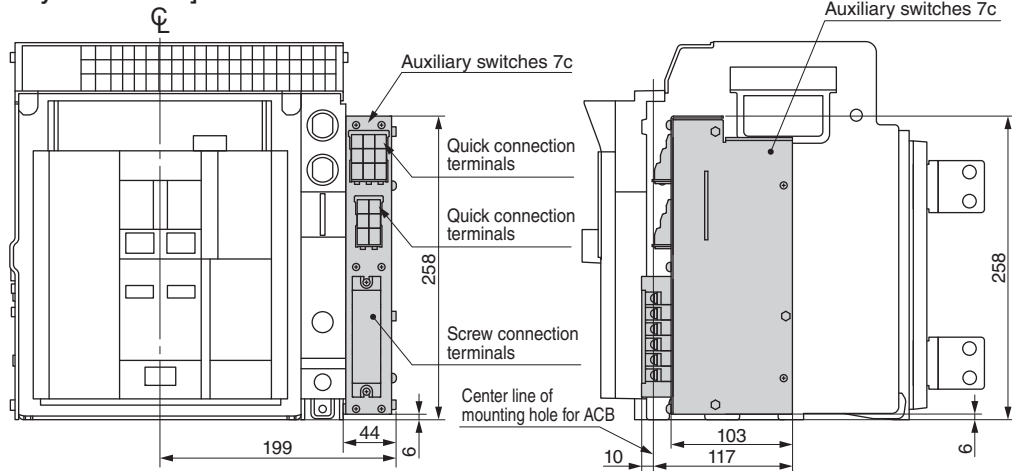

## [With undervoltage trip device (time delay tripping type)]

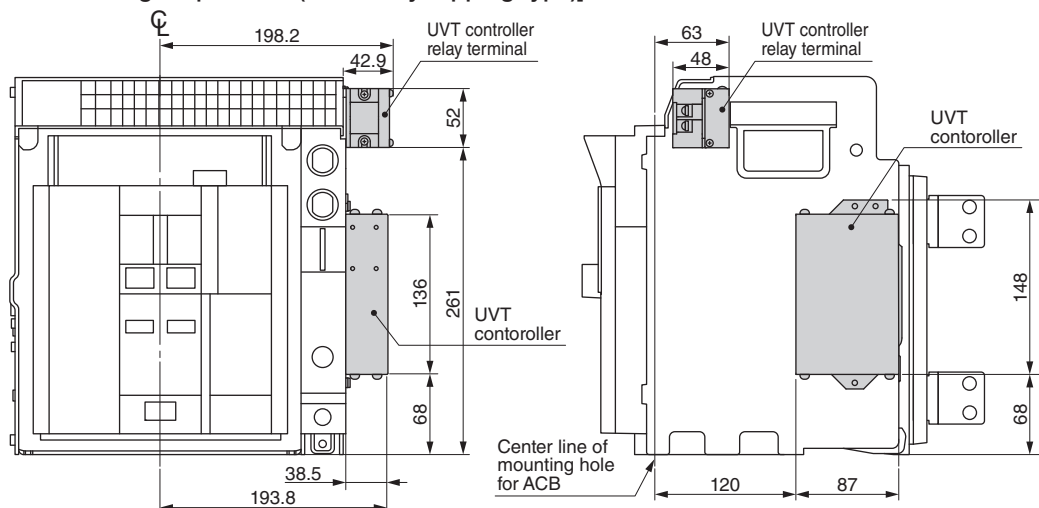

# 7 Outline Dimensions


- Types AX106S, AX108S, AX110S, AX112S, AX116S, AX106H, AX108H, AX110H, AX112H, AX116H, AX106D, AX108D, AX110D, AX112D, AX116D } DRAW-OUT TYPE  
Horizontal terminals

☐ : Center line



\*1 : Conductor overlap. (Max)

\*2 : Panel hinge position (Min)

\*3 : For 4-pole breakers, the position of the N-pole terminal is on the right side when viewing the front of the ACB.

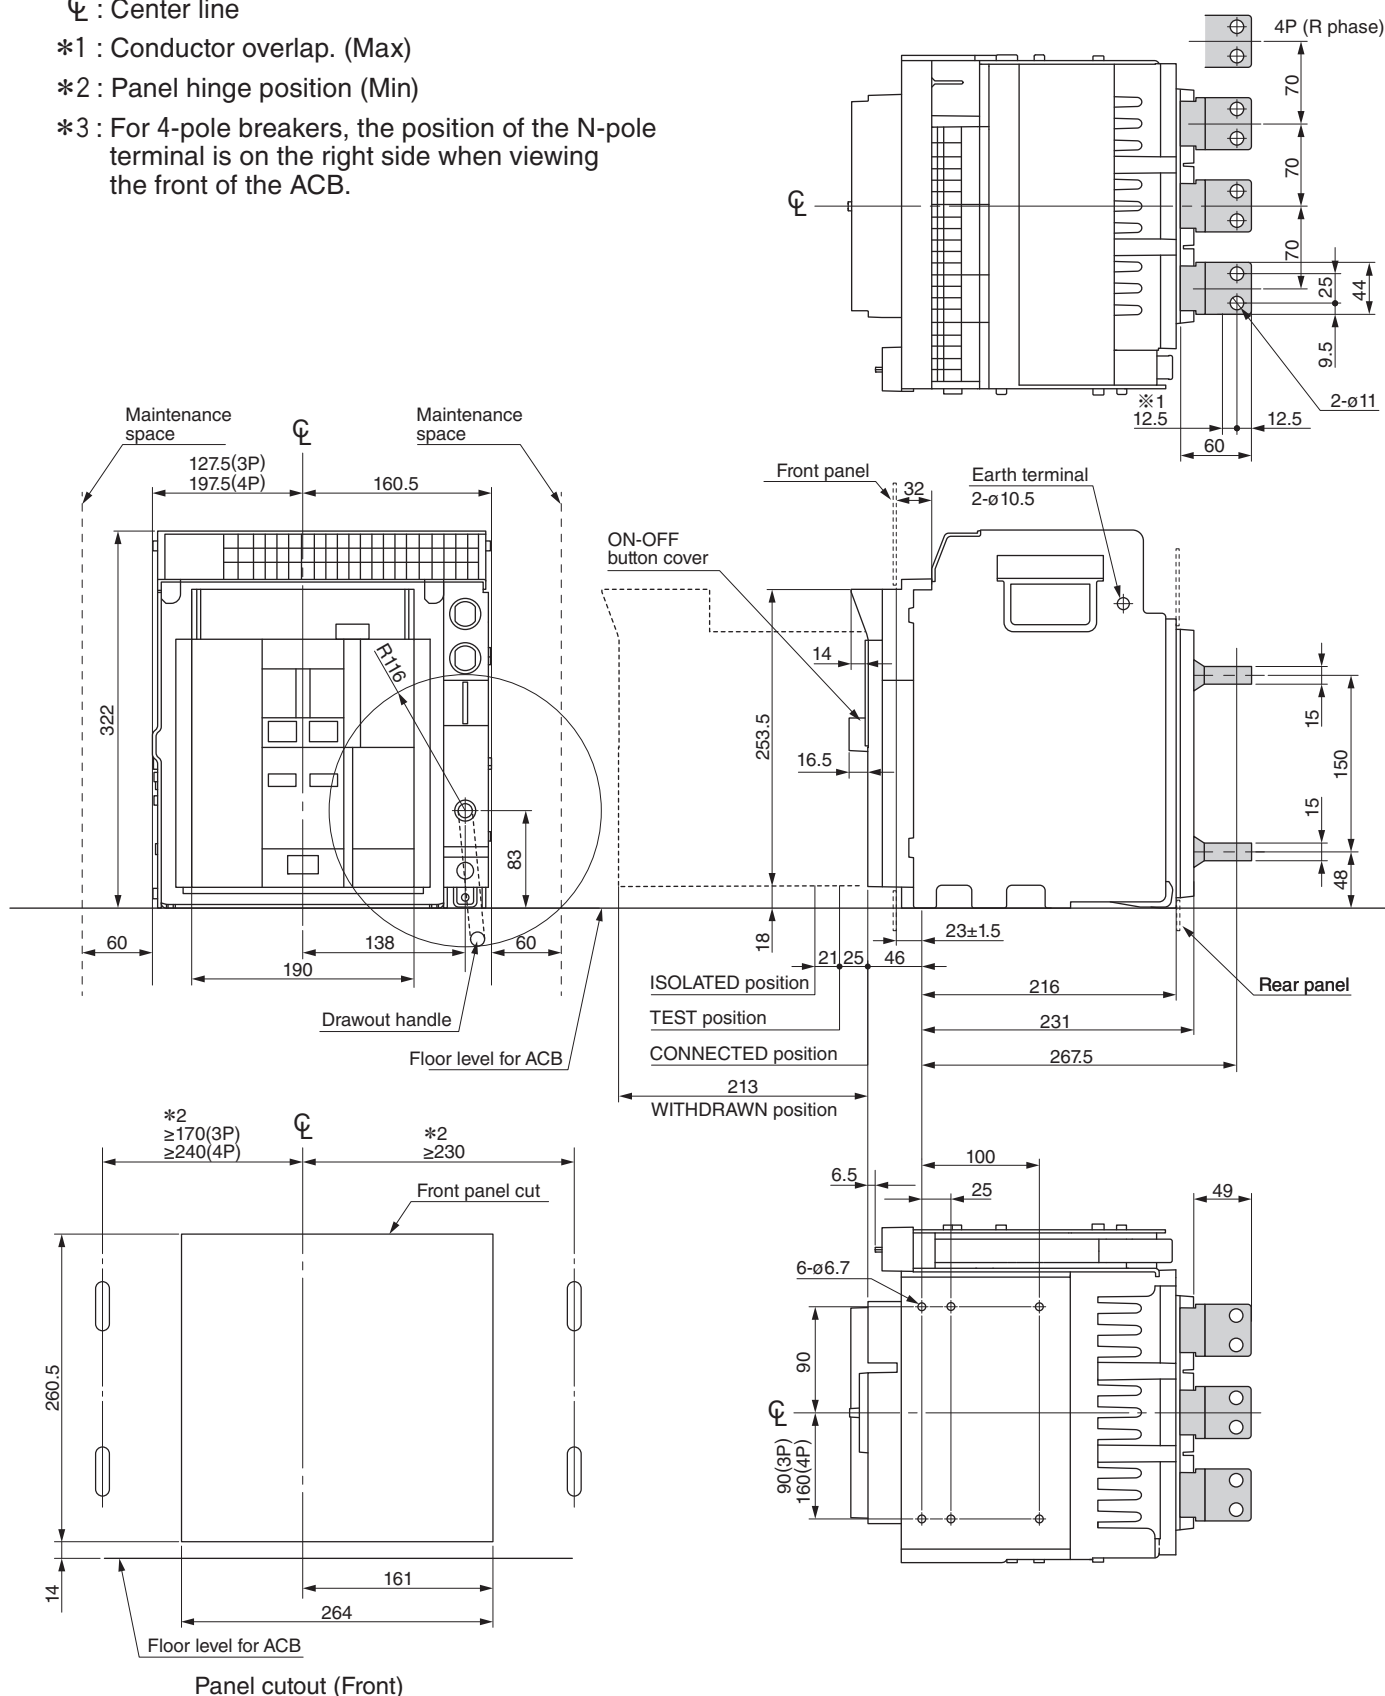


## [Auxiliary switches 7c]

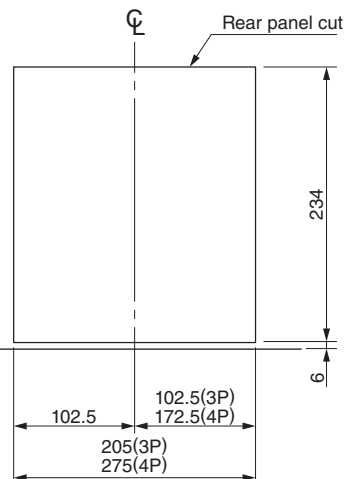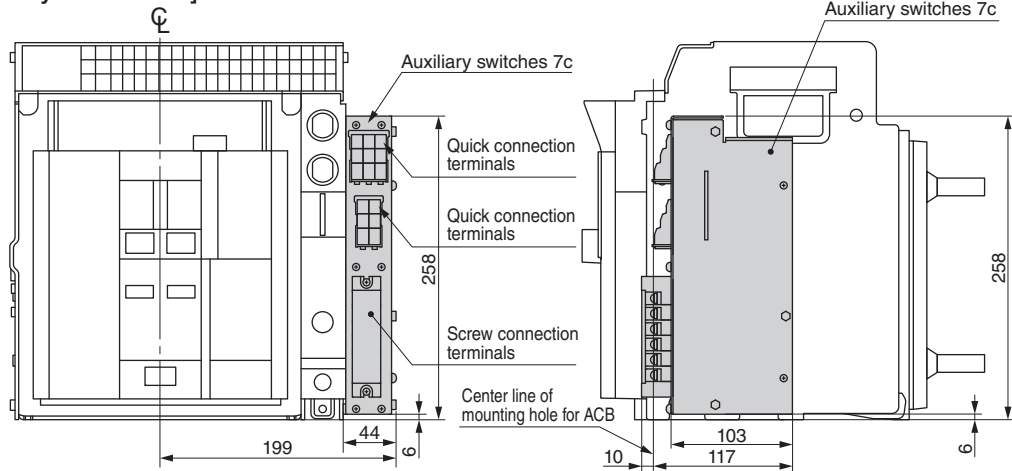

Panel cutout (Rear)

## [With undervoltage trip device (time delay tripping type)]


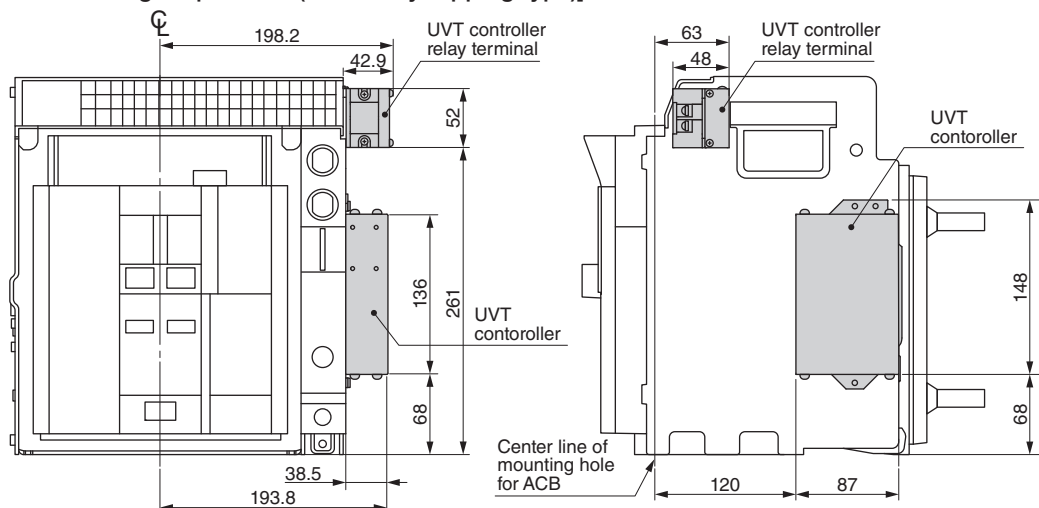


- **Types** AX106S, AX108S, AX110S, AX112S, AX116S, AX106H, AX108H, AX110H, AX112H, AX116H, AX106D, AX108D, AX110D, AX112D, AX116D } **DRAW-OUT TYPE**  
Front connections


\*3 : For 4-pole breakers, the position of the N-pole terminal is on the right side when viewing the front of the ACB.



## [Auxiliary switches 7c]

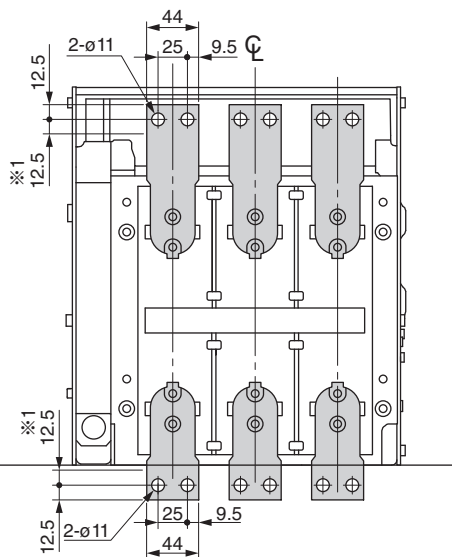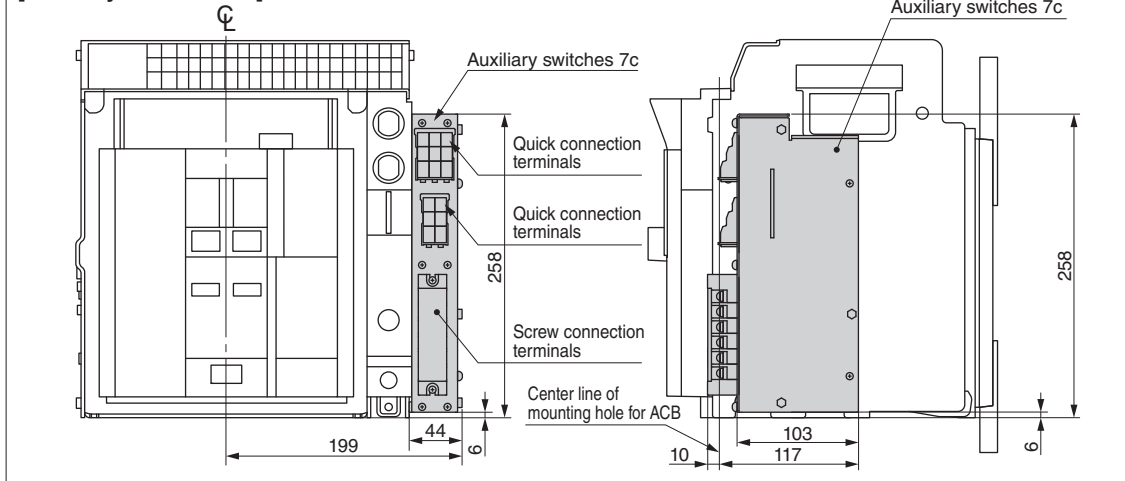


## [With undervoltage trip device (time delay tripping type)]

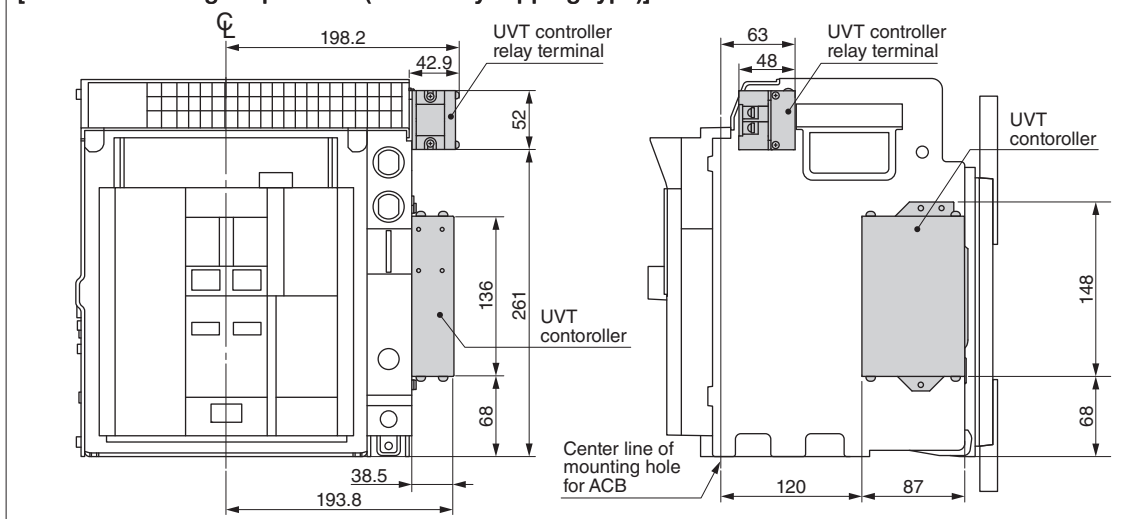


● Types AX106S, AX108S, AX110S, AX112S, AX116S, AX106H, AX108H, AX110H, AX112H, AX116H, AX106D, AX108D, AX110D, AX112D, AX116D } FIXED TYPE Vertical terminals

\*5 : For 4-pole breakers, the position of the N-pole terminal is on the right side when viewing the front of the ACB.

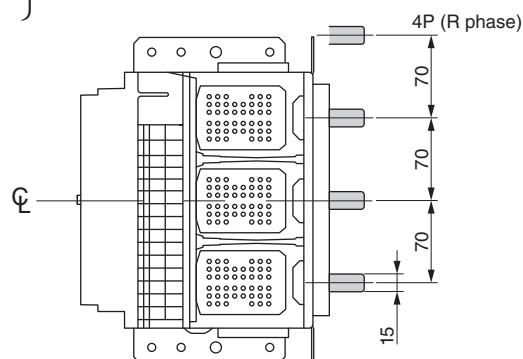




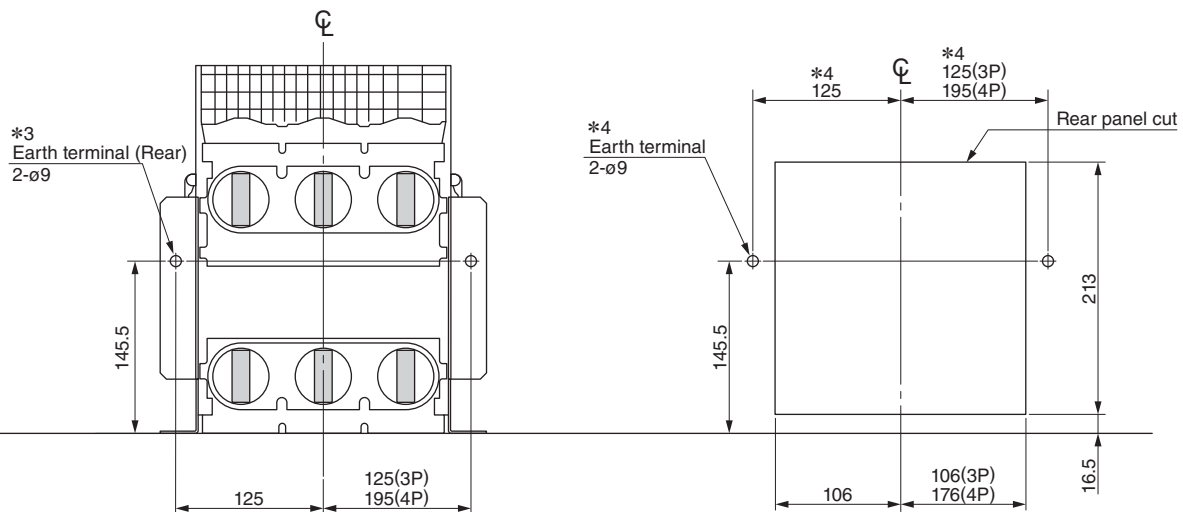

Panel cutout (Rear)

[With undervoltage trip device (time delay tripping type)]

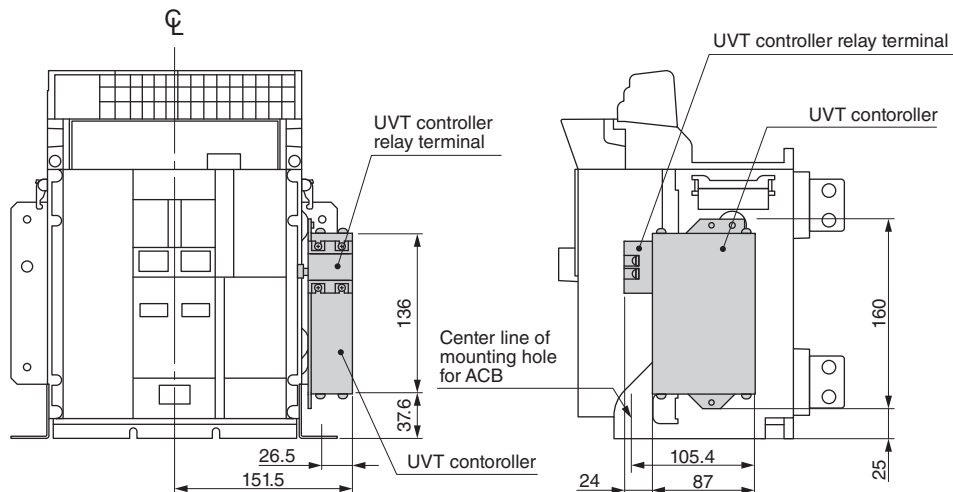

- Types AX106S, AX108S, AX110S, AX112S, AX116S, AX106H, AX108H, AX110H, AX112H, AX116H, AX106D, AX108D, AX110D, AX112D, AX116D } FIXED TYPE Horizontal terminals

☐ : Center line






\*1 : Conductor overlap. (Max)


\*2 : Panel hinge position (Min)

\*3 : Only use an earth terminal on either the bottom or rear surfaces.

\*4 : To use an earth terminal (rear), a  $\phi 9$  hole must be machined.


\*5 : For 4-pole breakers, the position of the N-pole terminal is on the right side when viewing the front of the ACB.

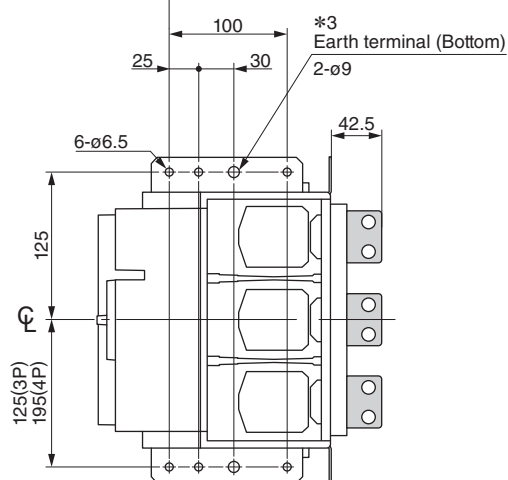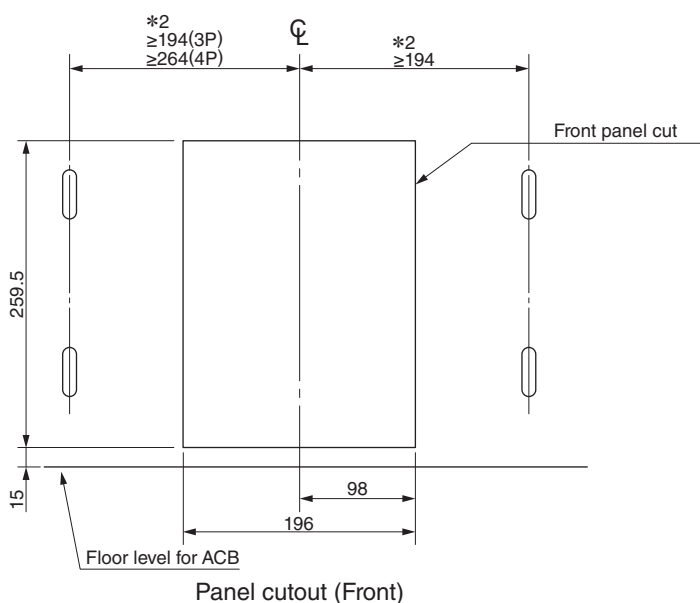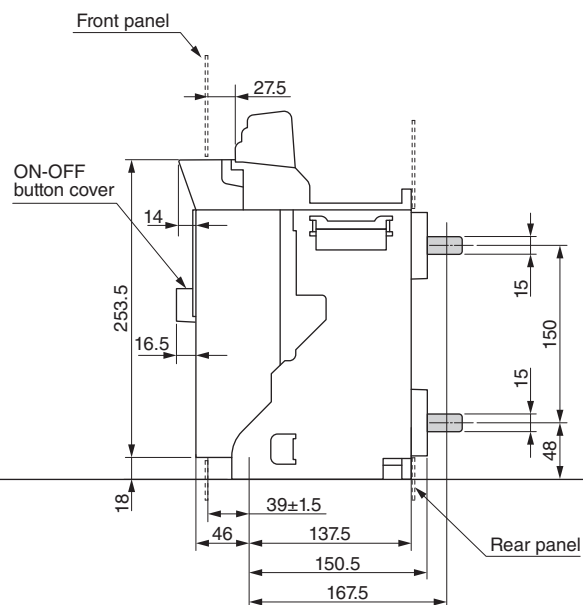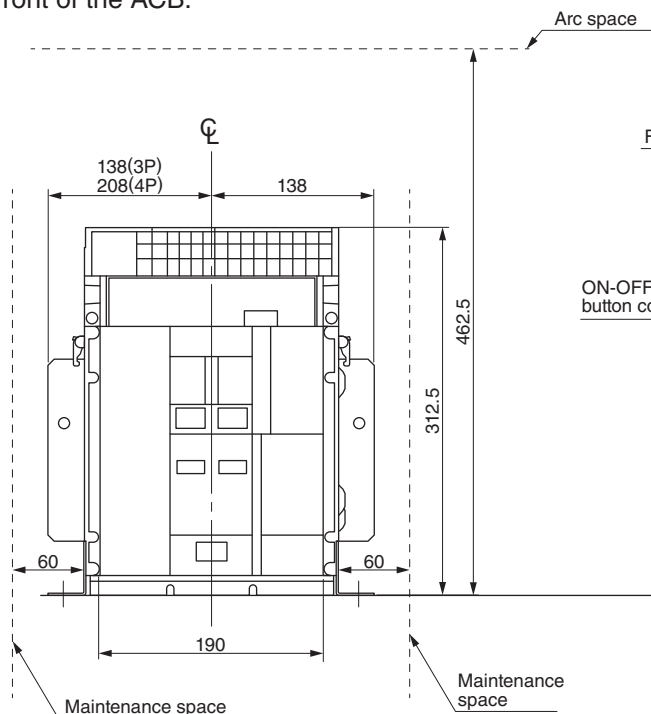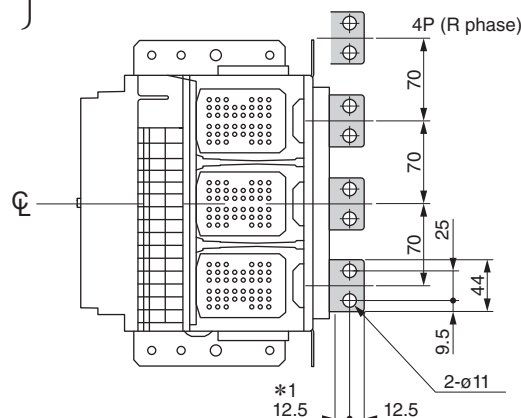

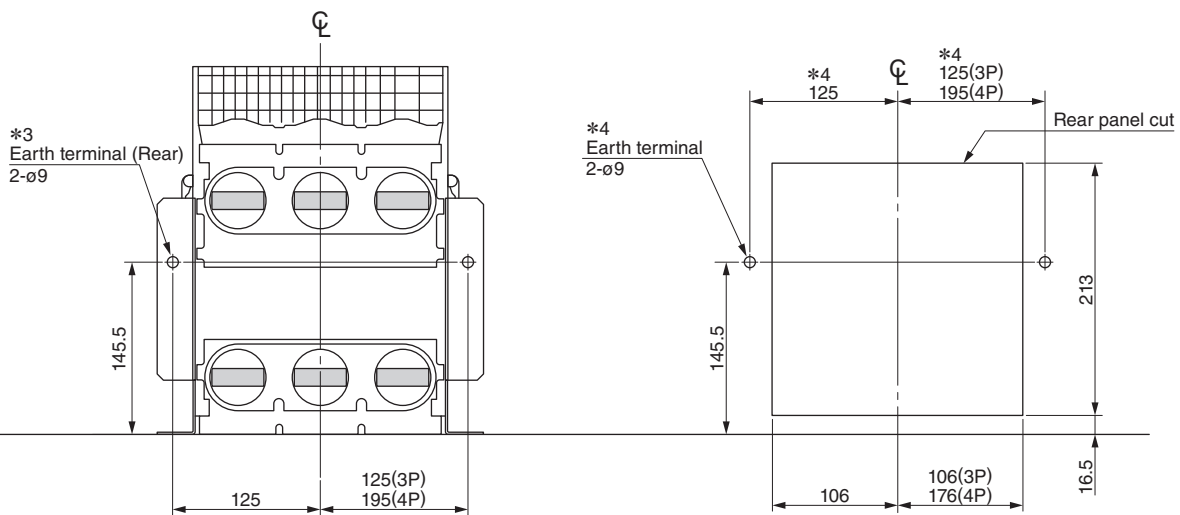

Panel cutout (Rear)

[With undervoltage trip device (time delay tripping type)]

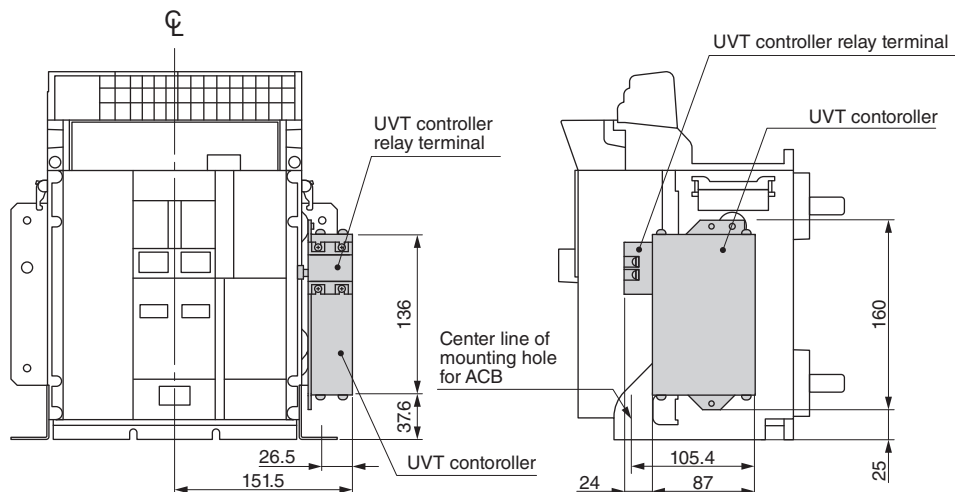

- Types AX106S, AX108S, AX110S, AX112S, AX116S, AX106H, AX108H, AX110H, AX112H, AX116H, AX106D, AX108D, AX110D, AX112D, AX116D } **FIXED TYPE Front connections**




☐ : Center line

\*1 : Conductor overlap. (Max)


\*2 : Panel hinge position (Min)


\*3 : Only use an earth terminal on either the bottom or rear surfaces.

\*4 : For 4-pole breakers, the position of the N-pole terminal is on the right side when viewing the front of the ACB.

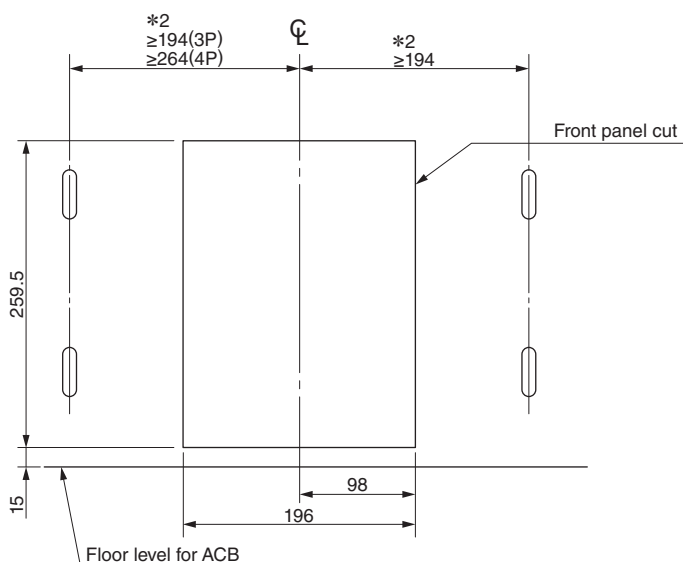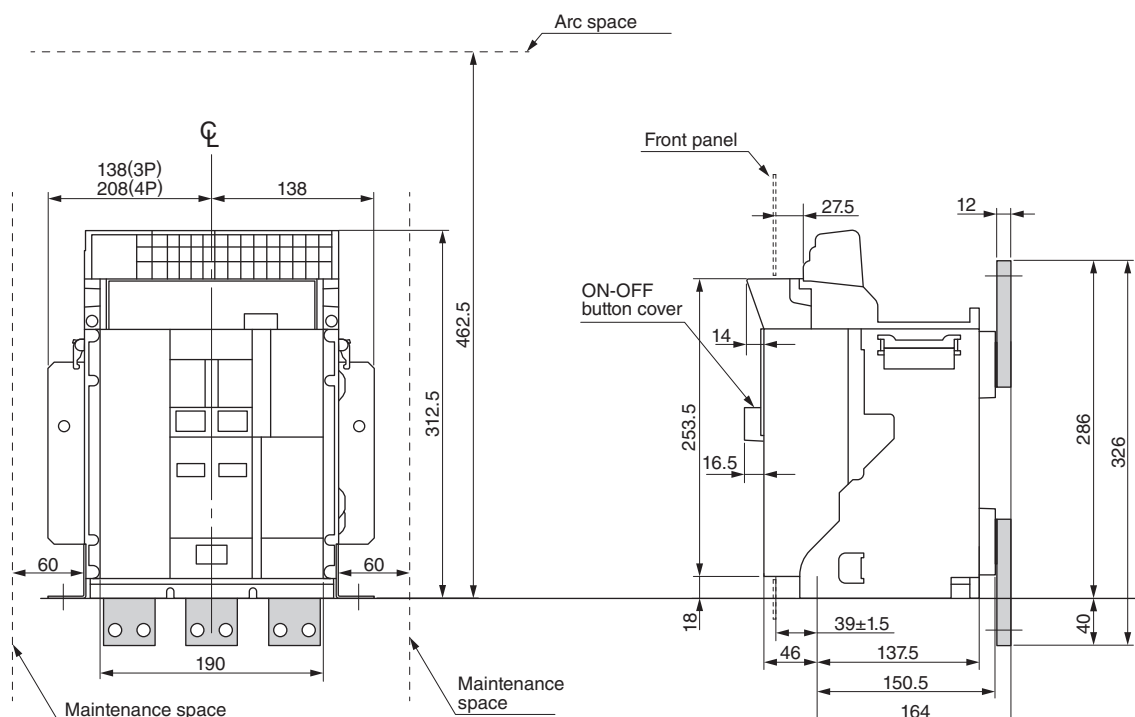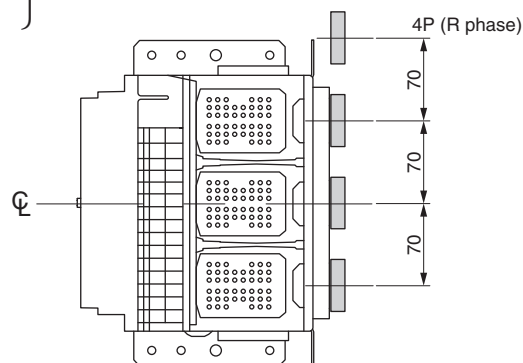


Panel cutout (Front)

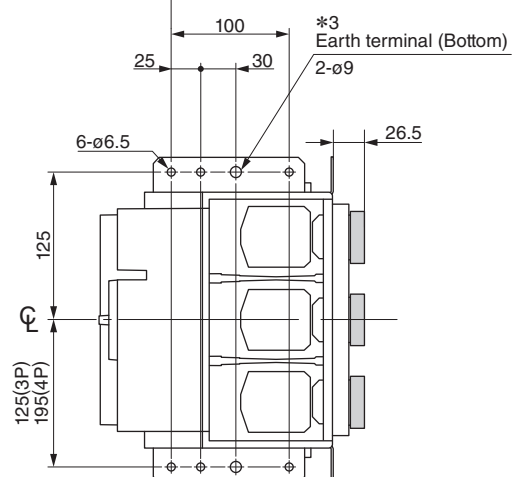

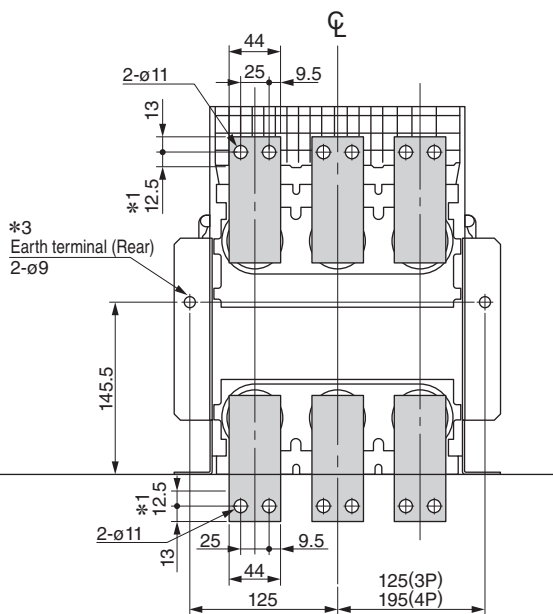

[With undervoltage trip device (time delay tripping type)]

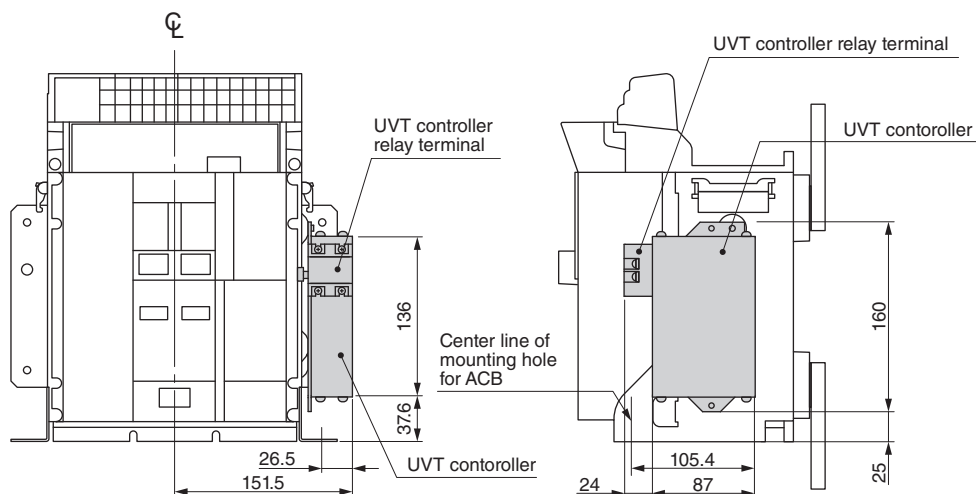

## ● Types AX120S, AX120H

☐ : Center line






\*1 : Conductor overlap. (Max)

\*2 : Panel hinge position (Min)

\*3 : Only use an earth terminal on either the bottom or rear surfaces.

\*4 : To use an earth terminal (rear), a  $\phi 9$  hole must be machined.


\*5 : For 4-pole breakers, the position of the N-pole terminal is on the right side when viewing the front of the ACB.

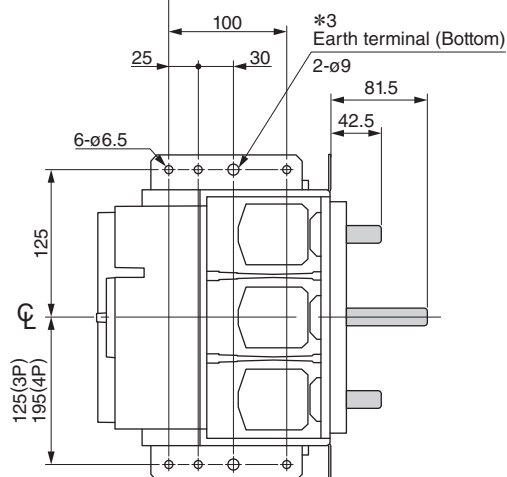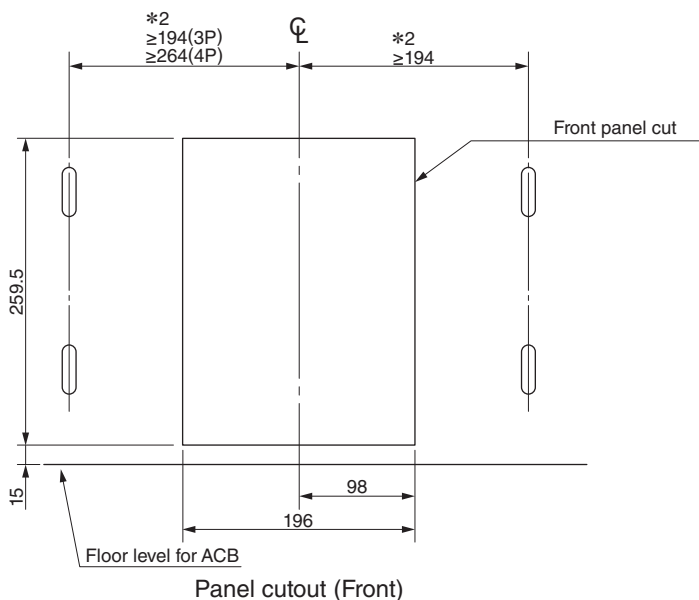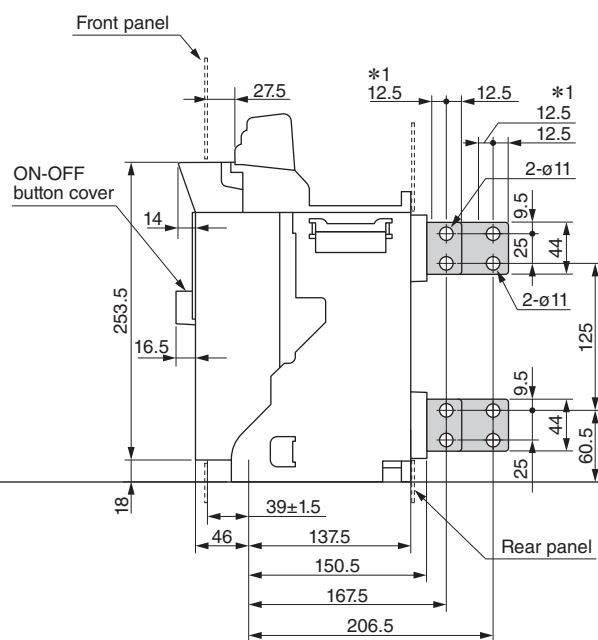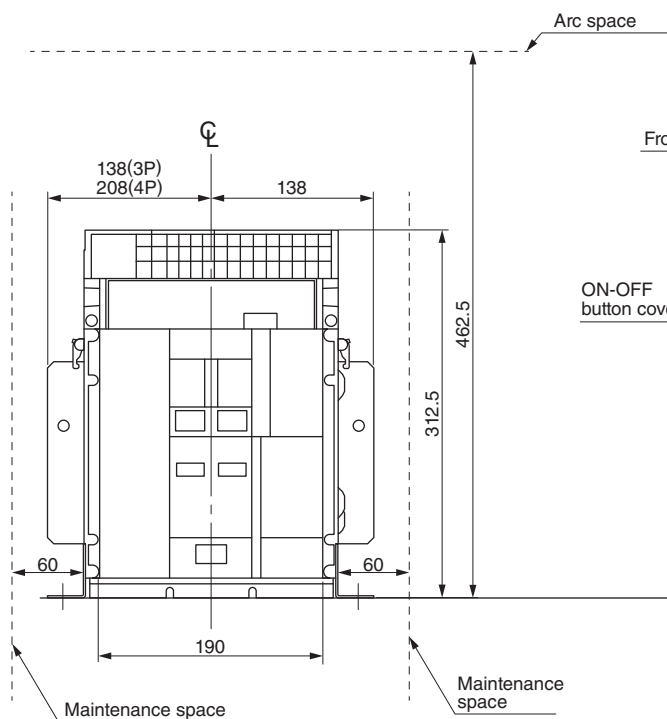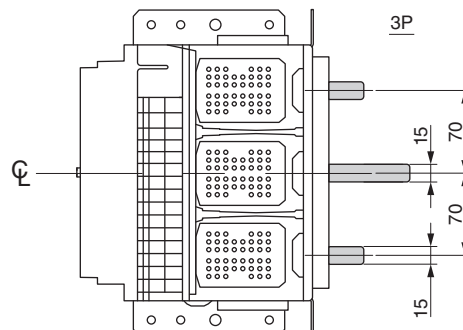





# 8 Circuit Diagram (AOX-LI, LSI, LSIG)

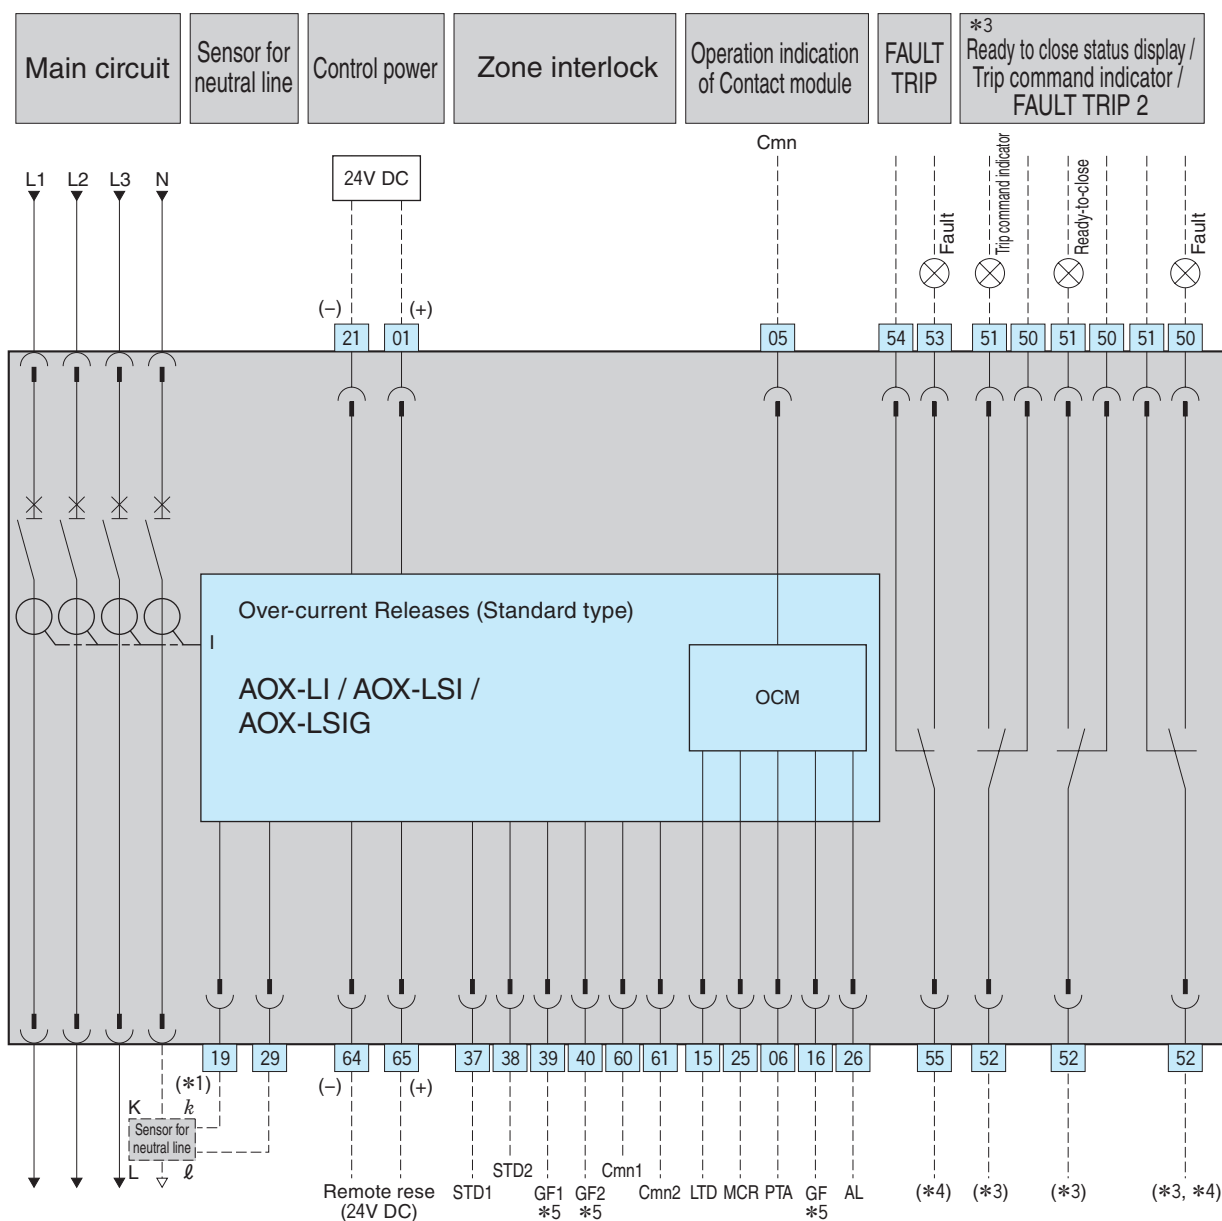

## Terminal description

01(+)	21(-)	Control power 24V DC
05	15	Operation indication of Long time-delay trip
05	25	Short time-delay trip (ST) / Instantaneous trip (INST) / Making current release(MCR)
		Operation indication of Instantaneous override tripping (IO) *6
05	06	Operation indication of Preferential trip alarm
05	16	Operation indication of Ground-fault trip *5
05	26	Multi operation indication (Trip alarm / Level of impact severe error)
19	29	Sensor for neutral line (Polarity : 19 -k, 29 -ℓ)
65(+)	64(-)	Input for Remote reset (24V DC) *7
37	60	Input for Zone interlock (Short time delay)
38	61	Output for Zone interlock (Short time delay)
39	60	Input for Zone interlock (Ground fault) *5
40	61	Output for Zone interlock (Ground fault) *5
53	55	FAULT TRIP switch
51	52	Ready to close switch
50	52	Trip command indicator or FAULT TRIP switch 2
08(+)	09(-)	Under voltage trip device (Instantaneous trip type) or Continuously-rated shunt trip device 2
81(+)	91(-)	Under voltage trip device (Time delay trip type)
44(+)	20(-)	Continuously-rated shunt trip
27	22	Spring charge indicator
02(+)	22(-)	Motor charging operation circuit
43(+)	07(-)	Latch Release Coil (LRC)

## Symbols for accessories

OCM	: Contact module
MOT	: Charging motor
LRC	: Latch release coil
SHT, SHT2	: Continuously-rated shunt trip device
UVT	: Undervoltage trip device
←	: Isolating terminal connector (Draw-out type)



\*9 : Connecting continuously-rated shunt trip devices and operation circuits.

Ensure that the cables connecting the switch with terminals 03, 08 and 10 are 5 m or less in length, and keep them as far away as possible from power supply cables. If the cables exceed 5 m in length, or if using a AC380–480V rated voltage continuously-rated shunt trip device and latch release coil, use either of the following connection methods, as there is the risk of incorrect device operation caused by stray capacitance between cables.

- 1) Connect a relay near the ACB, and control the relay remotely.
- 2) Short-circuit the terminals as shown below.


Note that there will be an inrush current at the switch when using this connection method, so select a switch capable of handling the inrush current values in the table below.

Rated voltage (V)	Inrush current (A)
AC/DC24–30	12
AC/DC48–60	6
AC/DC100–130	4
AC/DC200–250	2
AC380–480	1

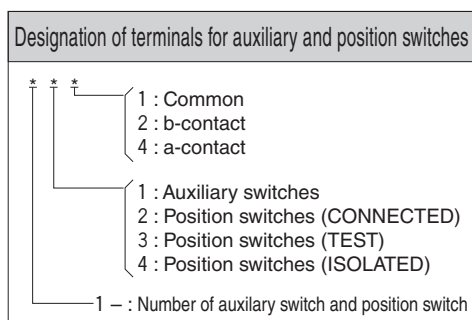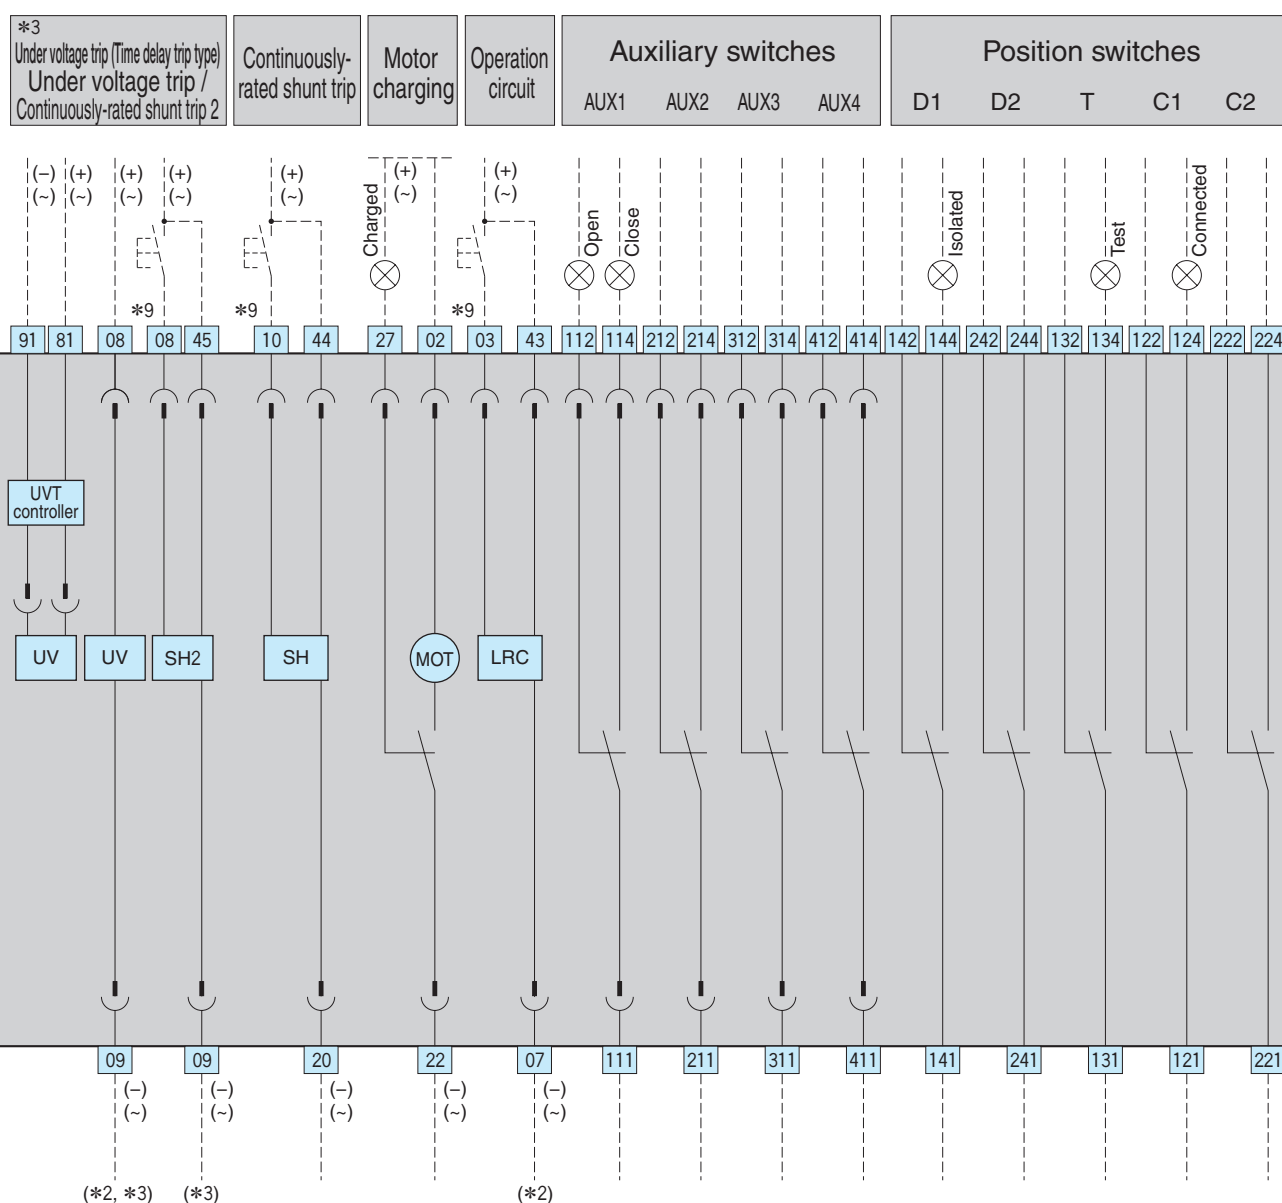


- \*1 : Supplied when installing a 3-pole ACB for a 3-phase, 4-wire system.
- \*2 : It takes the instantaneous type max. 0.2 sec. for the UVT coil to be adsorbed after the rated voltage is applied to the undervoltage trip device.  
The closing command should apply a closing signal of 0.2 sec. or more for the instantaneous type after the rated voltage is applied.
- \*3 : Please specify the function to be used when ordering.
- \*4 : No contact output when the reset setting dial is in "AUTO".
- \*5 : Only supplied for the AOX-LSIG.
- \*6 : The AOX-LI is not supplied with a short time-delay (ST) trip indicator.
- \*7 : After tripping, apply 24V DC for 10ms to 60s to release the trip state.
- \*8 : Do not connect the continuously-rated shunt trip and continuously-rated shunt trip 2 terminals with the auxiliary switch terminals in series.

## Terminal arrangement

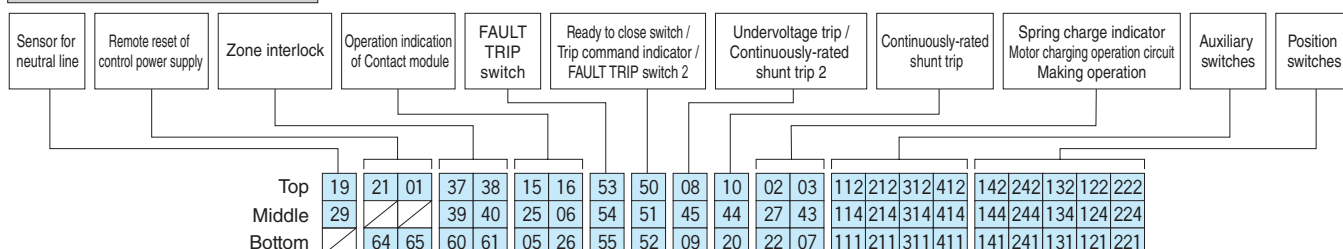

# 8 Circuit Diagram (AOX-LSIR)

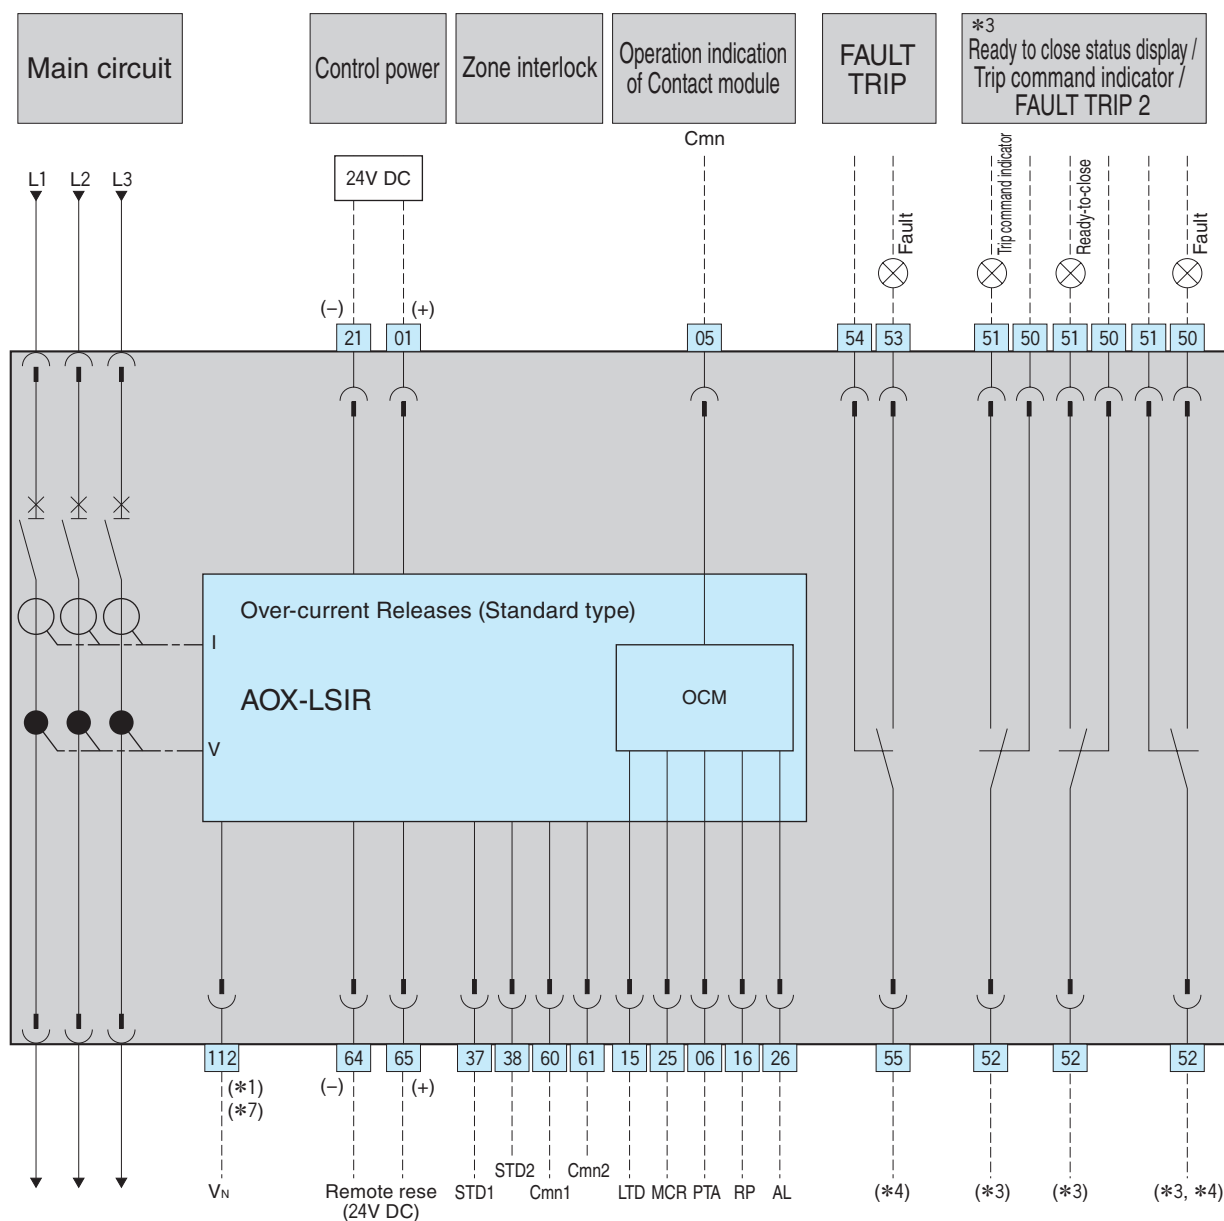

## Terminal description

01(+)	21(-)	Control power 24V DC
05	15	Operation indication of Long time-delay trip
05	25	Short time-delay trip (ST) / Instantaneous trip (INST) / Making current release(MCR)
05	06	Operation indication of Instantaneous override tripping (IO)
05	16	Operation indication of Preferential trip alarm
05	26	Operation indication of Reverse power trip (RPT)
05	26	Multi operation indication (Trip alarm / Level of impact severe error)
65(+)	64(-)	Input for Remote reset (24V DC) *5
37	60	Input for Zone interlock (Short time delay)
38	61	Output for Zone interlock (Short time delay)
53	55	FAULT TRIP switch
51	52	Ready to close switch
50	52	Trip command indicator or FAULT TRIP switch 2
08(+)	09(-)	Under voltage trip device (Instantaneous trip type) or Continuously-rated shunt trip device 2
81(+)	91(-)	Under voltage trip device (Time delay trip type)
44(+)	20(-)	Continuously-rated shunt trip
27	22	Spring charge indicator
02(+)	22(-)	Motor charging operation circuit
43(+)	07(-)	Latch Release Coil (LRC)

## Symbols for accessories

OCM	: Contact module
MOT	: Charging motor
LRC	: Latch release coil
SHT, SHT2	: Continuously-rated shunt trip device
UVT	: Undervoltage trip device
←	: Isolating terminal connector (Draw-out type)


\*8 : Connecting continuously-rated shunt trip devices and operation circuits.

Ensure that the cables connecting the switch with terminals 03, 08 and 10 are 5 m or less in length, and keep them as far away as possible from power supply cables. If the cables exceed 5 m in length, or if using a AC380-480V rated voltage continuously-rated shunt trip device and latch release coil, use either of the following connection methods, as there is the risk of incorrect device operation caused by stray capacitance between cables.



1) Connect a relay near the ACB, and control the relay remotely.

2) Short-circuit the terminals as shown below.

Note that there will be an inrush current at the switch when using this connection method, so select a switch capable of handling the inrush current values in the table below.

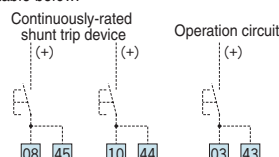



Rated voltage (V)	Inrush current (A)
AC/DC24-30	12
AC/DC48-60	6
AC/DC100-130	4
AC/DC200-250	2
AC380-480	1

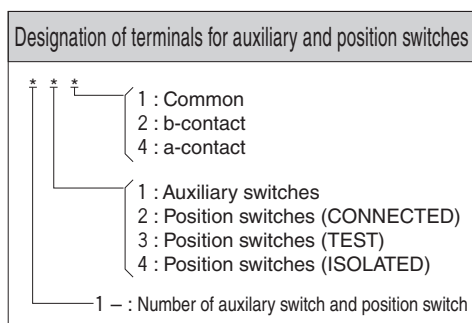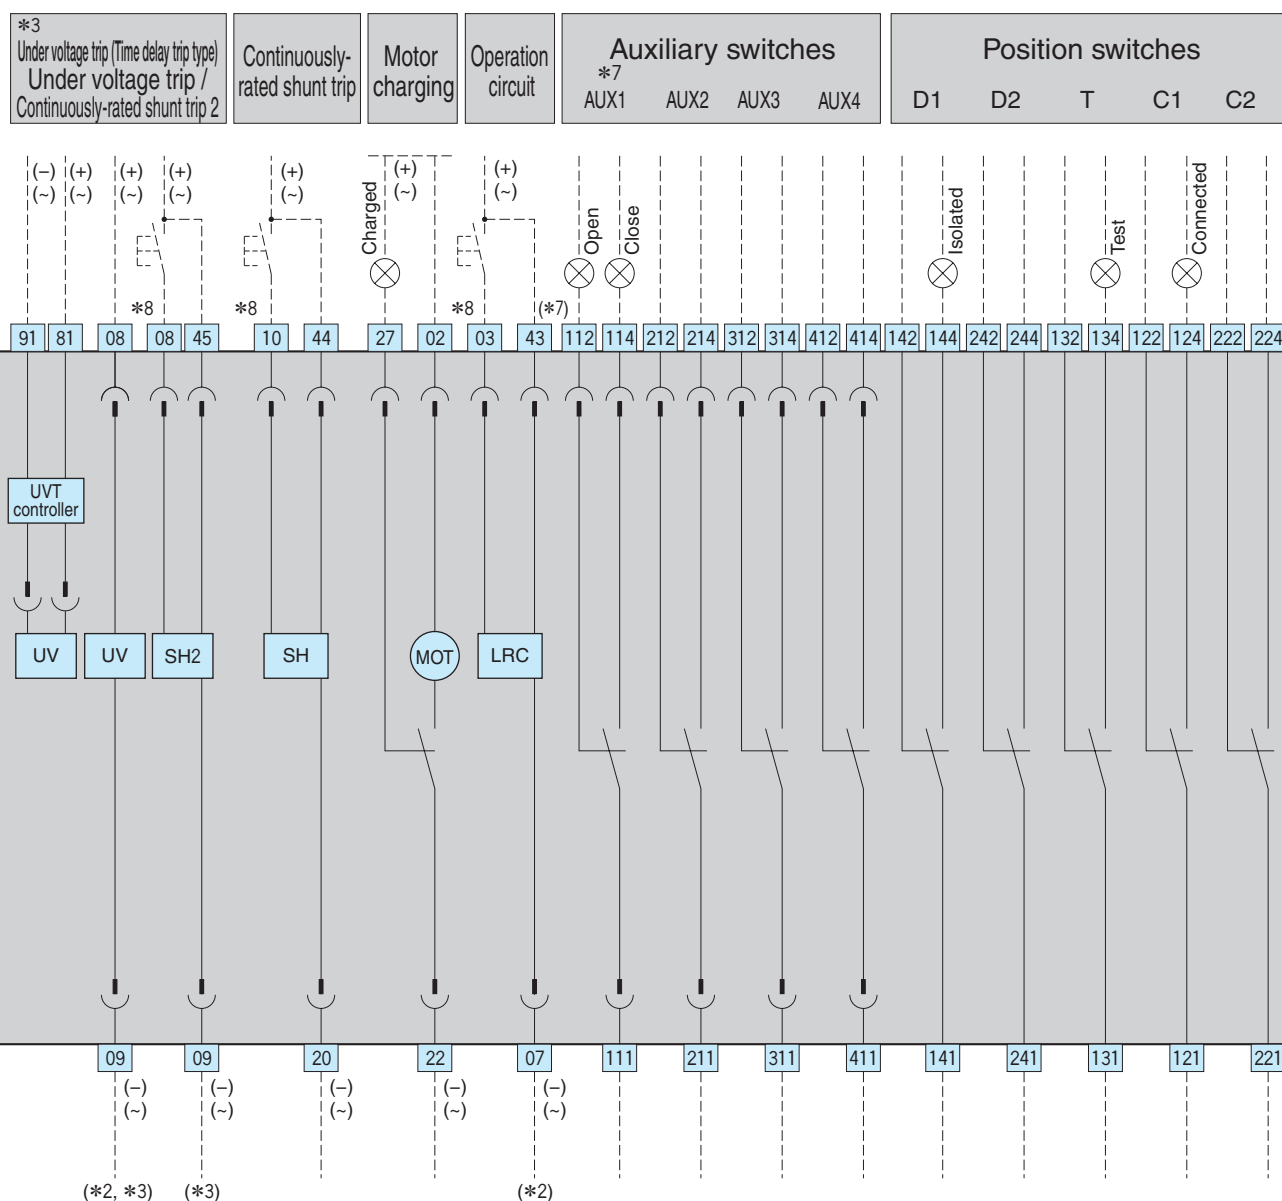

- \*1 : Neutral phase input. Supplied when installing a 3-pole ACB for a 3-phase, 4-wire system. AUX1 cannot be used in this case.
- \*2 : It takes the instantaneous type max. 0.2 sec. for the UVT coil to be adsorbed after the rated voltage is applied to the undervoltage trip device.  
The closing command should apply a closing signal of 0.2 sec. or more for the instantaneous type after the rated voltage is applied.
- \*3 : Please specify the function to be used when ordering.
- \*4 : No contact output when the reset setting dial is in "AUTO".
- \*5 : After tripping, apply 24V DC for 10ms to 60s to release the trip state.
- \*6 : Do not connect the continuously-rated shunt trip and continuously-rated shunt trip 2 terminals with the auxiliary switch terminals in series.
- \*7 : Always connect the neutral phase input to terminal 112.

## Terminal arrangement

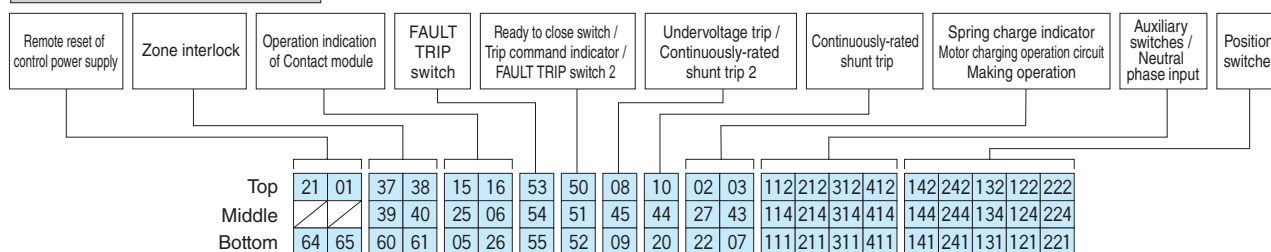

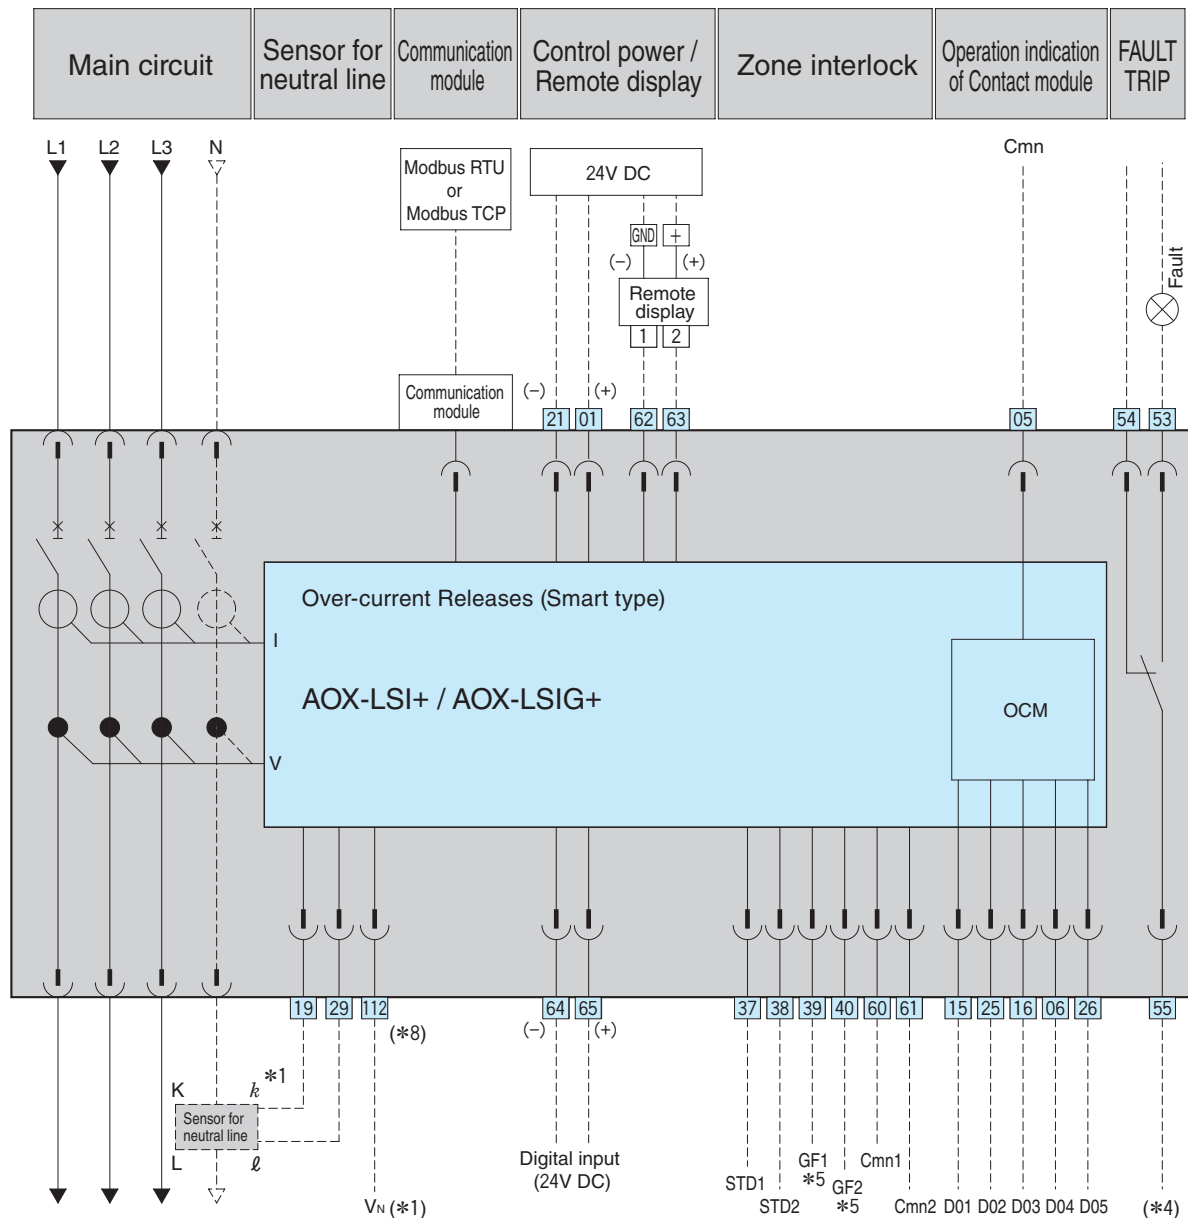

## Terminal description

01(+)	—	21(-)	Control power 24V DC
63(+)	—	62(-)	Connection of Remote display
05	—	15	Multi operation indication
05	—	25	
05	—	16	
05	—	06	
05	—	26	
19	—	29	Sensor for neutral line (Polarity : 19 -k, 29 -ℓ)
65(+)	—	64(-)	Digital input (24V DC) *6
37	—	60	Input for Zone interlock (Short time delay)
38	—	61	Output for Zone interlock (Short time delay)
39	—	60	Input for Zone interlock (Ground fault) *5
40	—	61	Output for Zone interlock (Ground fault) *5
50	—	52	FAULT TRIP switch 2
51	—	52	Trip command indicator or Ready to close switch
53	—	55	FAULT TRIP switch
08(+)	—	09(-)	Under voltage trip device (Instantaneous trip type)
81(+)	—	91(-)	Under voltage trip device (Time delay trip type)
44(+)	—	20(-)	Continuously-rated shunt trip
02(+)	—	22(-)	Motor charging operation circuit
27	—	22	Spring charge indicator
43(+)	—	07(-)	Latch release coil (LRC)

## Symbols for accessories

OCM : Contact module SHT, SHT2 : Continuously-rated shunt trip device  
 MOT : Charging motor UVT : Undervoltage trip device  
 LRC : Latch release coil ← Isolating terminal connector (Draw-out type)

\* 9 : Connecting continuously-rated shunt trip devices and operation circuits.

Ensure that the cables connecting the switch with terminals 03, 08 and 10 are 5 m or less in length, and keep them as far away as possible from power supply cables. If the cables exceed 5 m in length, or if using a AC380–480V rated voltage continuously-rated shunt trip device and latch release coil, use either of the following connection methods, as there is the risk of incorrect device operation caused by stray capacitance between cables.


- 1) Connect a relay near the ACB, and control the relay remotely.
- 2) Short-circuit the terminals as shown below.

Note that there will be an inrush current at the switch when using this connection method, so select a switch capable of handling the inrush current values in the table below.

Rated voltage (V)	Inrush current (A)
AC/DC24–30	12
AC/DC48–60	6
AC/DC100–130	4
AC/DC200–250	2
AC380–480	1


Note: 1) If using a communication module and remote command module together with a product mounted with an over-current release, connection method 2) cannot be used.  
 Note: 2) Contact TERAOKI if using the communication module + remote command module combination for a product mounted with an over-current release, in combination with an AC380–480V rated voltage continuously-rated shunt trip device and latch release coil (LRC).



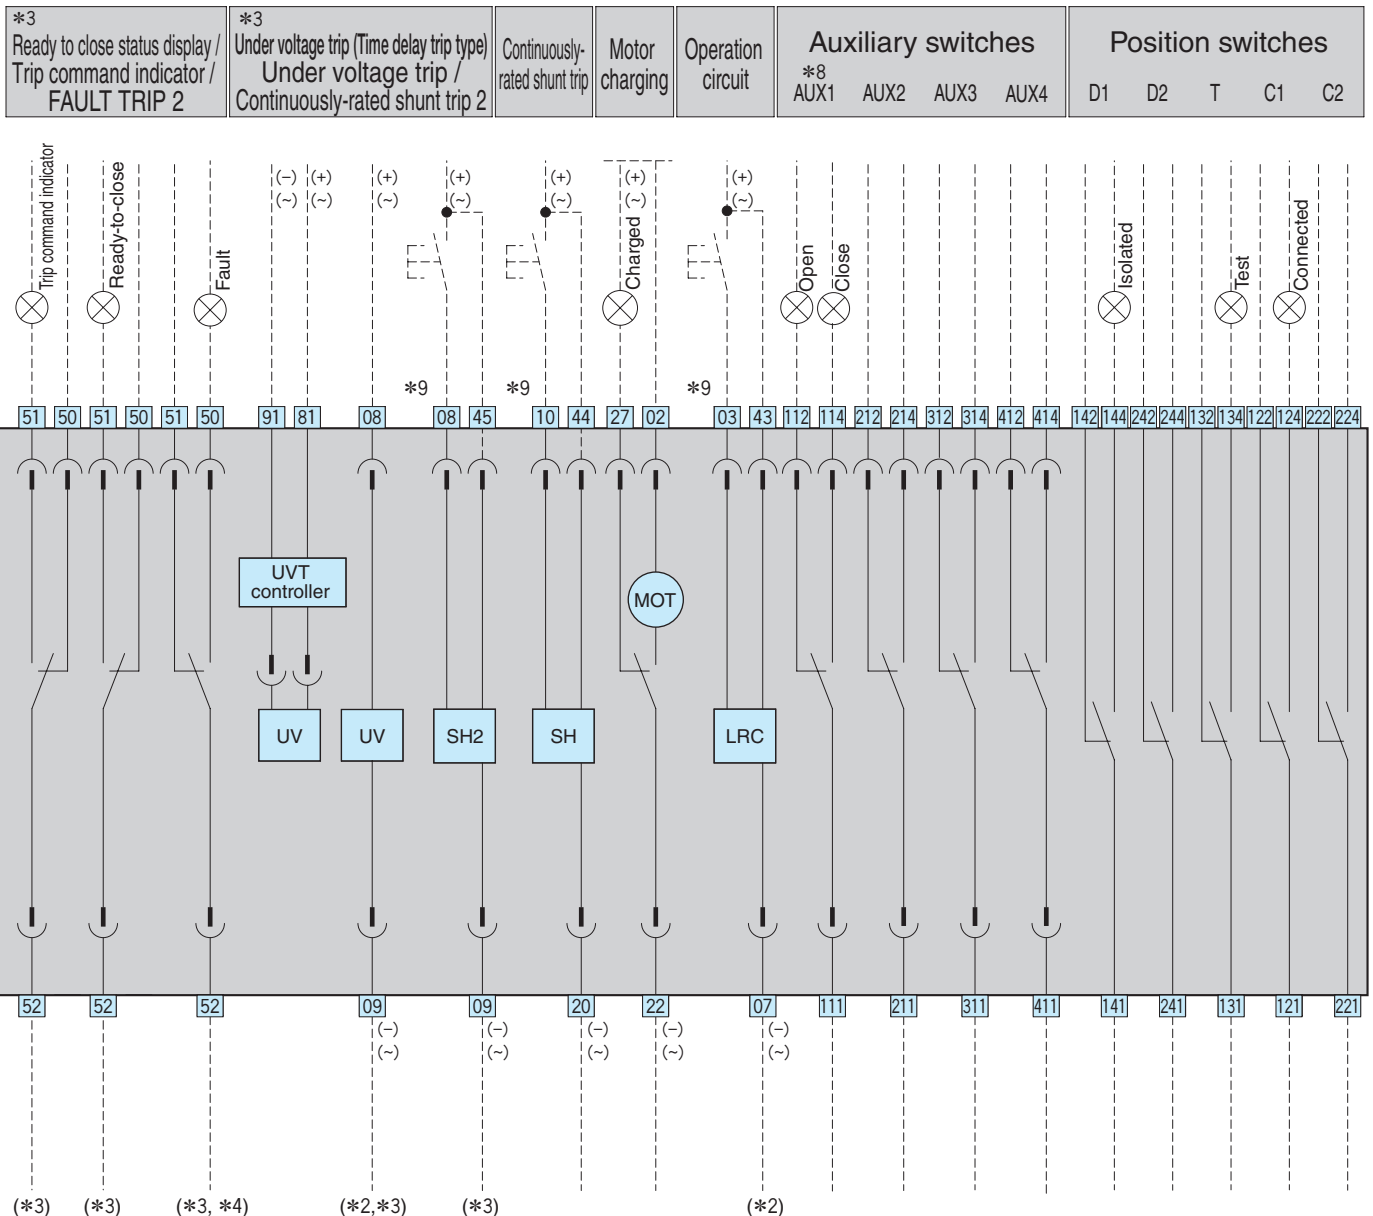

- \*1 : Neutral phase input. Connect when installing a 3-pole ACB for a 3-phase, 4-wire system. AUX1 cannot be used in this case.
- \*2 : It takes the instantaneous type max. 0.2 sec. for the UVT coil to be adsorbed after the rated voltage is applied to the undervoltage trip device. The closing command should apply a closing signal of 0.2 sec. or more for the instantaneous type after the rated voltage is applied.
- \*3 : Please specify the function to be used when ordering.
- \*4 : No contact output when the reset setting dial is in "AUTO".
- \*5 : Only supplied for the AOX-LSIG+.
- \*6 : Perform input operation selected from the following.
  - 1) Remote reset
  - 2) Tariff input
  - 3) Temporary motion restrain state switching
  - 4) Dual setting switching
- \*7 : Do not connect the continuously-rated shunt trip device and continuously-rated shunt trip device 2 terminals and auxiliary switch terminals in series.
- \*8 : Always connect the neutral phase input to terminal 112.

## Terminal arrangement

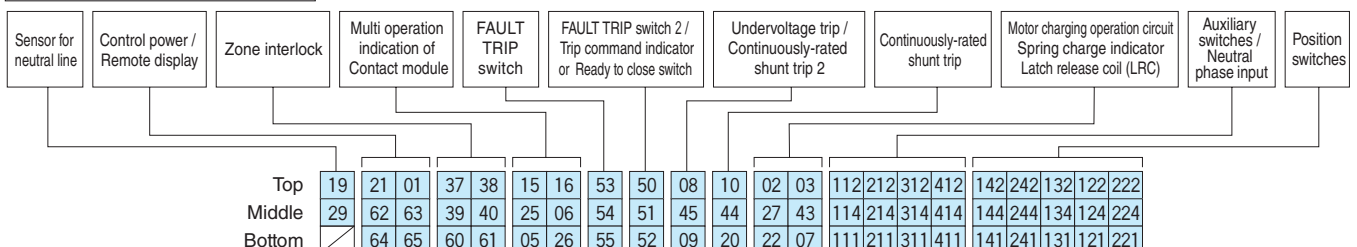

## Dielectric strength

Circuit			Withstand voltage (50/60Hz)			Impulse withstand voltage [ $U_{imp}$ ]
Main circuit			Between terminals, terminal group to earth	3500V AC	1 minute	12kV
Control circuits	Over-current release (OCR)		Terminal group to earth	2000V AC	1 minute	1.5kV
	Zone interlock		Terminal group to earth	2000V AC	1 minute	1.5kV
	Operation indication of Contact module		Terminal group to earth	2000V AC	1 minute	1.5kV
	Remote reset		Terminal group to earth	2000V AC	1 minute	1.5kV
	Digital input		Terminal group to earth	2000V AC	1 minute	1.5kV
	LRC		Terminal group to earth	2500V AC	1 minute	6kV
	Continuously-rated shunt trip device		Terminal group to earth	2500V AC	1 minute	6kV
	Undervoltage trip device (Instantaneous trip type / Time-delay type)		Terminal group to earth	2500V AC	1 minute	6kV
	FAULT TRIP switch		Terminal group to earth	2500V AC	1 minute	6kV
	Ready to close switch		Terminal group to earth	2500V AC	1 minute	6kV
	Trip command indicator		Terminal group to earth	2500V AC	1 minute	6kV
	Motor charging	380-480V AC	Terminal group to earth	2500V AC	1 minute	6kV
		Other than above	Terminal group to earth	2000V AC	1 minute	4kV
	Spring charge indicator		Terminal group to earth	2000V AC	1 minute	4kV
	Auxiliary switches 4c		Terminal group to earth	2500V AC	1 minute	8kV
	Position switches		Terminal group to earth	2500V AC	1 minute	8kV
	Neutral phase input		Terminal group to earth	2500V AC	1 minute	8kV
	Auxiliary switches 7c	Quick connection terminal	Terminal group to earth	2500V AC	1 minute	4kV
		Screw connection terminal	Terminal group to earth	2500V AC	1 minute	6kV

## Internal resistance and Power consumption

	Type	Terminal arrangements	DC internal resistance (mΩ)	Power consumption (W) (Values for 3 poles)
DRAW-OUT TYPE	AX106S	Horizontal terminals	0.039	91
	AX106H	Vertical terminals	0.039	74
	AX106D	Front connections	0.039	99
	AX108S	Horizontal terminals	0.039	127
	AX108H	Vertical terminals	0.039	120
	AX108D	Front connections	0.039	139
	AX110S	Horizontal terminals	0.039	196
	AX110H	Vertical terminals	0.039	176
	AX110D	Front connections	0.039	194
	AX112S	Horizontal terminals	0.039	318
	AX112H	Vertical terminals	0.039	266
	AX112D	Front connections	0.039	308
	AX116S	Horizontal terminals	0.039	335 ③
	AX116H	Vertical terminals	0.039	502 ④
	AX116D	Front connections	0.039	441
FIXED TYPE	AX106S	Horizontal terminals	0.024	58
	AX106H	Vertical terminals	0.024	49
	AX106D	Front connections	0.024	66
	AX108S	Horizontal terminals	0.024	100
	AX108H	Vertical terminals	0.024	75
	AX108D	Front connections	0.024	100
	AX110S	Horizontal terminals	0.024	143
	AX110H	Vertical terminals	0.024	107
	AX110D	Front connections	0.024	148
	AX112S	Horizontal terminals	0.024	185
	AX112H	Vertical terminals	0.024	180
	AX112D	Front connections	0.024	226
	AX116S	Horizontal terminals	0.024	318
	AX116H	Vertical terminals	0.024	185
	AX116D	Front connections	0.024	329
	AX120S	Vertical terminals	0.024	297
	AX120H			

① : The resistance is a general reference value. It can not be used for inspections when receiving goods.

② : The power consumptions are calculated on the basis of the DC internal resistance.

③ : Value when connecting three 80 mm wide, 5 mm thick bus bars.

④ : Value when connecting two 100 mm wide, 5 mm thick bus bars.

## Derating ①

### [DRAW-OUT TYPE]

Based Standards	Ambient temperature (°C)	Type		AX106S	AX108S	AX110S	AX112S	AX116S	
				AX106H	AX108H	AX110H	AX112H	AX116H	
				AX106D	AX108D	AX110D	AX112D	AX116D	
		Connecting bar	Sizes	W : 40mm, T : 5mm	W : 50mm, T : 5mm	W : 60mm, T : 5mm	W : 80mm, T : 5mm	W : 100mm, T : 5mm	W : 80mm, T : 5mm
			Qty.	2 pcs	2 pcs	2 pcs	2 pcs	2 pcs	3 pcs
Terminal arrangements		Available current [A]							
JIS C 8201-2-1 Ann-1, Ann-2 IEC60947-2 EN60947-2 AS/NZS IEC60947-2  ④ JIS C 8201-3 IEC60947-3	40  (Standard ambient temperature)	Horizontal terminals		630	800	1000	1250	1560	1600
		Vertical terminals		630	800	1000	1250	1600	—
		Front connections		630	800	1000	1250	1600	—
	45	Horizontal terminals		630	800	1000	1250	1490	1540
		Vertical terminals		630	800	1000	1250	1600	—
		Front connections		630	800	1000	1250	1600	—
	50	Horizontal terminals		630	800	1000	1250	1420	1470
		Vertical terminals		630	800	1000	1250	1600	—
		Front connections		630	800	1000	1250	1600	—
	55	Horizontal terminals		630	800	1000	1240	1340	1390
		Vertical terminals		630	800	1000	1250	1540	—
		Front connections		630	800	1000	1250	1580	—
	60	Horizontal terminals		630	800	1000	1170	1270	1310
		Vertical terminals		630	800	1000	1250	1460	—
		Front connections		630	800	1000	1250	1500	—

### [FIXED TYPE]

Based Standards	Ambient temperature (°C)	Type		AX106S	AX108S	AX110S	AX112S	AX116S	AX120S
				AX106H	AX108H	AX110H	AX112H	AX116H	AX120H
				AX106D	AX108D	AX110D	AX112D	AX116D	—
		Connecting bar	Sizes	W : 40mm, T : 5mm	W : 50mm, T : 5mm	W : 60mm, T : 5mm	W : 80mm, T : 5mm	W : 100mm, T : 5mm	W : 100mm, T : 5mm
			Qty.	2 pcs	2 pcs	2 pcs	2 pcs	2 pcs	3 pcs
		Terminal arrangements		Available current [A]					
JIS C 8201-2-1 Ann-1, Ann-2 IEC60947-2 EN60947-2 AS/NZS IEC60947-2  ④ JIS C 8201-3 IEC60947-3	40  (Standard ambient temperature)	Horizontal terminals		630	800	1000	1250	1600	—
		Vertical terminals		630	800	1000	1250	1600	2000
		Front connections		630	800	1000	1250	1600	—
	45	Horizontal terminals		630	800	1000	1250	1600	—
		Vertical terminals		630	800	1000	1250	1600	2000
		Front connections		630	800	1000	1250	1600	—
	50	Horizontal terminals		630	800	1000	1250	1550	—
		Vertical terminals		630	800	1000	1250	1600	2000
		Front connections		630	800	1000	1250	1600	—
	55	Horizontal terminals		630	800	1000	1250	1480	—
		Vertical terminals		630	800	1000	1250	1600	1900
		Front connections		630	800	1000	1250	1530	—
	60	Horizontal terminals		630	800	1000	1250	1400	—
		Vertical terminals		630	800	1000	1250	1600	1800
		Front connections		630	800	1000	1250	1450	—

① : Can be used with fixed type and draw-out type ACBs.

② : If the upper terminal and lower terminal types differ, contact TERASAKI for the available current value.

③ : Actual value of conductor size (cross-section area) in accordance with IEC60947 at ambient temperature 40°C and in open air.  
The values above differ depending on the structure of the switchboard.

④ : Applicable standards for AX106D, AX108D, AX110D, AX112D, and AX116D.

### Standard type for general feeder circuit (AOX-LI, AOX-LSI, AOX-LSIG)

Order number :

Units

Year

Month

Date \_\_\_\_\_

Year

Month

Date \_\_\_\_\_

provided

1 Type	<input type="checkbox"/> AX106S <input type="checkbox"/> AX108S <input type="checkbox"/> AX110S <input type="checkbox"/> AX112S <input type="checkbox"/> AX116S <input type="checkbox"/> AX120S <input type="checkbox"/> AX106H <input type="checkbox"/> AX108H <input type="checkbox"/> AX110H <input type="checkbox"/> AX112H <input type="checkbox"/> AX116H <input type="checkbox"/> AX120H
2 Number of poles	<input type="checkbox"/> 3-poles <input type="checkbox"/> 4-poles
3 Applicable main circuit voltage / Frequency	_____ V AC   _____ Hz <input type="checkbox"/> 3-phase 3-wire <input type="checkbox"/> 3-phase 4-wire
4 Applicable standard / Standard ambient temperature	Applicable standard _____ <input type="checkbox"/> 40℃ <input type="checkbox"/> 45℃
5 Types of Mounting	<input type="checkbox"/> Fixed type <input type="checkbox"/> Draw-out type <input type="checkbox"/> Standard drawout handle _____ units <input type="checkbox"/> Mal-insertion prevention device * 3 <input type="checkbox"/> Storage drawout handle _____ units <input type="checkbox"/> Position switches   Type ALX- _____ PA <input type="checkbox"/> Main circuit safety shutters   ALX- _____ PB <input type="checkbox"/> Control circuit terminal cover <input type="checkbox"/> Test jumper * 22 <input type="checkbox"/> Key lock on withdrawn position (Max. 2 can be installed) _____ units ⇒ <input type="checkbox"/> Silinder <input type="checkbox"/> KLS ( <input type="checkbox"/> CSM1Z-E22M <input type="checkbox"/> CSM1Z-E22MA) <input type="checkbox"/> RONIS ( <input type="checkbox"/> 1351 <input type="checkbox"/> 1351-1) <input type="checkbox"/> Proflux <input type="checkbox"/> KIRK <input type="checkbox"/> Lacking interlock * 2 * 20 <input type="checkbox"/> Door interlock * 1 * 2 (Hinge position of distribution board door : <input type="checkbox"/> Right side <input type="checkbox"/> Left side)
6 Operation method	Line side : <input type="checkbox"/> Horizontal terminals * 3 <input type="checkbox"/> Vertical terminals <input type="checkbox"/> Front connections * 3 <input type="checkbox"/> Conductive adapter (AZX-1 _____) * 8 Load side : <input type="checkbox"/> Horizontal terminals * 3 <input type="checkbox"/> Vertical terminals <input type="checkbox"/> Front connections * 3 <input type="checkbox"/> Conductive adapter (AZX-1 _____) * 8
7 Over-current Releases (OCR) * 16	<input type="checkbox"/> Manual charging <input type="checkbox"/> Latch release coil Operational voltage _____ V AC, _____ V DC <input type="checkbox"/> Motor charging Operational voltage _____ V AC, _____ V DC <input type="checkbox"/> Latch release coil Operational voltage _____ V AC, _____ V DC <input type="checkbox"/> AOX-LI <input type="checkbox"/> AOX-LSI <input type="checkbox"/> AOX-LSIG <input type="checkbox"/> Contact module $I_n$ : _____ A   Control power : 24V DC   Mechanical reset : <input type="checkbox"/> AUTO <input type="checkbox"/> MANUAL Long time-delay trip setting current <input type="checkbox"/> ON <input type="checkbox"/> OFF   Default setting values $[I_r](A)$ $I_{r1}$ : _____ $I_{r2}$ : _____ $I_r = (I_{r1}) \times (I_{r2}) \times (I_n)$ $I_{r1} : 1/I_{r2} : 1$ $[t_r](s)$ $t_r$ : _____ s   Time-delay at $I_r \times 600\%$ 10 Starting characteristic : <input type="checkbox"/> HOT <input type="checkbox"/> COLD * 21   COLD Short time delay trip settings (Only for LSI and LSIG) <input type="checkbox"/> ON <input type="checkbox"/> OFF   Default setting values $[I_{sd}](A)$ $I_{sd}$ : _____ $\times I_n(A)$ 6 $[t_{sd}](ms)$ $t_{sd}$ : _____ (ms)   400 Ramp characteristic $I^2t$ : <input type="checkbox"/> ON <input type="checkbox"/> OFF   OFF Zone interlock settings : <input type="checkbox"/> ON <input type="checkbox"/> OFF   OFF Instantaneous trip settings <input type="checkbox"/> ON <input type="checkbox"/> OFF   Default setting values $[I_i](A)$ $I_i$ : _____ $\times I_n(A)$ 12 (for AX120S, AX120H) 16 (Except for above) Preferential trip alarm settings <input type="checkbox"/> ON <input type="checkbox"/> OFF * 21 Default setting values $[I_p](A)$ $I_p$ : $I_r \times 80\%$ (fixed)   OFF (3pole, 3-phase, 3-wire) 1 (Except for above) $[t_p](s)$ $t_p$ : $t_r \times 50\%$ (fixed)   — Neutral protection settings <input type="checkbox"/> ON <input type="checkbox"/> OFF   Default setting values $[I_N](A)$ $I_N$ : _____ $\times I_r(A)$ — $[t_N](s)$ Link to the time-delay settings for Long-time deay trip and Short-time delay trip.   — Ground fault protection settings (Only for LSIG) <input type="checkbox"/> ON <input type="checkbox"/> OFF   Default setting values $[I_g](A)$ $I_g$ : _____ $\times I_n(A)$ 0.2 $[t_g](ms)$ $t_g$ : _____ ms   300 Ramp characteristic $I^2t$ : <input type="checkbox"/> ON <input type="checkbox"/> OFF   OFF Zone interlock settings : <input type="checkbox"/> ON <input type="checkbox"/> OFF   OFF

<p><b>8 Trip Devices</b></p>	<p><input type="checkbox"/> Continuously-rated shunt trip device _____ V AC, _____ V DC <input type="checkbox"/> Capacitor trip device</p> <p><input type="checkbox"/> Continuously-rated shunt trip device 2 _____ V AC, _____ V DC *22</p> <p><input type="checkbox"/> Undervoltage trip device (Instantaneous trip type) _____ V AC, _____ V DC</p> <p><input type="checkbox"/> Undervoltage trip device (Time delay trip type) *17 _____ V AC, _____ V DC</p>
<p><b>9 Other Accessories</b></p>	<p><input type="checkbox"/> Auxiliary switches 4c <input type="checkbox"/> General <input type="checkbox"/> Micro load</p> <p><input type="checkbox"/> Auxiliary switches 7c *4 *5 *17 *18 <input type="checkbox"/> General</p> <p><input type="checkbox"/> ON-OFF Cycle Counter</p> <p><input type="checkbox"/> Inter-pole barrier *3 *6</p> <p><input type="checkbox"/> OFF padlock lever *8</p> <p><input type="checkbox"/> Key lock (Lock-in OFF type) *9</p> <p style="padding-left: 40px;"><input type="checkbox"/> Silinder <input type="checkbox"/> KLS (<input type="checkbox"/> CSM1Z-E22M <input type="checkbox"/> CSM1Z-E22MA)</p> <p style="padding-left: 40px;"><input type="checkbox"/> RONIS (<input type="checkbox"/> 1351 <input type="checkbox"/> 1351-1) <input type="checkbox"/> Proflux <input type="checkbox"/> KIRK</p> <p><input type="checkbox"/> Mechanical interlock *10 *17 *18</p> <p style="padding-left: 40px;">(Pitch between ACBs <input type="checkbox"/> 600mm <input type="checkbox"/> 700mm <input type="checkbox"/> 800mm <input type="checkbox"/> 900mm)</p> <p><input type="checkbox"/> Ready to close switch *11</p> <p><input type="checkbox"/> FAULT TRIP switch</p> <p><input type="checkbox"/> FAULT TRIP switch 2 *12</p> <p><input type="checkbox"/> Trip command indicator *13</p> <p><input type="checkbox"/> Sensor for neutral line *19</p> <p><input type="checkbox"/> IP cover *14 *17</p> <p><input type="checkbox"/> Door flange *15 *17</p> <p style="padding-left: 40px;"><input type="checkbox"/> IP20 <input type="checkbox"/> IP31</p>
<p><b>10 Special environments</b> *22</p>	<p><input type="checkbox"/> Unnecessary</p> <p><input type="checkbox"/> Tropicalization (Fungus and moisture treatment) <input type="checkbox"/> Cold climate treatment <input type="checkbox"/> Anti-corrosion treatment</p>
<p><b>11 Spare parts</b></p>	<p><input type="checkbox"/> Unnecessary <input type="checkbox"/> Necessary (Contact TERASAKI for parts)</p>
<p><b>12 Test report</b></p>	<p><input type="checkbox"/> Japanese <input type="checkbox"/> English _____ copies</p>
<p><b>13 Others</b></p>	<p><input type="checkbox"/> OCR checker</p>

- \* 1 : Contact TERASAKI to use in combination with a door flange, IP cover, auxiliary switch 7c, undervoltage trip device (Time delay trip type), or mechanical interlock.
- \* 2 : When using a door interlock, always use a lacking interlock.
- \* 3 : Cannot be used for AX120S and AX120H.
- \* 4 : Cannot be fitted with mechanical interlock or auxiliary switch 4c.
- \* 5 : Working mechanism differs from auxiliary switch 4c, these switches work only on the connected position.
- \* 6 : Cannot be fitted with Draw-out type front connection specifications or conductive adapter.
- \* 7 : Conductive adapter can not be fitted with Inter-pole barrier.
- \* 8 : OFF padlock lever can not be fitted with Key lock (Lock in OFF).
- \* 9 : Key lock (Lock in OFF) cannot be fitted with OFF padlock.
- \* 10 : Cannot be fitted with auxiliary switch 7c.
- \* 11 : Cannot be fitted with Trip command indicator or FAULT TRIP switch2.
- \* 12 : Cannot be fitted with Ready to close switch or Trip command indicator.
- \* 13 : Cannot be fitted with Ready to close switch or FAULT TRIP switch2.
- \* 14 : Cannot be fitted with door flange.
- \* 15 : Door flange can not be fitted IP cover.
- \* 16 : For details about each setting, please refer to P.25 to P.27.
- \* 17 : Contact TERASAKI to use in combination with a door interlock.
- \* 18 : Contact TERASAKI to use in combination with a lacking interlock.
- \* 19 : Select this if using a 3-pole ACB for 3-phase 4-wire power distribution.
- \* 20 : Contact TERASAKI to use in combination with a mechanical interlock or auxiliary switch 7c.
- \* 21 : Details of settings specified in this section cannot be changed by customers.
- \* 22 : Can not be fitted with Undervoltage trip devices.
- \* 23 : Coming soon.

## Standard type for generator protection (AOX-LSIR)

Company name :

Order number :

Quantity / Delivery time request	Units	Year	Month	Date
Enter your choice in the boxes provided				
1 Type	<input type="checkbox"/> AX106S <input type="checkbox"/> AX108S <input type="checkbox"/> AX110S <input type="checkbox"/> AX112S <input type="checkbox"/> AX116S <input type="checkbox"/> AX106H <input type="checkbox"/> AX108H <input type="checkbox"/> AX110H <input type="checkbox"/> AX112H <input type="checkbox"/> AX116H			
2 Number of poles	<input type="checkbox"/> 3-poles			
3 Applicable main circuit voltage / Frequency	_____ V AC   _____ Hz <input type="checkbox"/> 3-phase 3-wire <input type="checkbox"/> 3-phase 4-wire			
4 Applicable standard / Standard ambient temperature	Applicable standard _____ <input type="checkbox"/> 40°C <input type="checkbox"/> 45°C			
5 Types of Mounting	<input type="checkbox"/> Fixed type <input type="checkbox"/> Draw-out type <input type="checkbox"/> Standard drawout handle _____ units <input type="checkbox"/> Mal-insertion prevention device <input type="checkbox"/> Storage drawout handle _____ units <input type="checkbox"/> Position switches   TypeALX-_____ PA <input type="checkbox"/> Main circuit safety shutters   ALX-_____ PB <input type="checkbox"/> Control circuit terminal cover <input type="checkbox"/> Test jumper * 22 <input type="checkbox"/> Key lock on withdrawn position (Max. 2 can be installed) _____ units ⇒ <input type="checkbox"/> Silinder <input type="checkbox"/> KLS ( <input type="checkbox"/> CSM1Z-E22M <input type="checkbox"/> CSM1Z-E22MA) <input type="checkbox"/> RONIS ( <input type="checkbox"/> 1351 <input type="checkbox"/> 1351-1) <input type="checkbox"/> Proflux <input type="checkbox"/> KIRK <input type="checkbox"/> Lacking interlock * 2 * 19 <input type="checkbox"/> Door interlock * 1 * 2 (Hinge position of distribution board door : <input type="checkbox"/> Right side <input type="checkbox"/> Left side)			
6 Operation method	Line side : <input type="checkbox"/> Horizontal terminals <input type="checkbox"/> Vertical terminals <input type="checkbox"/> Front connections <input type="checkbox"/> Conductive adapter (AZX-1 _____) * 6 Load side : <input type="checkbox"/> Horizontal terminals <input type="checkbox"/> Vertical terminals <input type="checkbox"/> Front connections <input type="checkbox"/> Conductive adapter (AZX-1 _____) * 6			
7 Over-current Releases (OCR) * 15	<input type="checkbox"/> Manual charging <input type="checkbox"/> Latch release coil Operational voltage _____ V AC, _____ V DC <input type="checkbox"/> Motor charging Operational voltage _____ V AC, _____ V DC <input type="checkbox"/> Latch release coil Operational voltage _____ V AC, _____ V DC <input type="checkbox"/> AOX-LSIR <input type="checkbox"/> Contact module $I_{gen} : \text{_____ A}$ Control power : 24V DC Long time-delay trip setting current <input type="checkbox"/> ON <input type="checkbox"/> OFF   Default setting values $I_r(A)$ $I_{r1} : \text{_____}$ $I_{r2} : \text{_____}$ $I_r = (I_{r1}) \times (I_{r2}) \times (I_{gen})$ $I_{r1} : 1.15/I_{r2} : 1$ $t_r(s)$ $t_r : \text{_____ s}$ (Time-delay at $I_r \times 120\%$ )   10 Short time delay trip settings <input type="checkbox"/> ON <input type="checkbox"/> OFF   Default setting values $I_{sd}(A)$ $I_{sd} : \text{_____} \times I_{gen}(A)$ 2.75 $t_{sd}(ms)$ $t_{sd} : \text{_____ (ms)}$ 200 Zone interlock settings : <input type="checkbox"/> ON <input type="checkbox"/> OFF   OFF Instantaneous trip settings <input type="checkbox"/> ON <input type="checkbox"/> OFF   Default setting values $I_i(A)$ $I_i : \text{_____} \times I_{gen}(A)$ 16 Preferential trip alarm settings <input type="checkbox"/> ON <input type="checkbox"/> OFF * 20   Default setting values $I_p(A)$ $I_p : \text{_____} \times I_{gen}(A)$ 95% $t_p(s)$ $t_p : \text{_____} \times t_r(s)$ 50% Settings for Reverse power protection <input type="checkbox"/> ON <input type="checkbox"/> OFF   Default setting values $P_{rp}(kW)$ $P_{rp} : \text{_____} \times P_n(kW)$ $P_n : \text{_____ (kW)}$ 4% $t_{rp}(s)$ $t_{rp} : \text{_____ s}$ (Time-delay at $P_{rp} \times 100\%$ )   5 Reverse power trip function   Normal-time power supply direction setting <input type="checkbox"/> Forward direction <input type="checkbox"/> Reverse direction   Forward direction Phase / wire system <input type="checkbox"/> 3-phase 3-wire type <input type="checkbox"/> 3-phase 4-wire type * 18   3-phase 3-wire type			

(Continued on P.81)



8 Trip Devices	<input type="checkbox"/> Continuously-rated shunt trip device _____ V AC, _____ V DC <input type="checkbox"/> Capacitor trip device <input type="checkbox"/> Continuously-rated shunt trip device 2 _____ V AC, _____ V DC * 21 <input type="checkbox"/> Undervoltage trip device (Instantaneous trip type) _____ V AC, _____ V DC <input type="checkbox"/> Undervoltage trip device (Time delay trip type) * 16 _____ V AC, _____ V DC
9 Other Accessories	<input type="checkbox"/> Auxiliary switches 4c <input type="checkbox"/> General <input type="checkbox"/> Micro load <input type="checkbox"/> Auxiliary switches 7c * 3 * 4 * 17 * 18 <input type="checkbox"/> General <input type="checkbox"/> ON-OFF Cycle Counter <input type="checkbox"/> Inter-pole barrier * 5 <input type="checkbox"/> OFF padlock lever * 7 <input type="checkbox"/> Key lock (Lock-in OFF type) * 8 <input type="checkbox"/> Silinder <input type="checkbox"/> KLS ( <input type="checkbox"/> CSM1Z-E22M <input type="checkbox"/> CSM1Z-E22MA) <input type="checkbox"/> RONIS ( <input type="checkbox"/> 1351 <input type="checkbox"/> 1351-1) <input type="checkbox"/> Proflux <input type="checkbox"/> KIRK <input type="checkbox"/> Mechanical interlock * 9 * 16 * 17 (Pitch between ACBs <input type="checkbox"/> 600mm <input type="checkbox"/> 700mm <input type="checkbox"/> 800mm <input type="checkbox"/> 900mm) <input type="checkbox"/> Ready to close switch * 10 <input type="checkbox"/> FAULT TRIP switch <input type="checkbox"/> FAULT TRIP switch 2 * 11 <input type="checkbox"/> Trip command indicator * 12 <input type="checkbox"/> Sensor for neutral line * 18 <input type="checkbox"/> IP cover * 13 * 16 <input type="checkbox"/> Door flange * 14 * 16 <input type="checkbox"/> IP20 <input type="checkbox"/> IP31
10 Special environments * 22	<input type="checkbox"/> Unnecessary <input type="checkbox"/> Tropicalization (Fungus and moisture treatment) <input type="checkbox"/> Cold climate treatment <input type="checkbox"/> Anti-corrosion treatment
11 Spare parts	<input type="checkbox"/> Unnecessary <input type="checkbox"/> Unnecessary (Contact TERASAKI for parts)
12 Test report	<input type="checkbox"/> Japanese <input type="checkbox"/> English _____ copies
13 Others	<input type="checkbox"/> OCR checker

- \*1 : Contact TERASAKI to use in combination with a door flange, IP cover, auxiliary switch 7c, undervoltage trip device (Time delay trip type), or mechanical interlock.
  - \*2 : When using a door interlock, always use a lacking interlock.
  - \*3 : Cannot be fitted with mechanical interlock or auxiliary switch 4c.
  - \*4 : Working mechanism differs from auxiliary switch 4c, these switches work only on the connected position.
  - \*5 : Cannot be fitted with Draw-out type front connection specifications or conductive adapter.
  - \*6 : Conductive adapter can not be fitted with Inter-pole barrier.
  - \*7 : OFF padlock lever can not be fitted with Key lock (Lock in OFF).
  - \*8 : Key lock (Lock in OFF) cannot be fitted with OFF padlock.
  - \*9 : Cannot be fitted with auxiliary switch 7c.
  - \*10 : Cannot be fitted with Trip command indicator or FAULT TRIP switch2.
  - \*11 : Cannot be fitted with Ready to close switch or Trip command indicator.
  - \*12 : Cannot be fitted with Ready to close switch or FAULT TRIP switch2.
  - \*13 : Cannot be fitted with door flange.
  - \*14 : Door flange can not be fitted IP cover.
  - \*15 : For details about each setting, please refer to P.28.
  - \*16 : Contact TERASAKI to use in combination with a door interlock.
  - \*17 : Contact TERASAKI to use in combination with a lacking interlock.
  - \*18 : Select this if using a 3-pole ACB for 3-phase 4-wire power distribution.
  - \*19 : Contact TERASAKI to use in combination with a mechanical interlock or auxiliary switch 7c.
  - \*20 : Details of settings specified in this section cannot be changed by customers.
  - \*21 : Can not be fitted with Undervoltage trip devices.
  - \*22 : Coming soon.



### Smart type (AOX-LSI+, AOX-LSIG+)

Company name :

Order number :

Quantity /  
Delivery time request

Units

Year

Month

Date \_\_\_\_\_

Enter your choice in the boxes provided

1 Type	<input type="checkbox"/> AX106S <input type="checkbox"/> AX108S <input type="checkbox"/> AX110S <input type="checkbox"/> AX112S <input type="checkbox"/> AX116S <input type="checkbox"/> AX106H <input type="checkbox"/> AX108H <input type="checkbox"/> AX110H <input type="checkbox"/> AX112H <input type="checkbox"/> AX116H
2 Number of poles	<input type="checkbox"/> 3-poles <input type="checkbox"/> 4-poles
3 Applicable main circuit voltage / Frequency	V AC _____ Hz <input type="checkbox"/> 3-phase 3-wire <input type="checkbox"/> 3-phase 4-wire
4 Applicable standard / Standard ambient temperature	Applicable standard _____ <input type="checkbox"/> 40°C <input type="checkbox"/> 45°C
5 Types of Mounting	<input type="checkbox"/> Fixed type <input type="checkbox"/> Draw-out type <input type="checkbox"/> Standard drawout handle _____ units <input type="checkbox"/> Mal-insertion prevention device <input type="checkbox"/> Storage drawout handle _____ units <input type="checkbox"/> Position switches   Type   ALX- _____ PA <input type="checkbox"/> Main circuit safety shutters   ALX- _____ PB <input type="checkbox"/> Control circuit terminal cover <input type="checkbox"/> Body sensor * 18 <input type="checkbox"/> Test jumper * 24 <input type="checkbox"/> Key lock on withdrawn position (Max. 2 can be installed) _____ units ⇒ <input type="checkbox"/> Silinder <input type="checkbox"/> KLS ( <input type="checkbox"/> CSM1Z-E22M <input type="checkbox"/> CSM1Z-E22MA) <input type="checkbox"/> RONIS ( <input type="checkbox"/> 1351 <input type="checkbox"/> 1351-1) <input type="checkbox"/> Proflux <input type="checkbox"/> KIRK <input type="checkbox"/> Lacking interlock * 2 <input type="checkbox"/> Door interlock * 1 * 2 (Hinge position of distribution board door : <input type="checkbox"/> Right side <input type="checkbox"/> Left side)
6 Operation method	Line side : <input type="checkbox"/> Horizontal terminals <input type="checkbox"/> Vertical terminals <input type="checkbox"/> Front connections <input type="checkbox"/> Conductive adapter (AZX-1 _____) * 7 Load side : <input type="checkbox"/> Horizontal terminals <input type="checkbox"/> Vertical terminals <input type="checkbox"/> Front connections <input type="checkbox"/> Conductive adapter (AZX-1 _____) * 7 <input type="checkbox"/> Manual charging <input type="checkbox"/> Latch release coil Operational voltage _____ V AC, _____ V DC <input type="checkbox"/> Motor charging Operational voltage _____ V AC, _____ V DC <input type="checkbox"/> Latch release coil Operational voltage _____ V AC, _____ V DC
7 Over-current Releases (OCR) * 16	<input type="checkbox"/> AOX-LSI+ <input type="checkbox"/> AOX-LSIG+ <input type="checkbox"/> Contact module Control power : 24V DC   Dual settings : <input type="checkbox"/> ON <input type="checkbox"/> OFF Long time-delay trip setting current (Setting A) <input type="checkbox"/> ON <input type="checkbox"/> OFF / (Setting B) <input type="checkbox"/> ON <input type="checkbox"/> OFF * Select (Setting B) below if dual settings is ON.   Default setting values $I_r(A)$ (Setting A) $I_r : \_\_\_\_\_\_ \times I_n(A)$ (Setting B) $I_r : \_\_\_\_\_\_ \times I_n(A)$ 1.0 $t_r(s)$ (Setting A) $t_r : \_\_\_\_\_\_ s$ (Setting B) $t_r : \_\_\_\_\_\_ s$ 10 Switching of starting characteristic : (Setting A) <input type="checkbox"/> COLD <input type="checkbox"/> HOT (Setting B) <input type="checkbox"/> COLD <input type="checkbox"/> HOT COLD Characteristic switching : (Setting A) <input type="checkbox"/> Thi <input type="checkbox"/> $I^{0.02}t(S)$ <input type="checkbox"/> $I^2t(VI)$ <input type="checkbox"/> $I^2t(EI)$ <input type="checkbox"/> $I^2t$ <input type="checkbox"/> $I^4t(HVF)$ (Setting B) <input type="checkbox"/> Thi <input type="checkbox"/> $I^{0.02}t(S)$ <input type="checkbox"/> $I^2t(VI)$ <input type="checkbox"/> $I^2t(EI)$ <input type="checkbox"/> $I^2t$ <input type="checkbox"/> $I^4t(HVF)$ Thi Short time-delay trip settings (Setting A) <input type="checkbox"/> ON <input type="checkbox"/> OFF / (Setting B) <input type="checkbox"/> ON <input type="checkbox"/> OFF * Select (Setting B) below if dual settings is ON.   Default setting values $I_{sd}(A)$ (Setting A) $I_{sd} : \_\_\_\_\_\_ \times I_n(A)$ (Setting B) $I_{sd} : \_\_\_\_\_\_ \times I_n(A)$ 6 $t_{sd}(ms)$ (Setting A) $t_{sd} : \_\_\_\_\_\_ ms$ (Setting B) $t_{sd} : \_\_\_\_\_\_ ms$ 400 Ramp characteristic $I^2t$ : (Setting A) <input type="checkbox"/> ON <input type="checkbox"/> OFF (Setting B) <input type="checkbox"/> ON <input type="checkbox"/> OFF OFF Zone interlock settings : (Setting A) <input type="checkbox"/> ON <input type="checkbox"/> OFF (Setting B) <input type="checkbox"/> ON <input type="checkbox"/> OFF OFF Instantaneous trip settings (Setting A) <input type="checkbox"/> ON <input type="checkbox"/> OFF / (Setting B) <input type="checkbox"/> ON <input type="checkbox"/> OFF * Select (Setting B) below if dual settings is ON.   Default setting values $I_i(A)$ (Setting A) $I_i : \_\_\_\_\_\_ \times I_n(A)$ (Setting B) $I_i : \_\_\_\_\_\_ \times I_n(A)$ 16 Neutral protection settings   Default setting values $I_N(A)$ $I_N : \_\_\_\_\_\_ \times I_n(A)$ OFF (3pole, 3-phase, 3-wire) 1 (Except for above) $t_N(s)$ Link to the time-delay settings for Long-time deay trip and Short-time delay trip. — Ground fault protection settings (Setting A) <input type="checkbox"/> ON <input type="checkbox"/> OFF / (Setting B) <input type="checkbox"/> ON <input type="checkbox"/> OFF * Select (Setting B) below if dual settings is ON.   Default setting values $I_g(A)$ (Setting A) $I_g : \_\_\_\_\_\_ \times I_n(A)$ (Setting B) $I_g : \_\_\_\_\_\_ \times I_n(A)$ 0.2 $t_g(s)$ (Setting A) $t_g : \_\_\_\_\_\_ ms$ (Setting B) $t_g : \_\_\_\_\_\_ ms$ 300 Ramp characteristic $I^2t$ : (Setting A) <input type="checkbox"/> ON <input type="checkbox"/> OFF (Setting B) <input type="checkbox"/> ON <input type="checkbox"/> OFF OFF Zone interlock settings : (Setting A) <input type="checkbox"/> ON <input type="checkbox"/> OFF (Setting B) <input type="checkbox"/> ON <input type="checkbox"/> OFF OFF Preferential trip alarm1 settings   Default setting values $I_{p1}(A)$ $I_{p1} : \_\_\_\_\_\_ \times I_r(A)$ 80% $t_{p1}(s)$ $t_{p1} : \_\_\_\_\_\_ \times t_r(s)$ 50% Preferential trip alarm2 settings <input type="checkbox"/> ON <input type="checkbox"/> OFF   Default setting values $I_{p2}(A)$ $I_{p2} : \_\_\_\_\_\_ \times I_r(A)$ 80% $t_{p2}(s)$ $t_{p2} : \_\_\_\_\_\_ \times t_r(s)$ 50% Measurement calculation method   Default setting values <input type="checkbox"/> Vector <input type="checkbox"/> Calculation   Vector Phase order <input type="checkbox"/> Forward direction (R phase, S phase, T phase from front left of ACB)   Forward direction <input type="checkbox"/> Reverse direction (R phase, T phase, S phase from front left of ACB) Power feed direction <input type="checkbox"/> Forward direction (power supplied from upper terminal of ACB)   Forward direction <input type="checkbox"/> Reverse direction (power supplied from lower terminal of ACB) Measurement method for power factor <input type="checkbox"/> IEC type <input type="checkbox"/> IEEE type   IEC type Demand mode <input type="checkbox"/> Fixed type <input type="checkbox"/> Slide type <input type="checkbox"/> Sync type   Fixed type Demand time _____ mins (can be set from 1 min to 60 mins in 1-minute increments)   30 minutes * Cannot be set if "Sync type" is selected for demand mode.

(Continued on P.83)

7 Over-current Releases (OCR) *16	Settings for Under voltage protection		Default setting values	
	[U <sub>uv</sub> ](V)	U <sub>uv</sub> : _____ V	100	
	[t <sub>uv</sub> ](s)	t <sub>uv</sub> : _____ s	10	
	Working mode : <input type="checkbox"/> TRIP <input type="checkbox"/> ALARM <input type="checkbox"/> OFF		OFF	
	Settings for Over voltage protection		Default setting values	
	[U <sub>ov</sub> ](V)	U <sub>ov</sub> : _____ V	725	
	[t <sub>ov</sub> ](s)	t <sub>ov</sub> : _____ s	10	
	Working mode : <input type="checkbox"/> TRIP <input type="checkbox"/> ALARM <input type="checkbox"/> OFF		OFF	
	Settings for Under frequency protection		Default setting values	
	[F <sub>uf</sub> ](Hz)	F <sub>uf</sub> : _____ Hz	45	
	[t <sub>uf</sub> ](s)	t <sub>uf</sub> : _____ s	10	
	Working mode : <input type="checkbox"/> TRIP <input type="checkbox"/> ALARM <input type="checkbox"/> OFF		OFF	
	Settings for Over frequency protection		Default setting values	
	[F <sub>of</sub> ](Hz)	F <sub>of</sub> : _____ Hz	65	
	[t <sub>of</sub> ](s)	t <sub>of</sub> : _____ s	10	
	Working mode : <input type="checkbox"/> TRIP <input type="checkbox"/> ALARM <input type="checkbox"/> OFF		OFF	
	Settings for Reverse power protection		Default setting values	
	[P <sub>rp</sub> ](kW)	P <sub>rp</sub> : _____ × P <sub>n</sub> (kW)	4%	
	[t <sub>rp</sub> ](s)	t <sub>rp</sub> : _____ s	5	
	Working mode : <input type="checkbox"/> TRIP <input type="checkbox"/> ALARM <input type="checkbox"/> OFF		OFF	
	Settings for Unbalance current protection		Default setting values	
[I <sub>unbc</sub> ](%)	I <sub>unbc</sub> : _____ %	50		
[t <sub>unbc</sub> ](s)	t <sub>unbc</sub> : _____ s	10		
Working mode : <input type="checkbox"/> TRIP <input type="checkbox"/> ALARM <input type="checkbox"/> OFF		OFF		
Settings for Unbalance voltage protection		Default setting values		
[U <sub>unbv</sub> ](%)	U <sub>unbv</sub> : _____ %	30		
[t <sub>unbv</sub> ](s)	t <sub>unbv</sub> : _____ s	10		
Working mode : <input type="checkbox"/> TRIP <input type="checkbox"/> ALARM <input type="checkbox"/> OFF		OFF		
Settings for Contact temperature monitor (Optional) *21		Default setting values		
T <sub>oh</sub> (°C)	T <sub>oh</sub> : _____ °C	155		
Working mode : <input type="checkbox"/> ALARM <input type="checkbox"/> OFF		OFF		
8 Trip Devices	<input type="checkbox"/> Continuously-rated shunt trip device _____ V AC, _____ V DC		<input type="checkbox"/> Capacitor trip device	
	<input type="checkbox"/> Continuously-rated shunt trip device 2 _____ V AC, _____ V DC *23			
	<input type="checkbox"/> Undervoltage trip device (Instantaneous trip type) _____ V AC, _____ V DC			
	<input type="checkbox"/> Undervoltage trip device (Time delay trip type) *17 _____ V AC, _____ V DC			
9 Other Accessories	<input type="checkbox"/> Auxiliary switches 4c		<input type="checkbox"/> General <input type="checkbox"/> Micro load	
	<input type="checkbox"/> Auxiliary switches 7c *4 *5 *17 *19		<input type="checkbox"/> General	
	<input type="checkbox"/> ON-OFF Cycle Counter		<input type="checkbox"/> Inter-pole barrier *3 *6	
	<input type="checkbox"/> OFF padlock lever *8			
	<input type="checkbox"/> Key lock (Lock-in OFF type) *9			
	<input type="checkbox"/> Silinder <input type="checkbox"/> KLS ( <input type="checkbox"/> CSM1Z-E22M <input type="checkbox"/> CSM1Z-E22MA)			
	<input type="checkbox"/> RONIS ( <input type="checkbox"/> 1351 <input type="checkbox"/> 1351-1) <input type="checkbox"/> Proflux <input type="checkbox"/> KIRK			
	<input type="checkbox"/> Mechanical interlock *10 *17 *19			
	(Pitch between ACBs <input type="checkbox"/> 600mm <input type="checkbox"/> 700mm <input type="checkbox"/> 800mm <input type="checkbox"/> 900mm)			
	<input type="checkbox"/> Ready to close switch *12			
	<input type="checkbox"/> FAULT TRIP switch <input type="checkbox"/> FAULT TRIP switch 2 *12			
	<input type="checkbox"/> Trip command indicator *13 <input type="checkbox"/> IP cover *14 *17		<input type="checkbox"/> Sensor for neutral line *20	
	<input type="checkbox"/> Door flange *15 *17			
	<input type="checkbox"/> IP20 <input type="checkbox"/> IP31			
	<input type="checkbox"/> Unnecessary			
	<input type="checkbox"/> Tropicalization (Fungus and moisture treatment) <input type="checkbox"/> Cold climate treatment <input type="checkbox"/> Anti-corrosion treatment			
	10 Special environments *23			
	11 Spare parts	<input type="checkbox"/> Unnecessary <input type="checkbox"/> Necessary (Contact TERASAKI for parts)		
	12 Test report	<input type="checkbox"/> Japanese <input type="checkbox"/> English    _____ copies		
	13 Others	<input type="checkbox"/> Lifter <input type="checkbox"/> Communication module : APX-1_____ <input type="checkbox"/> Remote display <input type="checkbox"/> Adapter for remote display		
		<input type="checkbox"/> OCR checker <input type="checkbox"/> Built-in battery <input type="checkbox"/> Remote command module		

- \* 1 : Contact TERASAKI to use in combination with a door flange, IP cover, auxiliary switch 7c, undervoltage trip device (Time delay trip type), or mechanical interlock.
- \* 2 : When using a door interlock, always use a lacking interlock.
- \* 3 : Thi (L characteristic) : Time settings at  $(I_r) \times 600\%$   
Other characteristic : Time settings at  $(I_r) \times 300\%$
- \* 4 : Cannot be fitted with mechanical interlock or auxiliary switch 4c.
- \* 5 : Working mechanism differs from auxiliary switch 4c, these switches work only on the connected position.
- \* 6 : Cannot be fitted with Draw-out type front connection specifications or conductive adapter.
- \* 7 : Conductive adapter can not be fitted with Inter-pole barrier.
- \* 8 : OFF padlock lever can not be fitted with Key lock (Lock in OFF).
- \* 9 : Key lock (Lock in OFF) cannot be fitted with OFF padlock.
- \* 10 : Cannot be fitted with auxiliary switch 7c.
- \* 11 : Can not be fitted with Trip command indicator or Fault trip switch2.
- \* 12 : Cannot be fitted with Ready to close switch or Trip command indicator.
- \* 13 : Cannot be fitted with Ready to close switch or Fault trip switch2.
- \* 14 : Cannot be fitted with door flange.
- \* 15 : Door flange can notbe fitted IP cover.
- \* 16 : For details about each setting, please refer to P.29 and P.30.
- \* 17 : Contact TERASAKI to use in combination with a door interlock.
- \* 18 : To use a body sensor, always also use a communication module.
- \* 19 : Contact TERASAKI to use in combination with a lacking interlock.
- \* 20 : Select this if using a 3-pole ACB for 3-phase 4-wire power distribution.
- \* 21 : Cannot be used for fixed types.
- \* 22 : Contact TERASAKI to use in combination with a mechanical interlock or auxiliary switch 7c.
- \* 23 : Can not be fitted with Undervoltage trip devices.
- \* 24 : Coming soon.

## Switch-disconnectors

Company name :

Order number :

Quantity /

Delivery time request

Units

Year

Month

Date \_\_\_\_\_

Enter your choice in the boxes provided

<b>[1] Type</b>	<input type="checkbox"/> AX106D <input type="checkbox"/> AX108D <input type="checkbox"/> AX110D <input type="checkbox"/> AX112D <input type="checkbox"/> AX116D
<b>[2] Number of poles</b>	<input type="checkbox"/> 3-poles <input type="checkbox"/> 4-poles
<b>[3] Applicable main circuit voltage / Frequency</b>	AC _____ V                  _____ Hz
<b>[4] Applicable standard / Standard ambient temperature</b>	Applicable standard _____ <input type="checkbox"/> 40℃
<b>[5] Types of Mounting</b>	<input type="checkbox"/> Fixed type <input type="checkbox"/> Draw-out type <input type="checkbox"/> Standard drawout handle_____units <input type="checkbox"/> Mal-insertion prevention device <input type="checkbox"/> Strage drawout handle_____units <input type="checkbox"/> Position switch Type ALX-_____PA <input type="checkbox"/> Main circuit safety shutters    ALX-_____PB <input type="checkbox"/> Control circuit terminal cover <input type="checkbox"/> Test jumper * 18 <input type="checkbox"/> Key lock on withdrawn position (Max. 2 can be installed) _____ units ⇒ <input type="checkbox"/> Silinder <input type="checkbox"/> KLS ( <input type="checkbox"/> CSM1Z-E22M <input type="checkbox"/> CSM1Z-E22MA) <input type="checkbox"/> RONIS ( <input type="checkbox"/> 1351 <input type="checkbox"/> 1351-1) <input type="checkbox"/> Proflux <input type="checkbox"/> KIRK <input type="checkbox"/> Lacking interlock * 2 * 16 <input type="checkbox"/> Door interlock * 1 * 2 (Hinge position of distribution board door : <input type="checkbox"/> Right side <input type="checkbox"/> Left side)
<b>[6] Operation method</b>	Line side : <input type="checkbox"/> Horizontal terminals <input type="checkbox"/> Vertical terminals <input type="checkbox"/> Front connections <input type="checkbox"/> Conductive adapter (AZX-1_____) * 6 Load side : <input type="checkbox"/> Horizontal terminals <input type="checkbox"/> Vertical terminals <input type="checkbox"/> Front connections <input type="checkbox"/> Conductive adapter (AZX-1_____) * 6
<b>[7] Trip Devices</b>	<input type="checkbox"/> Manual charging <input type="checkbox"/> Latch release coil Operational voltage _____V AC,    _____V DC <input type="checkbox"/> Motor charging Operational voltage _____V AC,    _____V DC <input type="checkbox"/> Latch release coil Operational voltage _____V AC,    _____V DC <input type="checkbox"/> Continuously-rated shunt trip device    AC_____V,    DC_____V <input type="checkbox"/> Continuously-rated shunt trip device2    AC_____V,    DC_____V <input type="checkbox"/> Undervoltage trip device (Instantaneous trip type)    AC_____V,    DC_____V <input type="checkbox"/> Undervoltage trip device (Time delay trip type) * 16    AC_____V,    DC_____V
<b>[8] Other Accessories</b>	<input type="checkbox"/> Auxiliary switch 4c <input type="checkbox"/> General <input type="checkbox"/> Micro load <input type="checkbox"/> Auxiliary switch 7c * 3 * 4 * 14 * 15 <input type="checkbox"/> General <input type="checkbox"/> ON-OFF Cycle Counter <input type="checkbox"/> Inter-pole barrier * 5 <input type="checkbox"/> OFF padlock lever * 7 <input type="checkbox"/> Key lock (Lck-in OFF type) * 9 <input type="checkbox"/> Silinder <input type="checkbox"/> KLS ( <input type="checkbox"/> CSM1Z-E22M <input type="checkbox"/> CSM1Z-E22MA) <input type="checkbox"/> RONIS ( <input type="checkbox"/> 1351 <input type="checkbox"/> 1351-1) <input type="checkbox"/> Proflux <input type="checkbox"/> KIRK <input type="checkbox"/> Mechanical interlock * 9 * 13 * 15 <input type="checkbox"/> Ready to close switch * 10 <input type="checkbox"/> Trip command indicator    * 13 <input type="checkbox"/> IP cover    * 12 * 14 <input type="checkbox"/> Door flange * 13 * 14 <input type="checkbox"/> IP20 <input type="checkbox"/> IP31
<b>[9] Special environments * 18</b>	<input type="checkbox"/> Unnecessary <input type="checkbox"/> Tropicalization(Fungus and moisture treatment) <input type="checkbox"/> Cold climate treatment <input type="checkbox"/> Anti-corrosion treatment
<b>[10] Spare parts</b>	<input type="checkbox"/> Unnecessary <input type="checkbox"/> Necessary (Contact TERASAKI for parts)
<b>[11] Test report</b>	<input type="checkbox"/> Japanese <input type="checkbox"/> English    _____ copies

- \*1 : Contact TERASAKI to use in combination with a door flange, IP cover, Auxiliary switch 7c, Undervoltage trip device (Time delay trip type), or mechanical interlock.
- \*2 : When using a door interlock, always use a lacking interlock.
- \*3 : Can not be fitted with mechanical interlock or auxiliary switch 4c.
- \*4 : Working mechanism differs from auxiliary switch 4c, these switches work only on the connected position.
- \*5 : Can not be fitted with Draw-out type front connection specifications or conductive adopter.
- \*6 : Conductive adopter can not be fitted with Inter-pole barrier.
- \*7 : OFF padlock lever can not be fitted with Key lock (Lock in OFF).
- \*8 : Key lock (Lock in OFF) can not be fitted with OFF padlock.

- \*9 : Can not be fitted with auxiliary switch 7c.
- \*10 : Can not be fitted with Trip command indicator.
- \*11 : Can not be fitted with Ready to close switch.
- \*12 : Can not be fitted with door flange.
- \*13 : Door flange can not be fitted with IP cover.
- \*14 : Contact TERASAKI to use in combination with a door interlock.
- \*15 : Contact TERASAKI to use in combination with a lacking interlock.
- \*16 : Contact TERASAKI to use in combination with a mechanical interlock.
- \*17 : Can not be fitted with Undervoltage trip devices.
- \*18 : Coming soon.





**TERASAKI ELECTRIC (EUROPE) LTD.**  
**FILIAL SVERIGE**  
**(Sweden)**



**TERASAKI ELECTRIC (EUROPE) LTD.**  
**(United Kingdom)**



**TERASAKI ELECTRIC (EUROPE) LTD.**  
**SUCURSAL EN ESPAÑA**  
**(Spain)**



**TERASAKI ELECTRIC (EUROPE) LTD.**  
**FILIALE ITALIA**  
**(Italy)**

# TERASAKI Global Network



**TERASAKI ELECTRIC CO., LTD.**  
**(Head Quarters, Japan)**



**TERASAKI ELECTRIC**  
**(M) SDN. BHD.**  
**(Malaysia)**



**TERASAKI CIRCUIT**  
**BREAKERS (S) PTE. LTD.**  
**TERASAKI ELECTRIC CO.,**  
**(FAR EAST) PTE. LTD.**  
**(Singapore)**



**TERASAKI DO BRASIL LTDA.**  
**(Brazil)**



**TERASAKI ELECTRIC**  
**(SHANGHAI) CO., LTD.**  
**(China)**



**TERASAKI ELECTRIC**  
**(CHINA) LTD.**  
**(China)**

Since 1971 when we established TERASAKI ELECTRIC Europe, our first overseas subsidiary, in the UK, we have assembled a global network of 10 overseas subsidiaries and 72 agents to provide sales and technical supports to customers worldwide.

## Safety Notice

Carefully read instruction manual to ensure proper installation, connection, operation, handling and maintenance of the product.

## **TERASAKI ELECTRIC CO., LTD.**

Head Office: 6-13-47 Kamihigashi, Hirano-ku, Osaka 547-0002, Japan

Circuit Breaker Division: 6-13-47 Kamihigashi, Hirano-ku, Osaka 547-0002, Japan

TEL +81-6-6791-2763

FAX +81-6-6791-2732

int-sales@terasaki.co.jp

<https://www.terasaki.co.jp/>